Smart Professional Surveillance System User’s Manual

Version 1.12.1

Table of Contents

1. OVERVIEW AND ENVIRONMENT 1

1.1 Overview 1

1.2 Performance 1

1.3 Environments 1

2. INSTALLATION AND UPGRADE 2

2.1 Installation 2

2.2 Un-installation 5

3. SETTING 7

3.1 Login Interface 7

3.2 Main Interface 7

3.3 General 8

3.3.1 Basic 9

3.3.2 File Path 10

3.3.3 Alarm Prompt 11

3.3.4 Version 12

3.4 Account 12

3.4.1 Add role 12

3.4.2 Add user 14

3.5 Device Manager 15

3.6 Device CFG 21

3.6.1 General 21

3.6.1.1 Network 22

3.6.1.2 Remote 29

3.6.1.3 Encode 31

3.6.1.4 Image 34

3.6.1.5 PTZ Control 34

3.6.2 Event 35

3.6.2.1 Video Detect 35

3.6.2.2 Alarm 39

3.6.2.3 Abnormality 43

3.6.2.4 Smart Config 46

3.6.3 Record/Storage 50

3.6.3.1 Schedule 50
3.6.3.2 Disk 52
3.6.4 Maintenance 53
3.6.4.1 Account 53
3.6.4.2 Maintenance 56
3.6.4.3 WEB 61

3.7 Alarm Setup 62
3.7.1 Set Alarm Scheme 62
3.7.2 Enable/Disable/Export Scheme 66

3.8 Video Wall Configuration 66

3.9 Tour &Task 70

3.10 PC-NVR 73

4. BASIC OPERATION 78

4.1 Liveview 78
4.1.1 Real-time Liveview 78
4.1.2 Record 81
4.1.3 Snapshot 81
4.1.4 Smart Alarm 82
4.1.5 PTZ 87
4.1.5.1 Preset 89
4.1.5.2 Tour 89
4.1.5.3 Pan 90
4.1.5.4 Scan 90
4.1.5.5 Pattern 90
4.1.5.6 Aux 91

4.2 Playback 91
4.2.1 Playback Device Record 92
4.2.2 Playback Local Record 96
4.2.3 Export 96

4.3 Alarm Manager 97

4.4 Log 98

5. EXTENSION 101

5.1 Video Wall 101

5.2 E-map 102
5.2.1 Add E-map 103
5.2.2 Edit E-map 104

5.2.3 Liveview E-map 106

5.3 Device Display&Control 106

Welcome

Thank you for using our Smart Professional Surveillance System (SmartPSS)!
This user's manual is designed to be a reference tool for operation of your system.
Here you can find detailed operation information about SmartPSS.

1. Overview and Environment

1.1 Overview

SmartPSS is an abbreviation for Smart Professional Surveillance System.
The software is to manage small quantity security surveillance devices. It releases with the device and does not support the products from other manufacturers. It has the following features:

- View real-time video of several camera channels.
- View the playback video files from various cameras.
- Support multiple scheduled arms to realize auto PC guard.
- Support e-map; you can clearly view and manage all device locations.
- Video wall plan setup and can output video wall video at the same time.
- Support extension applications, can send out alarm information to external programs.

1.2 Performance

- System max supports 36-channel at CIF resolution.
- Each storage server max supports to save 32-channel video

1.3 Environments

Item	Requirements
OS	Windows 7/ Windows 8/ Mac (SmartPSS Mac version).
CPU	2.4GHz or higher.
Display card	Independent car and support directX 8.0c or higher.
Memory	1GB or higher.
Displayer Resolution	1024×768 or higher.

2. Installation and Upgrade

2.1 Installation

- Double click “General_Smart-PSS_Eng_IS_VX.XX.X.exe” to begin installation. See Figure 2-1.

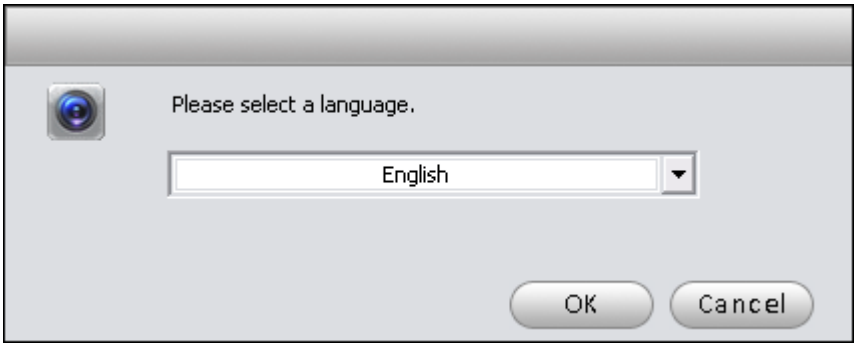

Figure 2-1

- Select installation language from the dropdown list and then click OK button to go to Welcome interface. See Figure 2-2.

Welcome to use SmartPSS Operator Installation
Wholly new, flexible realtime preview with abundant functions
--Shining new tool bar, various functions, clear interface
--Multiple customized window layouts suitable for more surveillance environments
--operation with view interfaces and groups
Playback interface based on user experiences
--Simple and reasonable search steps, fluent operation
--Exported record files support clip operation while viewing, natural and fluent operation
--Combination of various search modes, meets various user experiences
Local storage, PC-NVR
--Total storage solutions, enhance product quality
--Easily to create a record plan, what you see is what you get
New tour settings, new alarm configuration, new...
--Quick and accurately create tour tasks based on the monitor
--New scheme setting interface, orientation configuration, easy and clear to use the function
Next
Cancel

Figure 2-2

- Click next button, you can see an interface is shown as in Figure 2-3. Here you can view End User License Agreement.

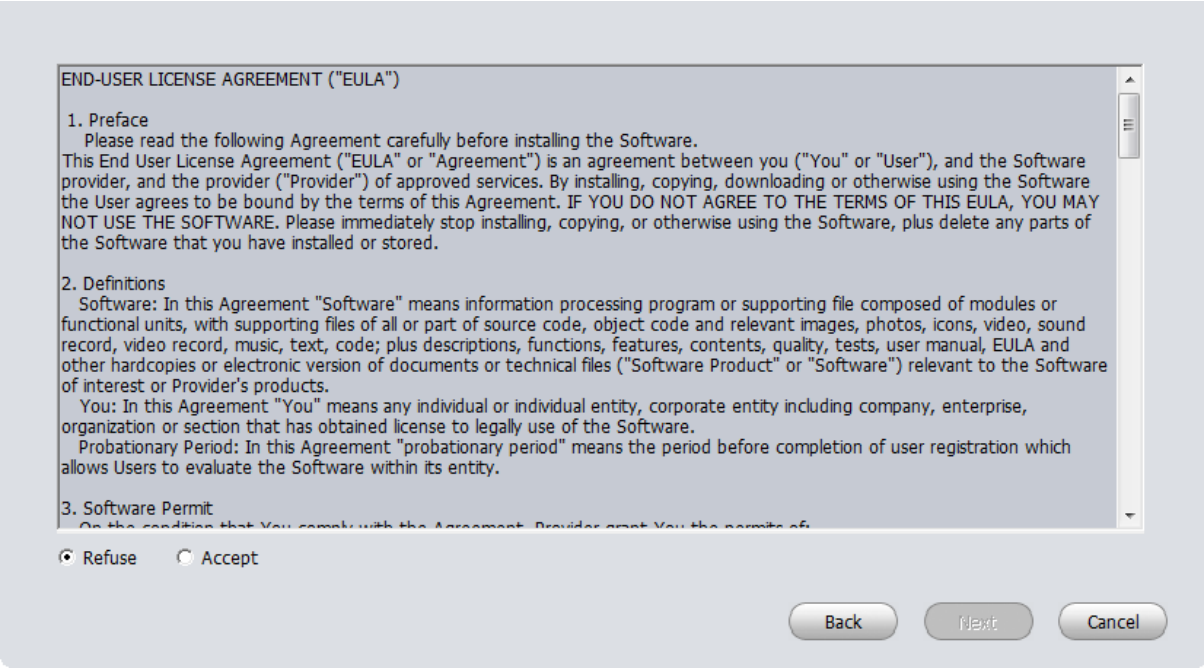
END-USER LICENSE AGREEMENT ("EULA")
1. Preface
Please read the following Agreement carefully before installing the Software.
This End User License Agreement ("EULA" or "Agreement") is an agreement between you ("You" or "User"), and the Software provider, and the provider ("Provider") of approved services. By installing, copying, downloading or otherwise using the Software the User agrees to be bound by the terms of this Agreement. IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MAY NOT USE THE SOFTWARE. Please immediately stop installing, copying, or otherwise using the Software, plus delete any parts of the Software that you have installed or stored.
2. Definitions
Software: In this Agreement "Software" means information processing program or supporting file composed of modules or functional units, with supporting files of all or part of source code, object code and relevant images, photos, icons, video, sound record, video record, music, text, code; plus descriptions, functions, features, contents, quality, tests, user manual, EULA and other hardcopies or electronic version of documents or technical files ("Software Product" or "Software") relevant to the Software of interest or Provider's products.
You: In this Agreement "You" means any individual or individual entity, corporate entity including company, enterprise, organization or section that has obtained license to legally use of the Software.
Probationary Period: In this Agreement "probationary period" means the period before completion of user registration which allows Users to evaluate the Software within its entity.
3. Software Permit
Refuse
Accept
Back
Next
Cancel

Figure 2-3

- Please check the Accept item and then click Next button to continue. System pops up module installation dialogue box. See Figure 2-4.

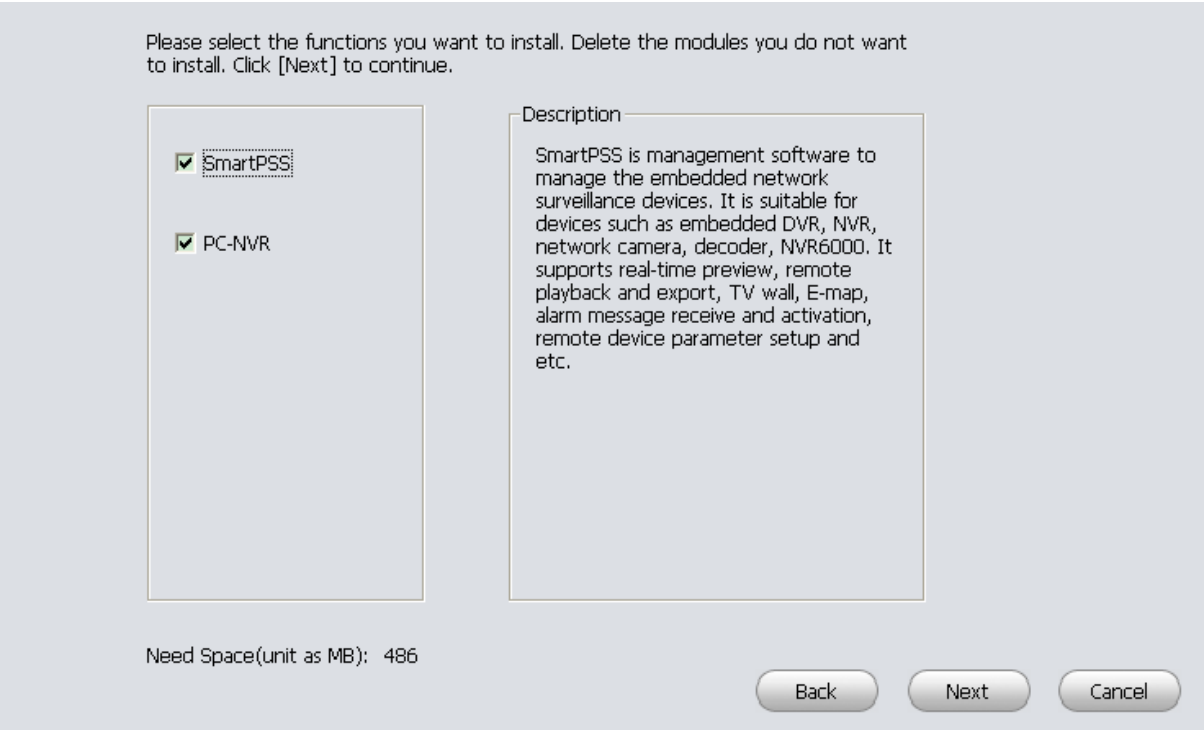
Please select the functions you want to install. Delete the modules you do not want to install. Click [Next] to continue.
SmartPSS
PC-NVR
Description
SmartPSS is management software to manage the embedded network surveillance devices. It is suitable for devices such as embedded DVR, NVR, network camera, decoder, NVR6000. It supports real-time preview, remote playback and export, TV wall, E-map, alarm message receive and activation, remote device parameter setup and etc.
Need Space(unit as MB): 486
Back
Next
Cancel

Figure 2-4

- Check SmartPSS item and then click Next button, you can see there is an interface asking you to specify installation path. See Figure 2-5.

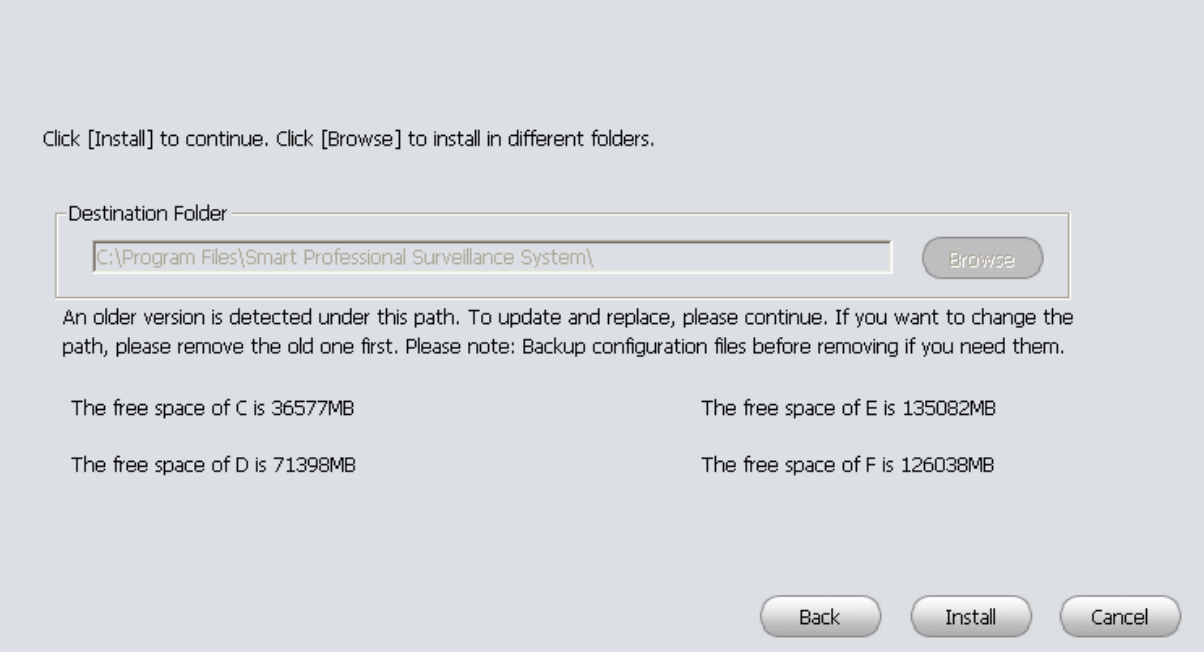
Click [Install] to continue. Click [Browse] to install in different folders.
Destination Folder
C:\Program Files\Smart Professional Surveillance System\
Browse
An older version is detected under this path. To update and replace, please continue. If you want to change the path, please remove the old one first. Please note: Backup configuration files before removing if you need them.
The free space of C is 36577MB
The free space of E is 135082MB
The free space of D is 71398MB
The free space of F is 126038MB
Back
Install
Cancel

Figure 2-5

- After you select installation path click Next button, system begins installation. The interface is shown as in Figure 2-6.

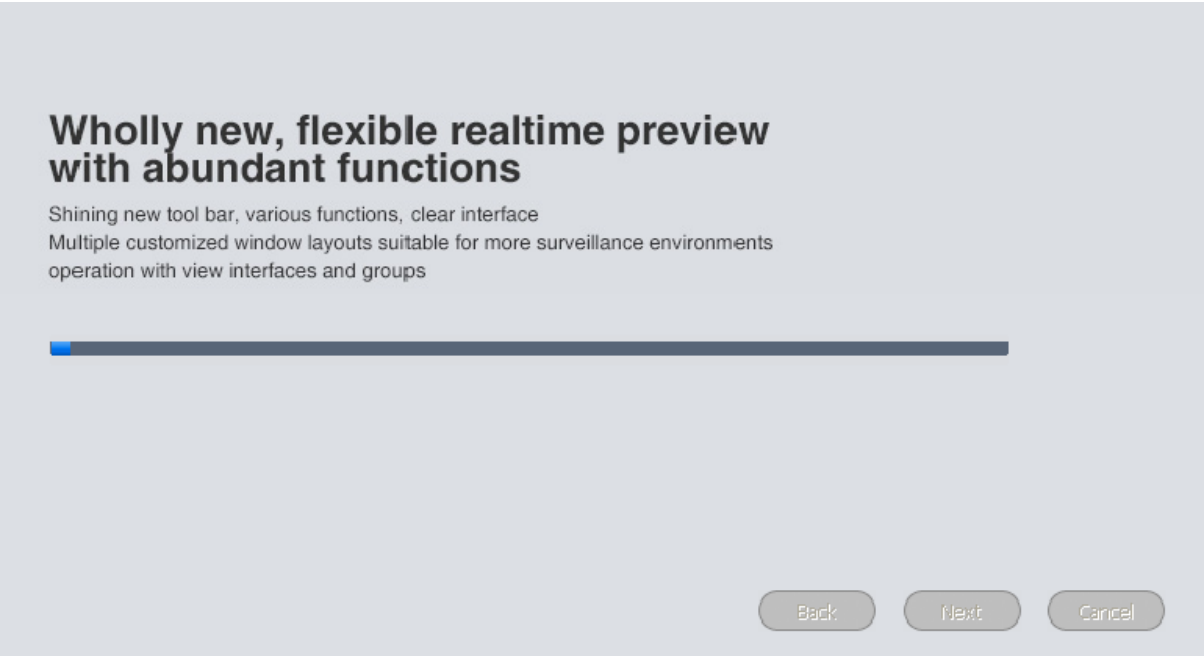
Wholly new, flexible realtime preview with abundant functions
Shining new tool bar, various functions, clear interface
Multiple customized window layouts suitable for more surveillance environments
operation with view interfaces and groups
Back
Next
Cancel

Figure 2-6

- During the installation process, you can click Cancel button to exit. After installation, you can see an interface is shown as below. See Figure 2-7.

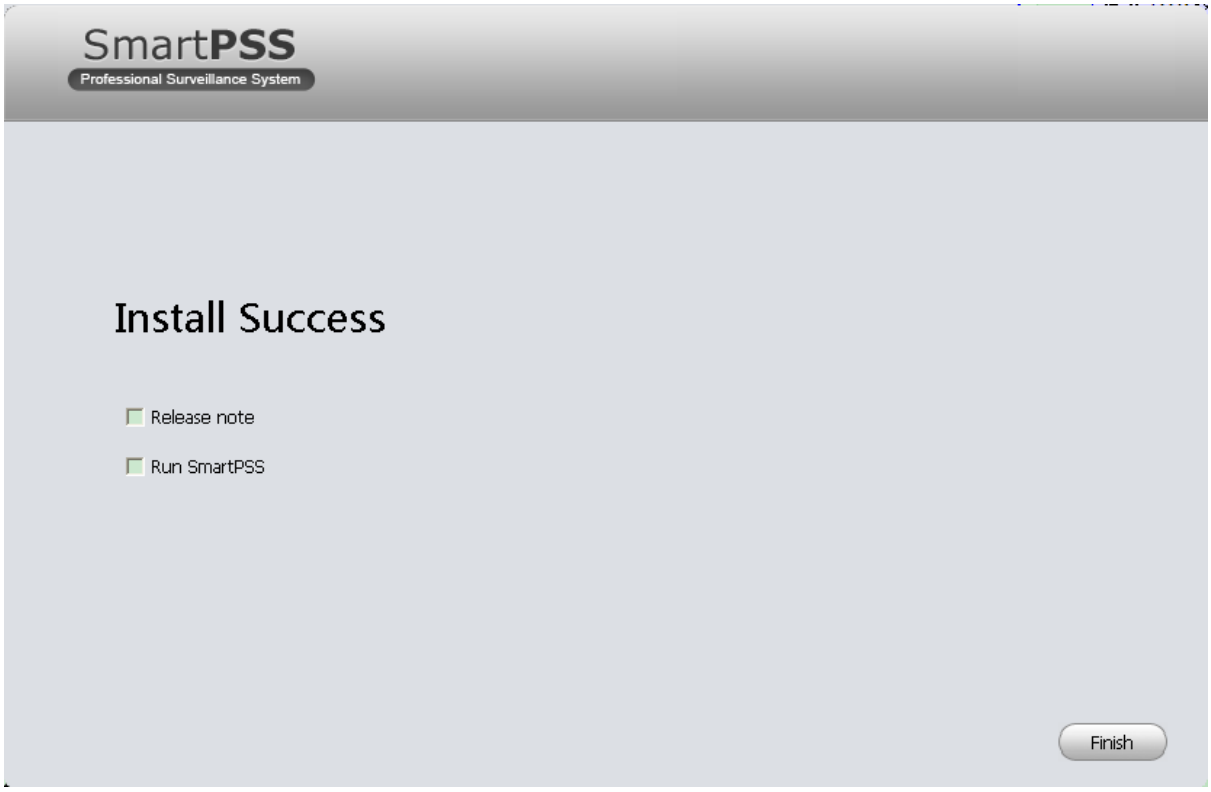

Figure 2-7

- Click Finish button, you can complete the installation.

2.2 Un-installation

1) From Start -> All programs->SmartPSS, select Uninstall SmartPSS item. System pops up the following dialogue box. See Figure 2-8.

Uninstall SmartPSS
It will uninstall,if current applications are running now, please close it before you uninstall! Otherwise, click [Next] to uninstall.
Next
Cancel

Figure 2-8

2) Click Next button, you can see an interface shown as in Figure 2-9.
3) Check the box here to remove SmartPSS. You can check the box to remove PC-NVR too. Click Uninstall button to remove.

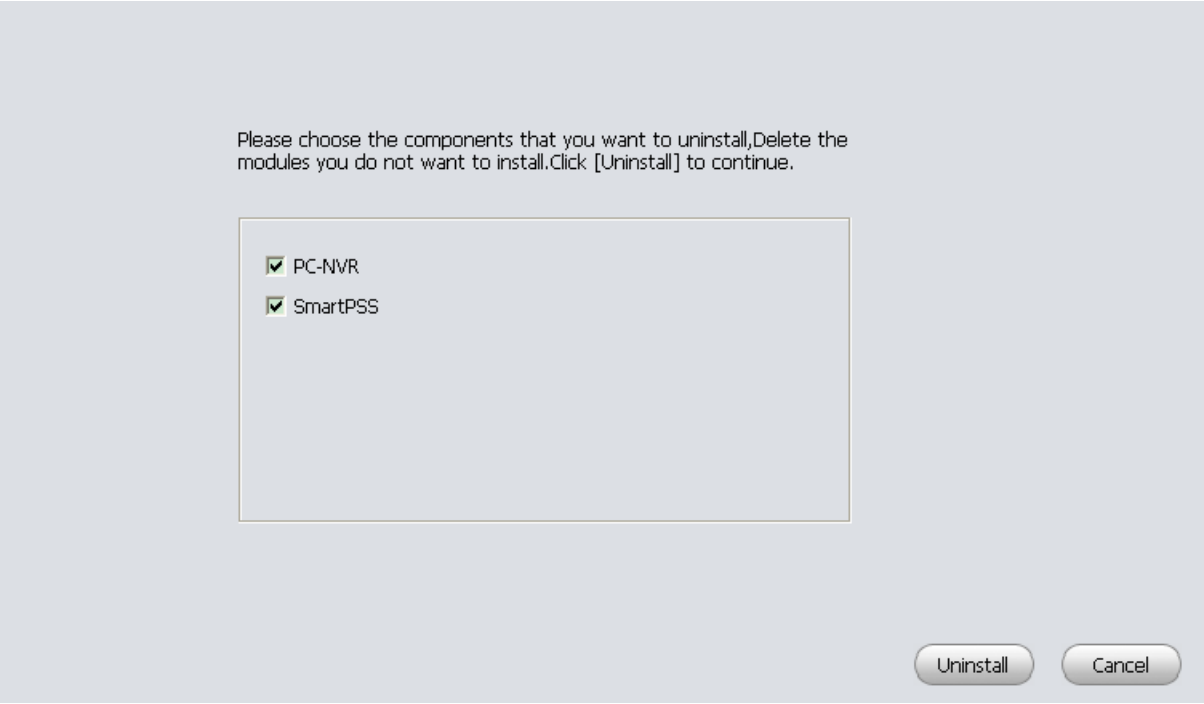
Please choose the components that you want to uninstall,Delete the modules you do not want to install.Click [Uninstall] to continue.
PC-NVR
SmartPSS
Uninstall
Cancel

Figure 2-9

3. Setting

Double click SmartPSS icon

, you can go to the login interface.

3.1 Login Interface

Login interface is shown as in Figure 3-1.

- User name: Input the user account
- Password: Please input corresponding password to log in.
- OK: Click this button, system can verify the account and then enter the software main interface. (First time login shows device interface.)
- Cancel: Click this button to exit login interface.

Note:

- If it is your first time to run the SmartPSS program, default user name is **admin** and its password is **admin** too. Admin is a super administrator and can not be removed. It can add, modify or delete other user.
- For security reason, please modify your password after first log in.
- You can memory your password, so that when you can log in the next time, you do not need to input user name and password. Please note this function is for your convenient only. **Do not** enable this function in public PC.

Figure 3-1

3.2 Main Interface

Click Login button, system begins verifying user name and password and then go to the main interface. See Figure 3-2.

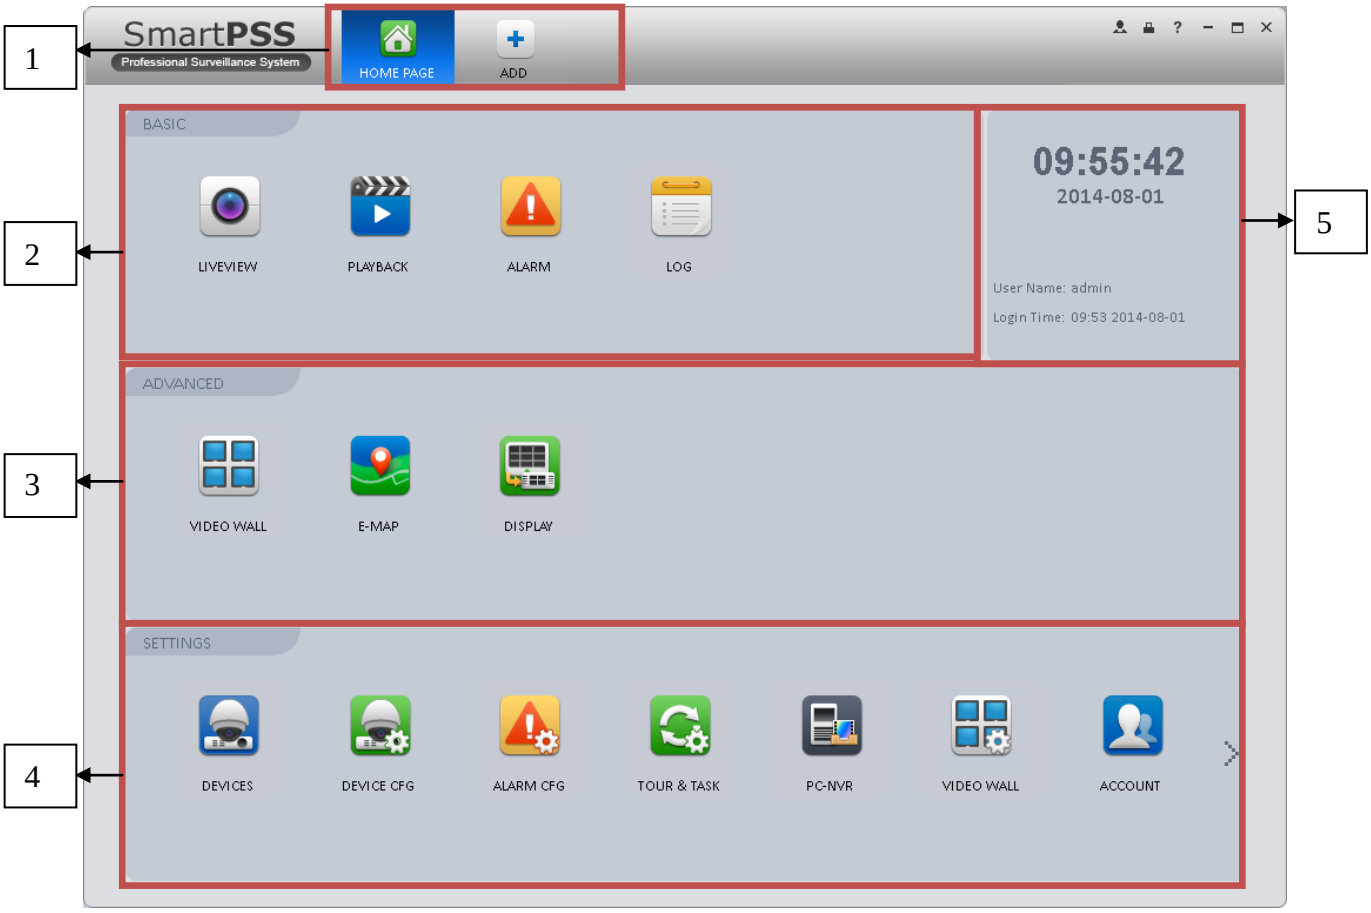

Figure 3-2

Please refer to the following sheet for detailed information.

SN	Parameter	Function
1	Menu	Here you can view main page icons and current open function icon. Click add button to add a function icon on the top pane.
2	Basic	It includes live view, playback, alarm manager, and log.
3	Extension	It includes video wall, e-map, and display.
4	Settings	It includes devices manager, signals manager, alarm setup, tour and task, PC-NVR, video wall management, account, general setup and etc.
5	SmartPSS basic information	It is to display current time, username, login time.

3.3 General

If it is your first time to login the SmartPSS, you need to set system parameter. It includes network performance, log save time, login SmartPSS or not, picture and record saved path. Please follow the steps listed below.

Click the button; you can go to the general interface. See Figure 3-3.

3.3.1 Basic

It is to set capability, language, time and etc.

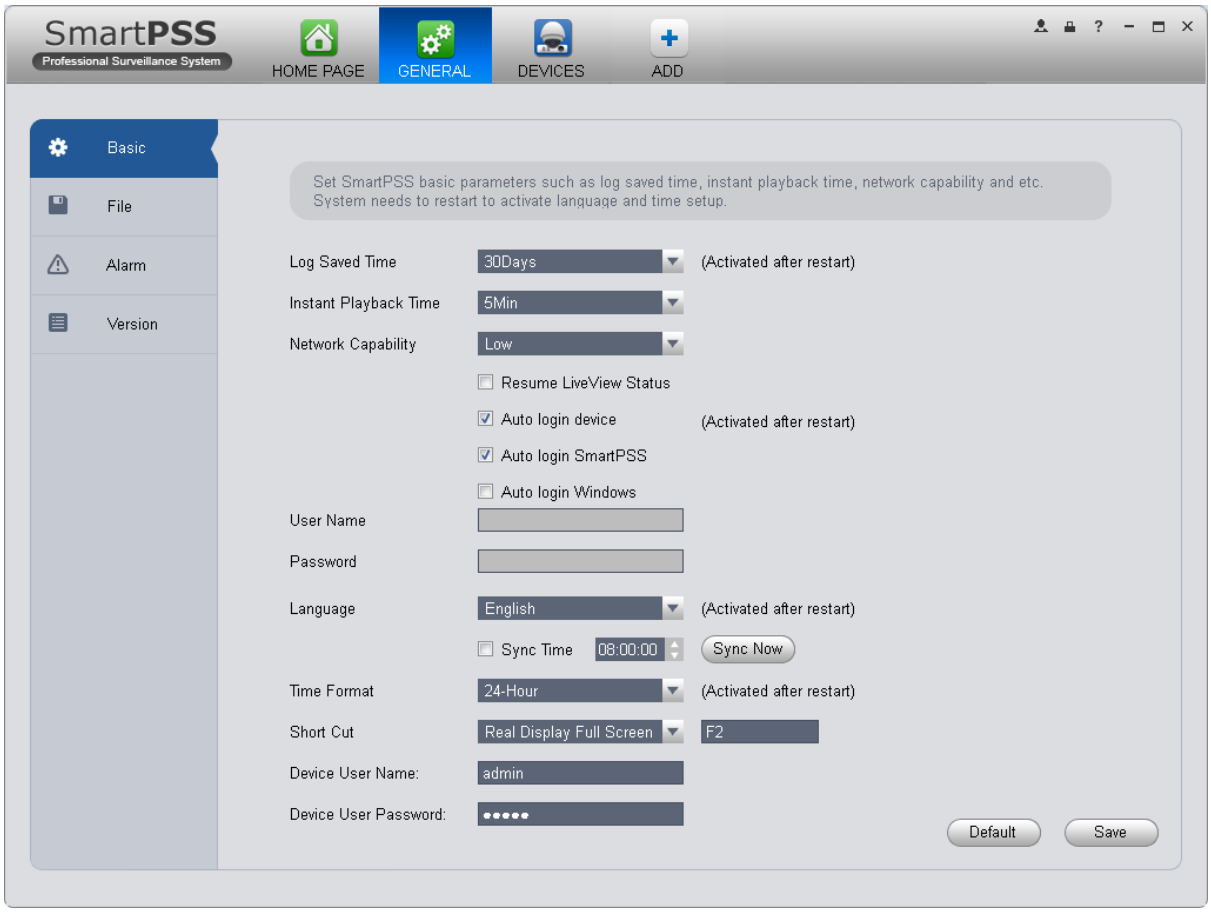

Figure 3-3

Please refer to the following sheet for detailed information.

Item	Function
Log Saved Time	Here you can set log save time. System automatically overwrites old files once it reaches the period you set here.
Instant Playback Time	It is to set instant playback time. If you set 5 minutes, then it plays video starting 5 minutes prior to current time.
Network capability	It is for you to set network function. It includes: “Low”, “10M”, ”100M”, ”1000M”.
Resume Previous State	System restores previous liveview status after it restarts.
Auto login device	When program start up, auto login existing device or not. If you select this parameter, then at next login, it auto logs in existing device.

Item	Function
Auto login SmartPSS	Check the box here, you can login SmartPSS directly without inputting user name and password.
Auto login Windows	Check the box here and then input user name and password, you can go to the Windows OS after the computer restarts.
Language	Software language.
Sync time	Check the box here to enable time synchronization function and then input synchronization time. SmartPSS can auto synchronize time with the PC at the time you specified. Click Sync now button to begin synchronization now.
Time Format	System time format. It includes 12H/24H.
Short Cut	Set preview window, record playback, alarm management, e-map and etc.
Device User Name	Set device login username.
Device User Password	Set login password.

3.3.2 File Path

File configuration interface is shown as below. See Figure 3-4.

Here you can set snapshot picture and record file default save path.

Configuration file path: It is to import or export configuration file. If you change path to D disk, you can export current software user information to D disk. If current software has installed at the D disk, you can import user information to current software.

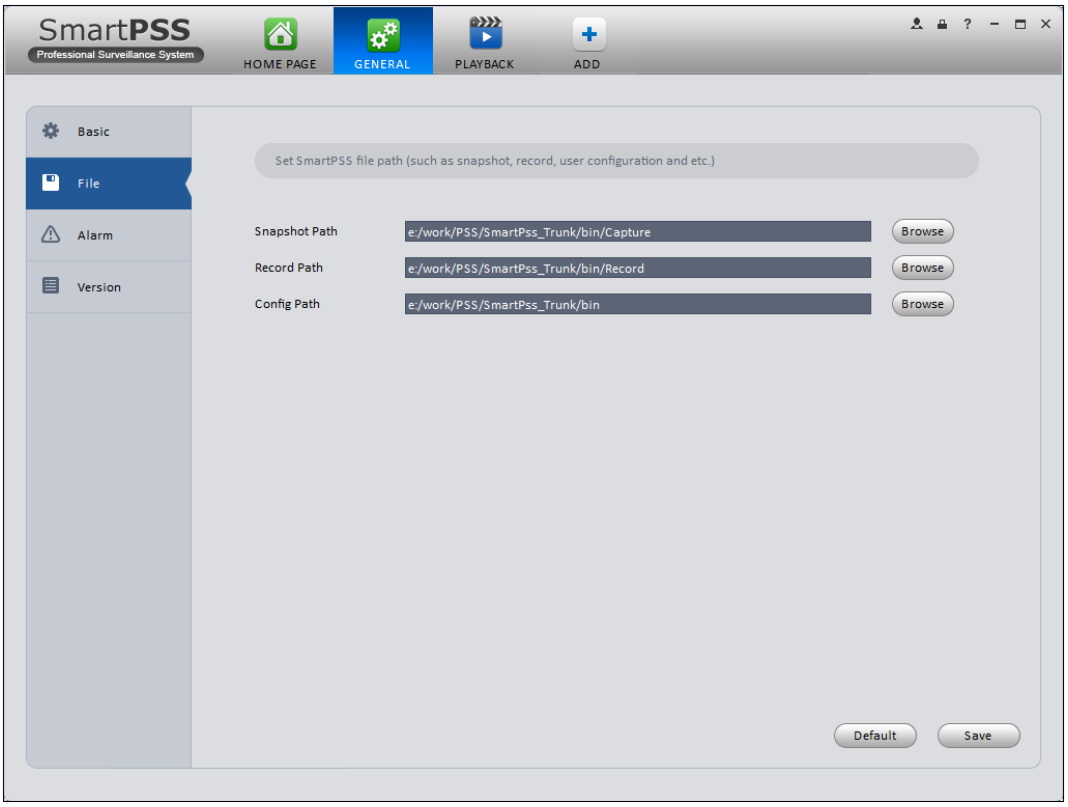

Figure 3-4

3.3.3 Alarm Prompt

It is to set alarm prompt audio. The interface is shown as below. See Figure 3-5.

Please select corresponding prompt audio for the specified alarm type.

Check the box at the bottom of the interface to enable e-map function. The e-map can flash when the corresponding alarm occurs.

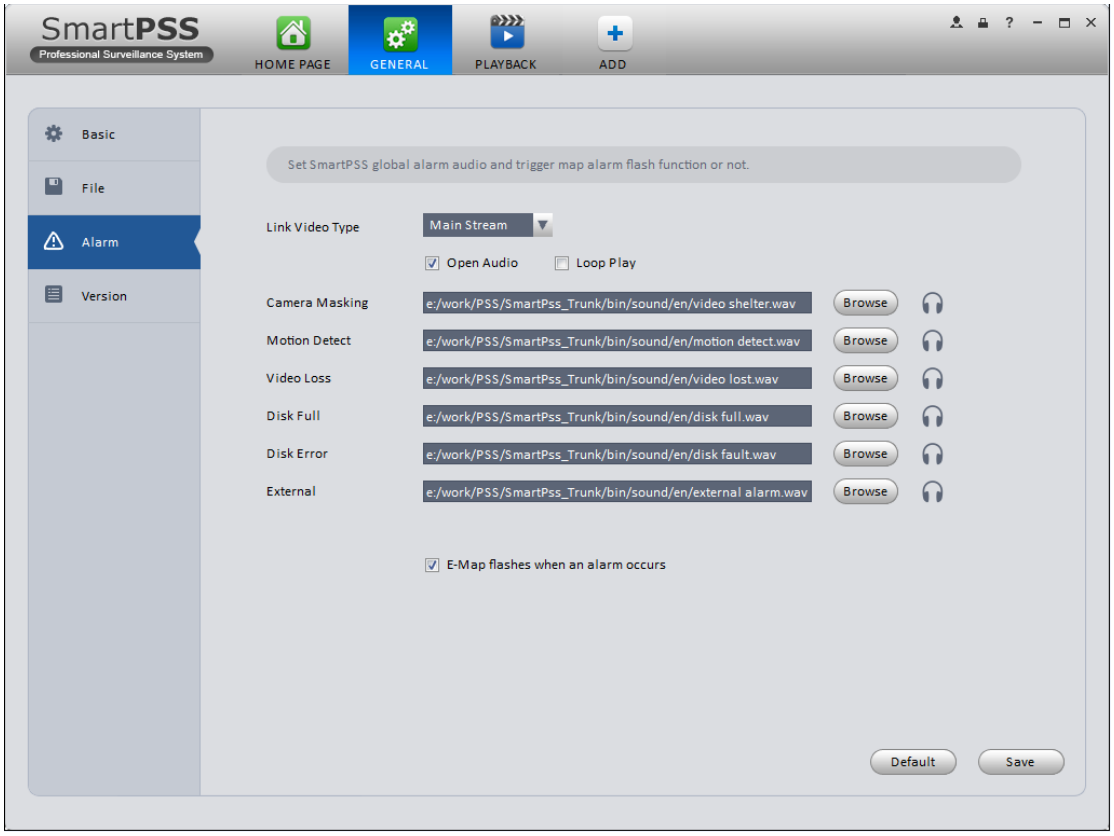

Figure 3-5

Tips

You can click Default button to restore factory default setup.

User config file storage path is used to import and export user config file. If current user config file storage path is modified to other path, then it means all users' config info are exported. If user re-install, he can export previous all user's config info to current client.

If he re-install the software and import previously exported user config info, after being saved, original user config info will be successfully imported into current client.

3.3.4 Version

Click the version button; you can go to the following interface.

Here you can view software version information.

3.4 Account

Here you can add, modify or delete a user.

3.4.1 Add role

1) Click in the Settings pane, and then click role button, you can go to the following interface. See Figure 3-6.

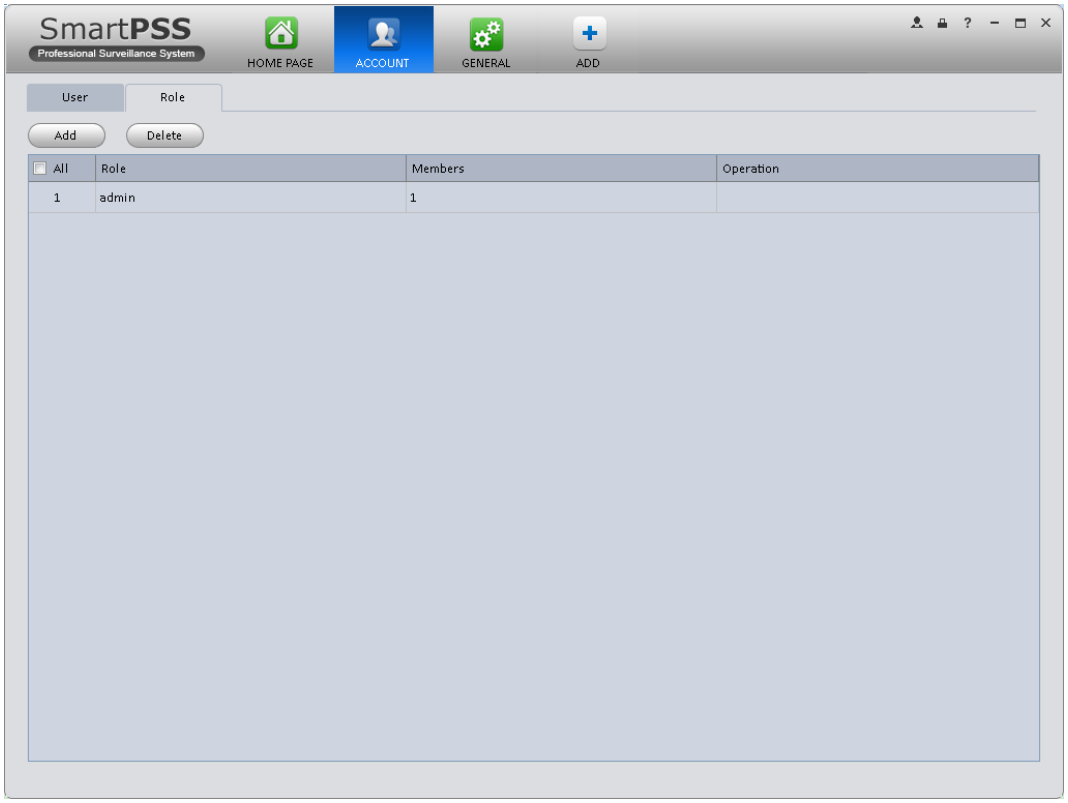

Figure 3-6

2) Click Add button, the interface is shown as in Figure 3-7.

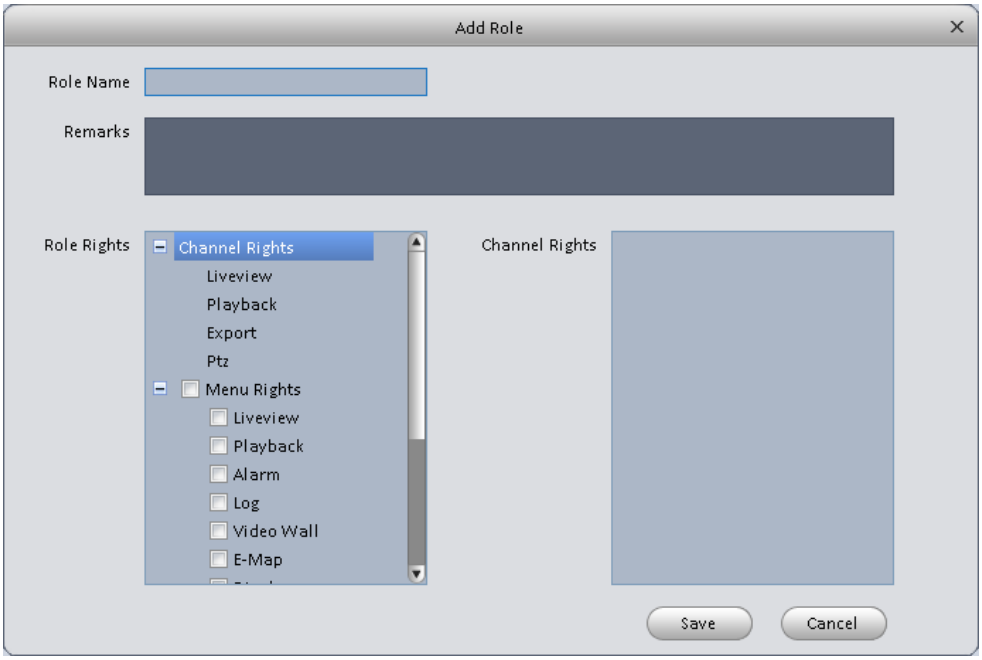

Figure 3-7

3) Please input a role name and check the corresponding role rights. You can input some reference information if necessary.
4) Click Save button.

Tips

Select a role and then click Modify/Delete button to modify or delete a role.

3.4.2 Add user

1) Click in the Settings pane, and then click user button, you can go to the following interface. See Figure 3-8.

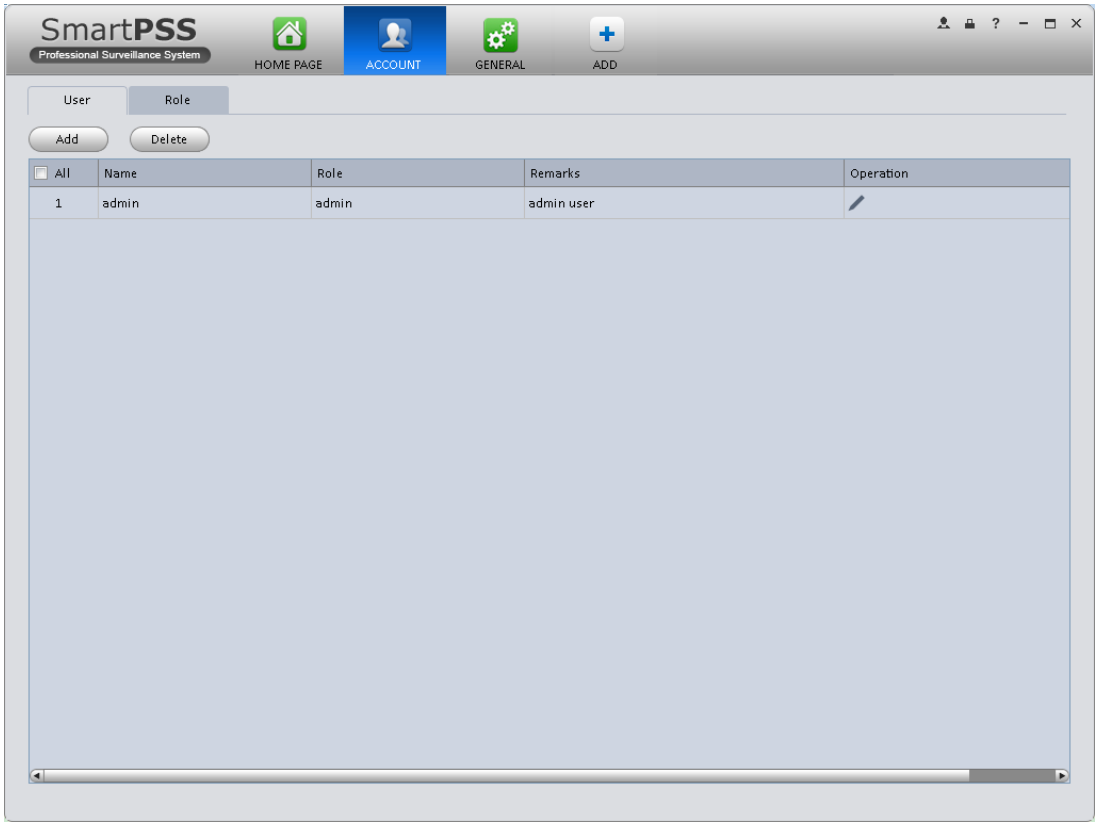

Figure 3-8

2) Click Add button, you can see system pops up the following interface. See Figure 3-9.

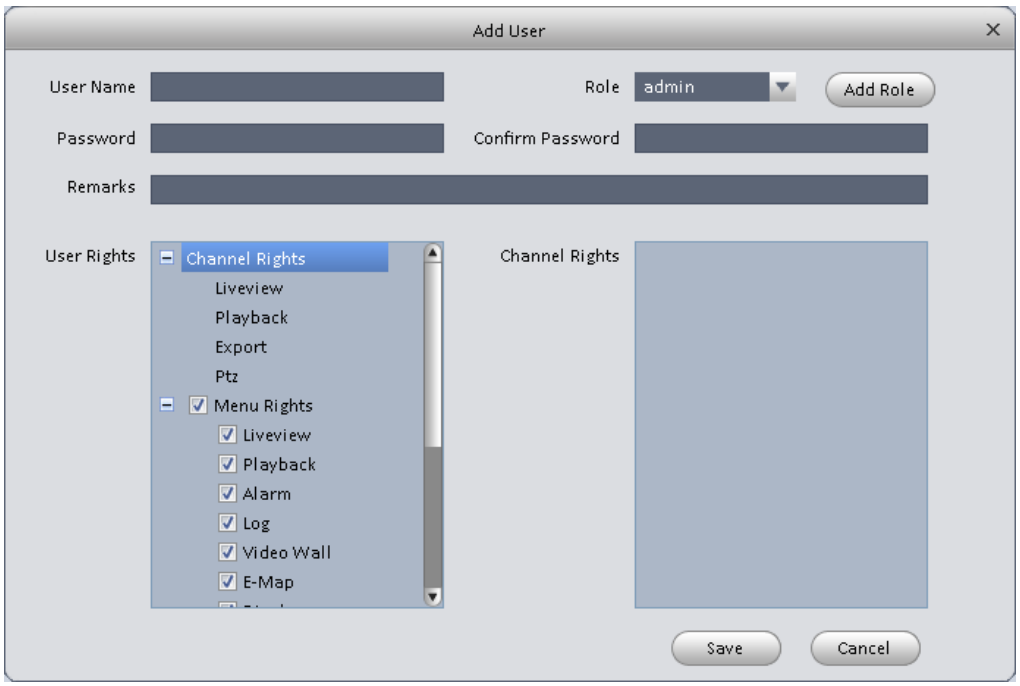

Figure 3-9

3) Select a role from the dropdown list, input user name, password and confirm password. Input some description information if necessary. Select rights for the new user.

4) Click Save button to add a new user.

Please refer to the following sheet for detailed information.

Item	Function
User name	Please input user name here.
Role	You can select user role from the dropdown list. Or you can click Add role button to add a new role.
Password	Please set user password.
Confirm password	Please input new password again.
User Rights	Here you can check the box to select corresponding rights for current user. If the new user is a manager, system checks all rights by default.

5) Click Save button to add a new user.

Tips

Select a user name and then click Modify/Delete button to modify or delete a user.

3.5 Device Manager

Here you can add, modify and delete a device. You can also implement device channel group function.

Auto Add

1) Click icon. System displays device manager interface.

2) Click Refresh, search device within the LAN. You also can enter device segment, and click search to search devices within the same segment.

3) Check device, click Add as auto add device. You also can double click the device you want to add. The added device will be shown in list below, where you can view device type, channel and status. You can modify, logout and delete the device.

Manually Add

You can refer to the steps listed below to add, modify or delete a device manually or automatically.

1) Click icon in the settings pane, system goes to the device manager interface; you can see an interface is shown as in Figure 3-10.

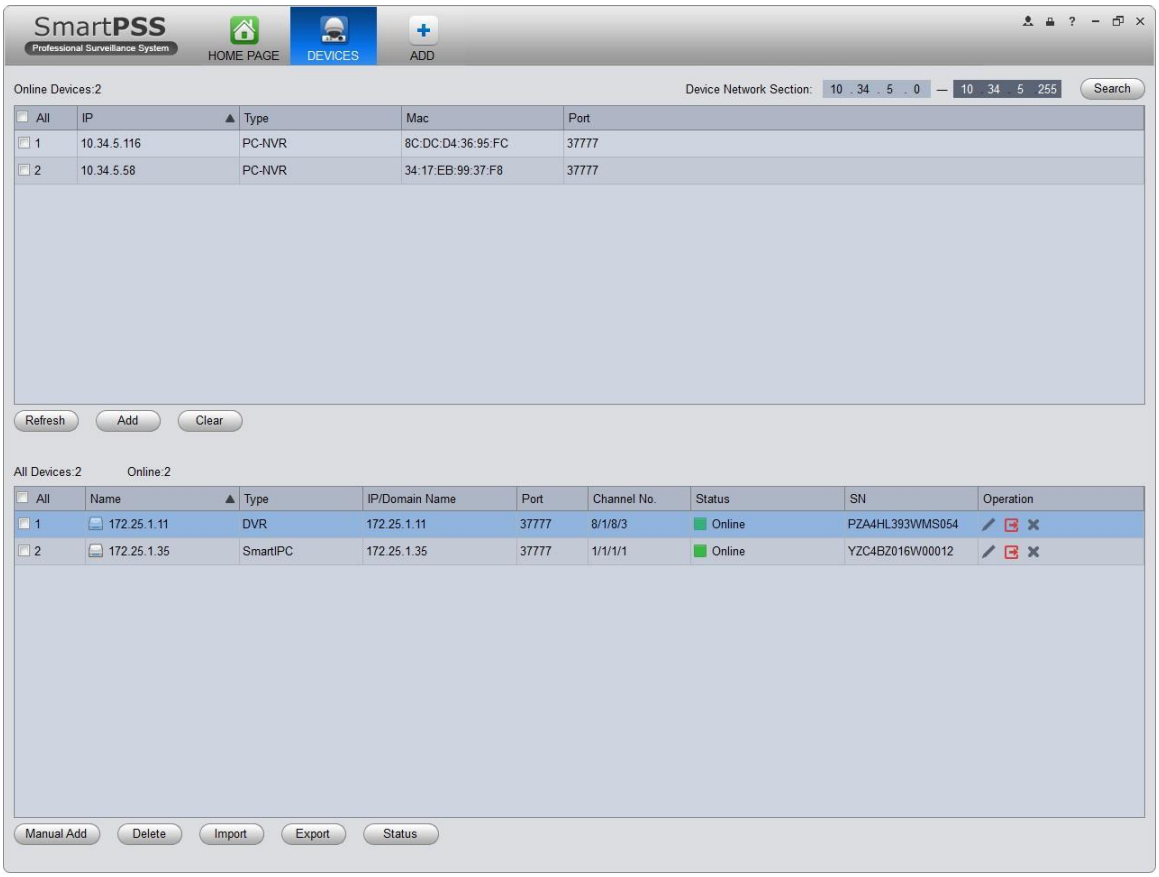

Figure 3-10

2) Click Manual Add button, the interface is shown as in Figure 3-11. Please input the corresponding information and then click Add button.

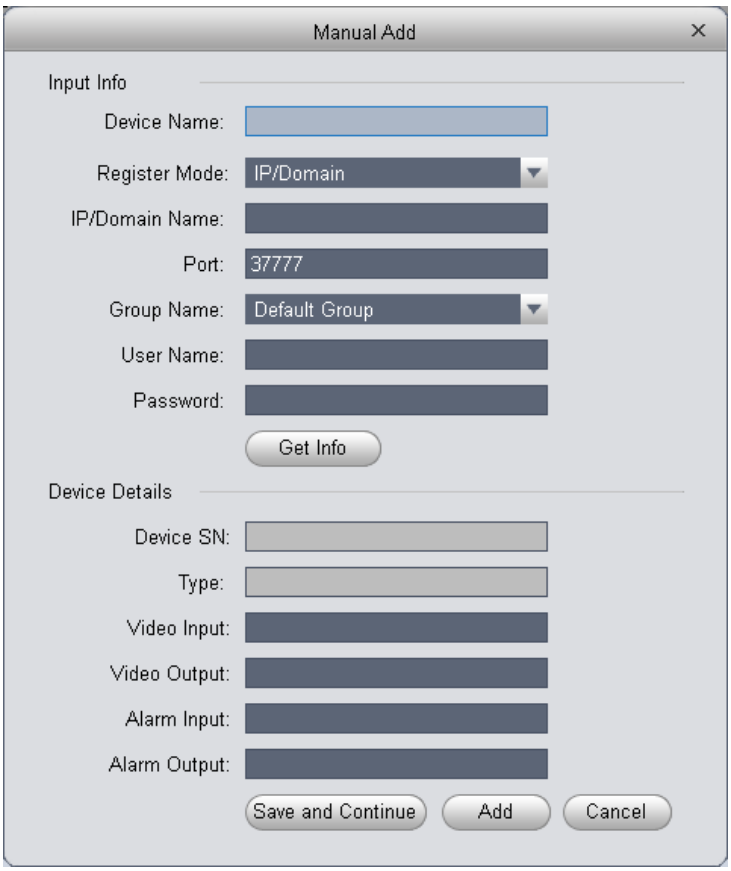

Figure 3-11

Please refer to the following sheet for detailed information.

Item	Function
Device name	Please input a device name here.
Register Mode	By IP/domain and SN.
IP/Domain name	Device IP address or domain name.
SN	Device SN. Note: For P2P device only.
Port	Device IP port. It is 37777 by default.
Group Name	You can choose one group.
User name	The user name you login the device.
Password	The password you login the device.

3) Config device input info, and click on Get Info. System auto gets device info as in Figure 3-12.

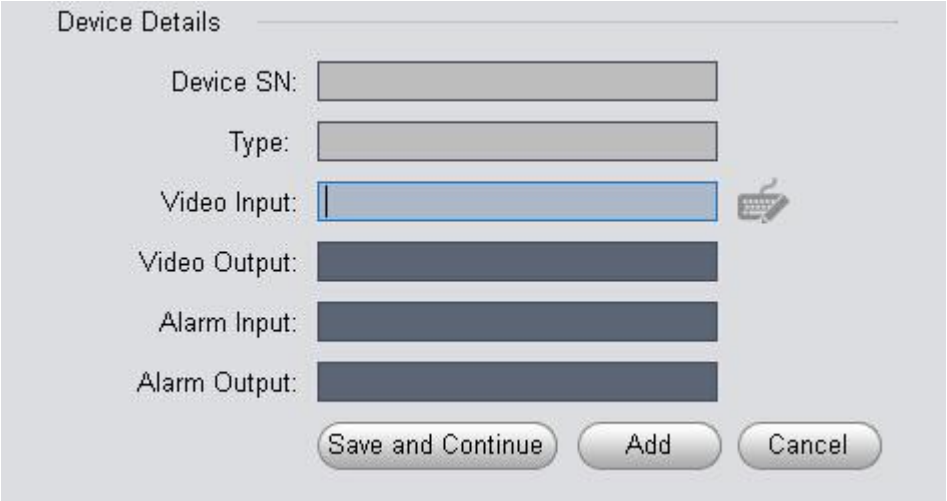

Figure 3-12

Device SN	Device SN. Read-only.
Type	Device type.
Video input	Device video input channel amount. Click , set device no., click no. column, and may enter no.
Video output	Device video output channel amount.
Alarm input	Device alarm input channel amount.
Alarm output	Device alarm output channel amount.
Type	Device type.

4) Click Add. You can click Save and Continue to add next device. Added devices are shown as in Figure 3-13.

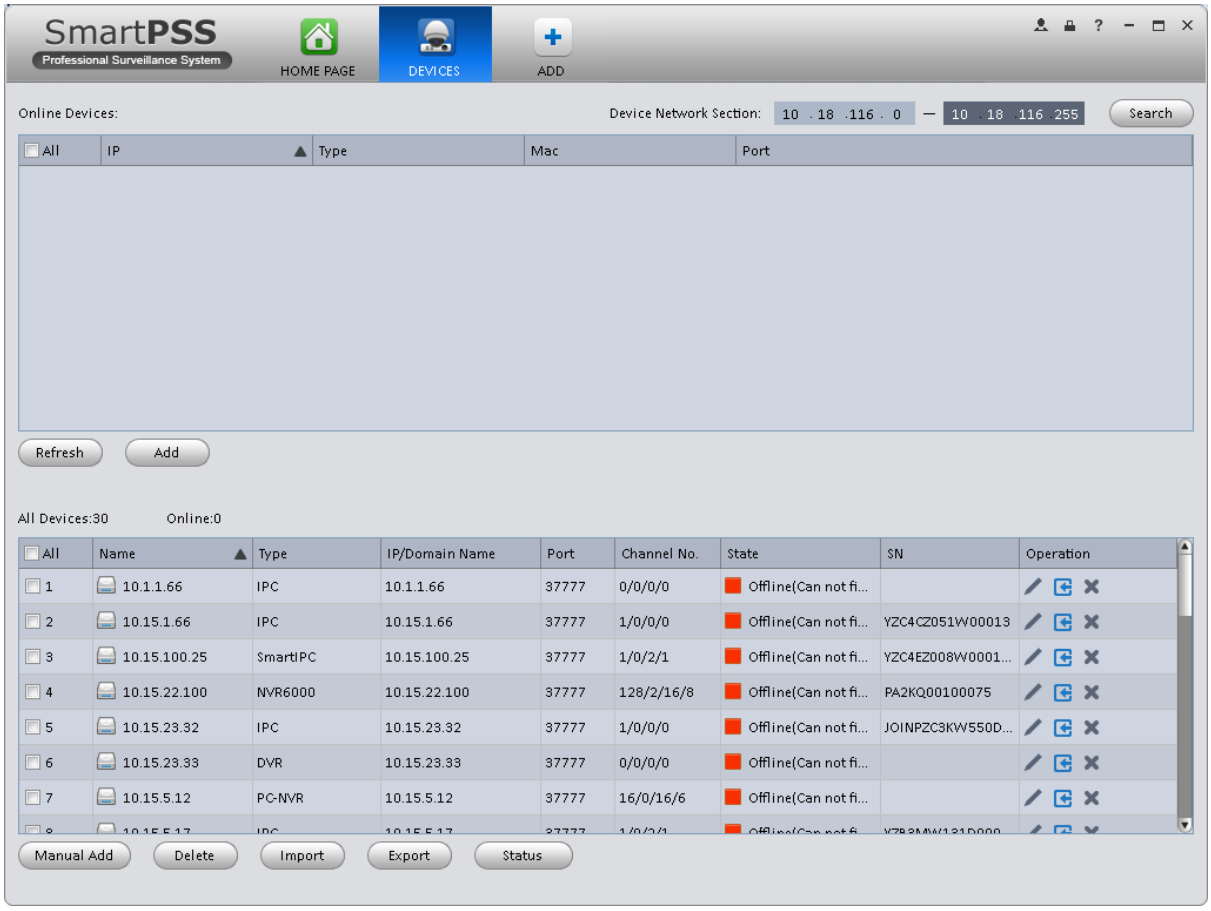

Figure 3-13

Click Status, to view operation status, disk status, external alarm, motion detect and etc. of each device.

Tips

Select a device in the list, and then:

- click to modify, or click to delete it.
- Click to login the device manually.
- Click to logout the device manually.
- Click Export button and then select save path to save current device list to .xml file.

5) Click Import to batch import local config in .xml format. Or you can import with Easy 4IP account. See Figure 3-14.

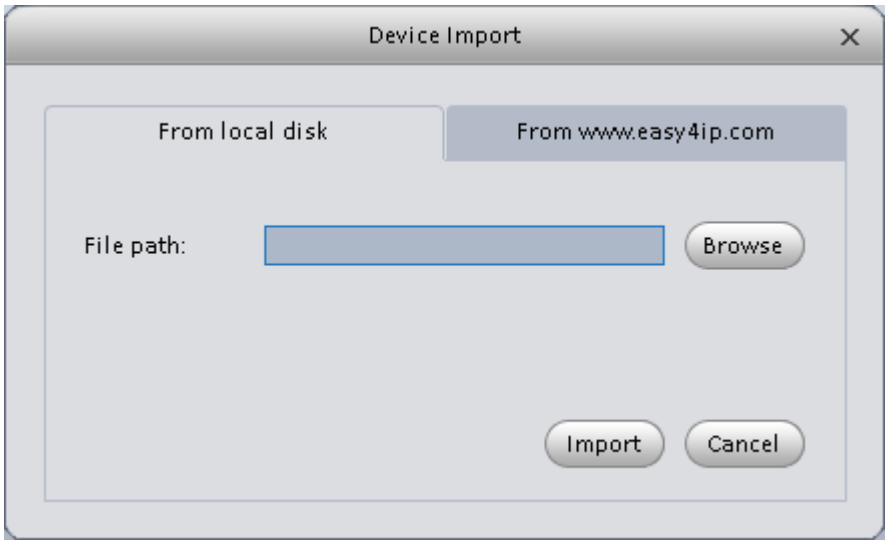

Figure 3-14

If PC running SmartPSS is connected to NKB network keyboard, then in Figure 3-12 there will be an icon.

1. Click , system pops up device no. setup box, see Figure 3-15.

Figure 3-15

2. Click list, you may edit/input no., see Figure 3-16.

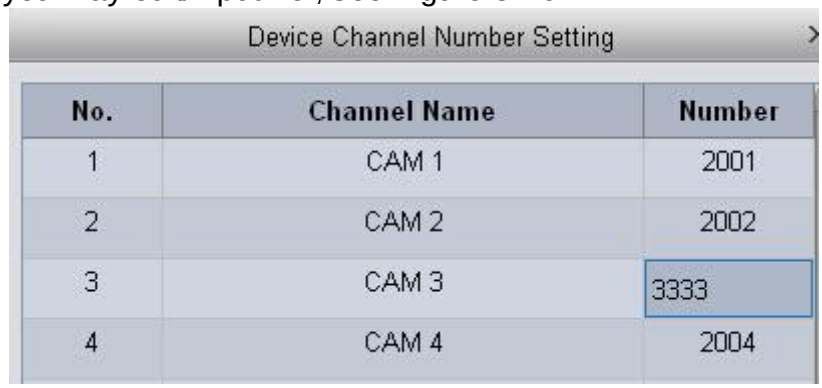

Figure 3-16

NKB keyboard can encode channel and control channel, as it can directly open channel video by encoding. For more information, please refer to NKB user's manual.

3.6 Device CFG

After you added a new device, you can go to the signals manager interface to set parameters.

On the main interface, click button in the Settings pane, you can go to the following interface. See Figure 3-17.

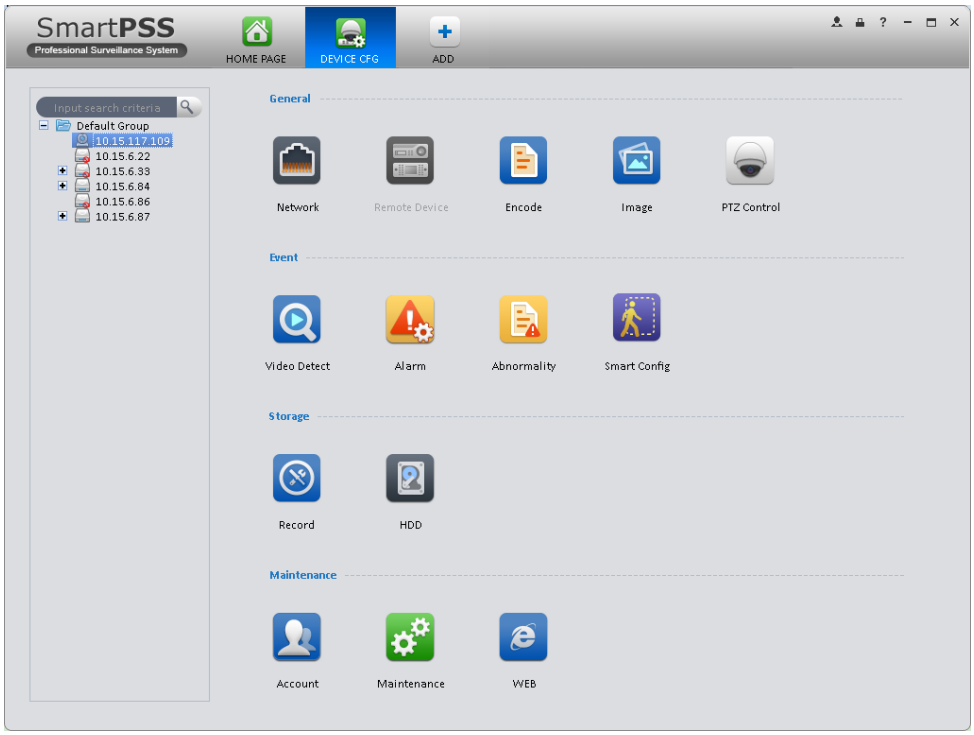

Figure 3-17

3.6.1 General

3.6.1.1 Network

Here is for you to set network information such as TCP/IP, connection, PPPoE, DDNS, IP filter, SMTP, Multicast, and alarm centre.

3.6.1.1.1 TCP/IP

Here you can set corresponding parameter when you are using TCP/IP connection. See Figure 3-18.

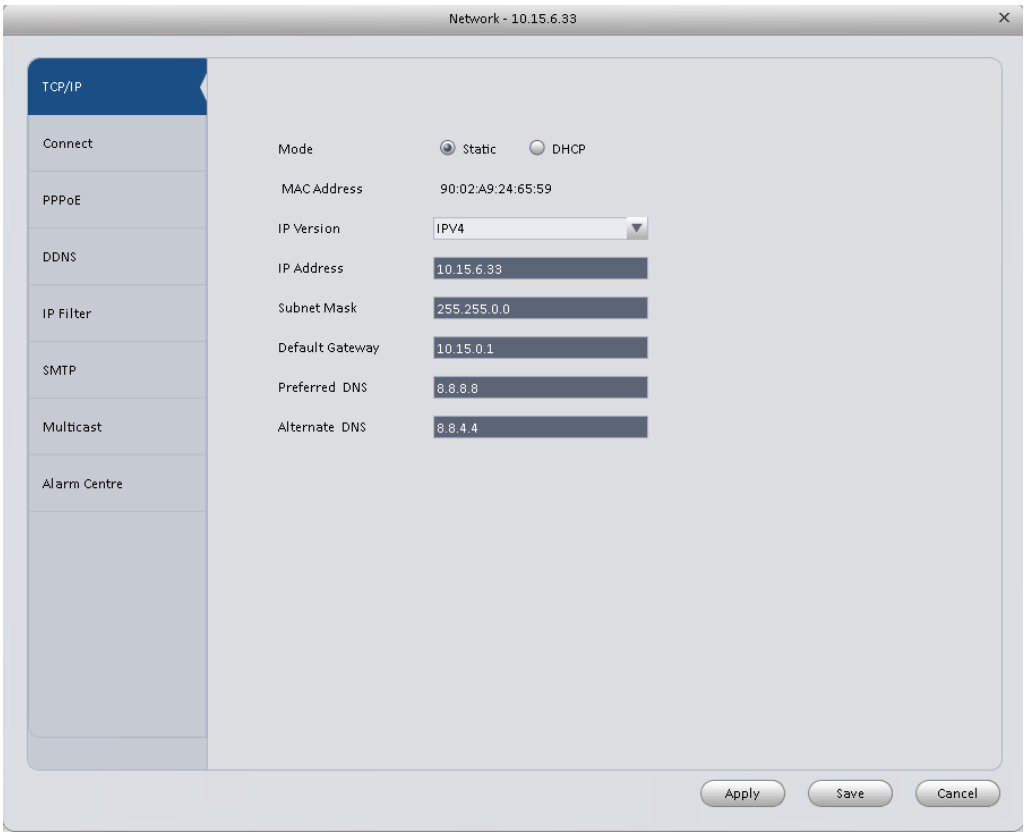

Figure 3-18

3.6.1.1.2 Connect

Here you can set max login account amount, TCP port, UDP port, HTTP port, RTSP port and etc. See Figure 3-19.

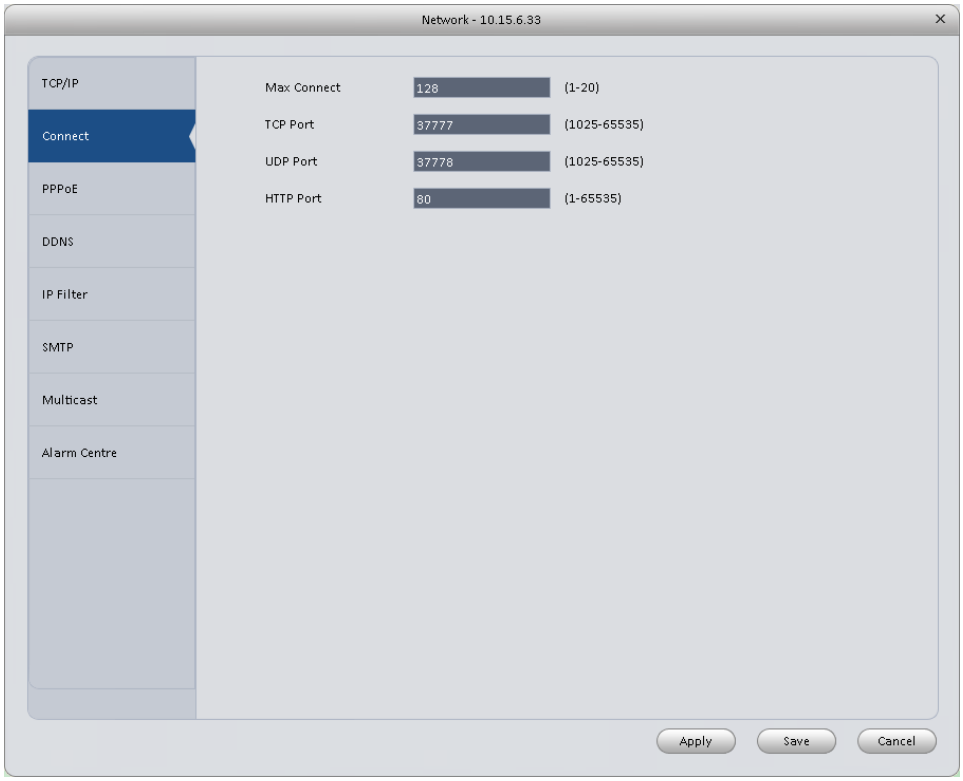

Figure 3-19

3.6.1.1.3 PPPoE

PPPoE interface is shown as below. See Figure 3-20.

Input “PPPoE name” and “PPPoE password” you get from your ISP (Internet service provider). Click OK button, you need to restart to activate your configuration.

After rebooting, device will connect to internet automatically. The IP in the PPPoE is the device dynamic value. You can access this IP to visit the device.

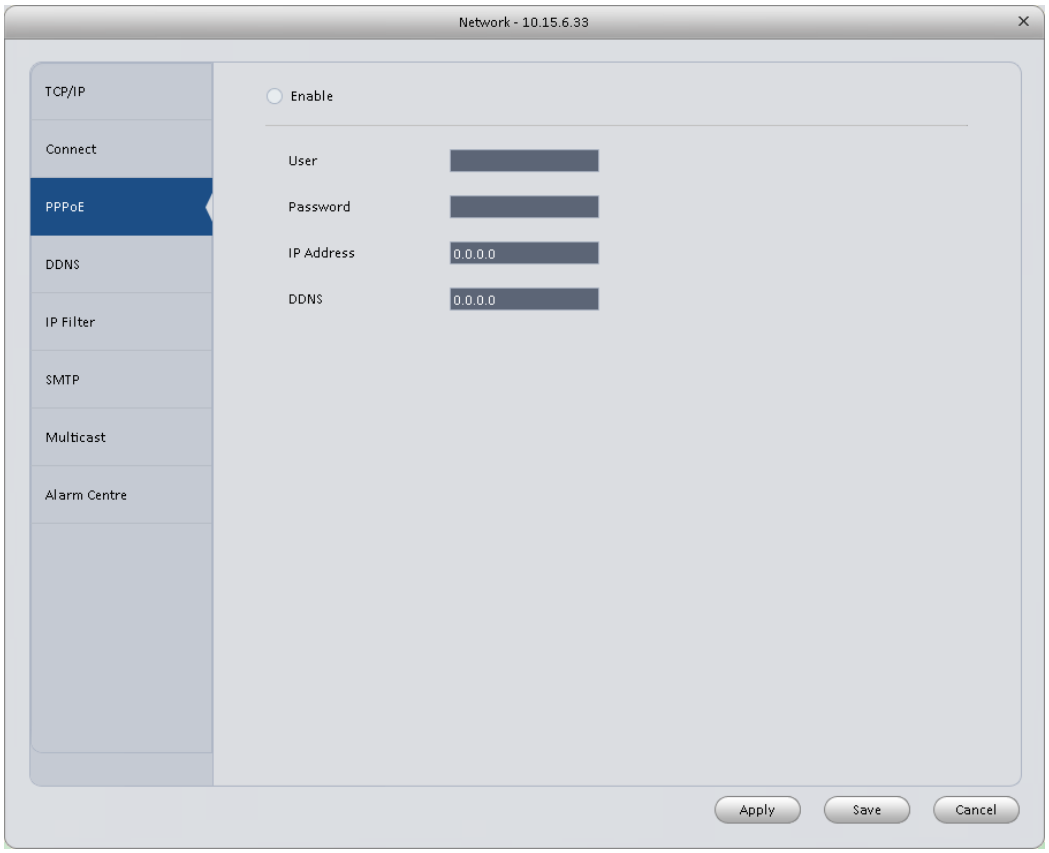

Figure 3-20

3.6.1.1.4 DDNS

DDNS setup interface is shown as in Figure 3-21.

You need a PC of fixed IP in the internet and there is the DDNS software running in this PC. In other words, this PC is a DNS (domain name server).

In network DDNS, please select DDNS type and highlight enable item. Then please input your PPPoE name you get from you IPS and server IP (PC with DDNS). Click OK button and then reboot system.

Click Ok button, system prompts for rebooting to get all setup activated.

After rebooting, open IE and input as below:

http：//(DDNS server IP)/(virtual directory name)/webtest.htm

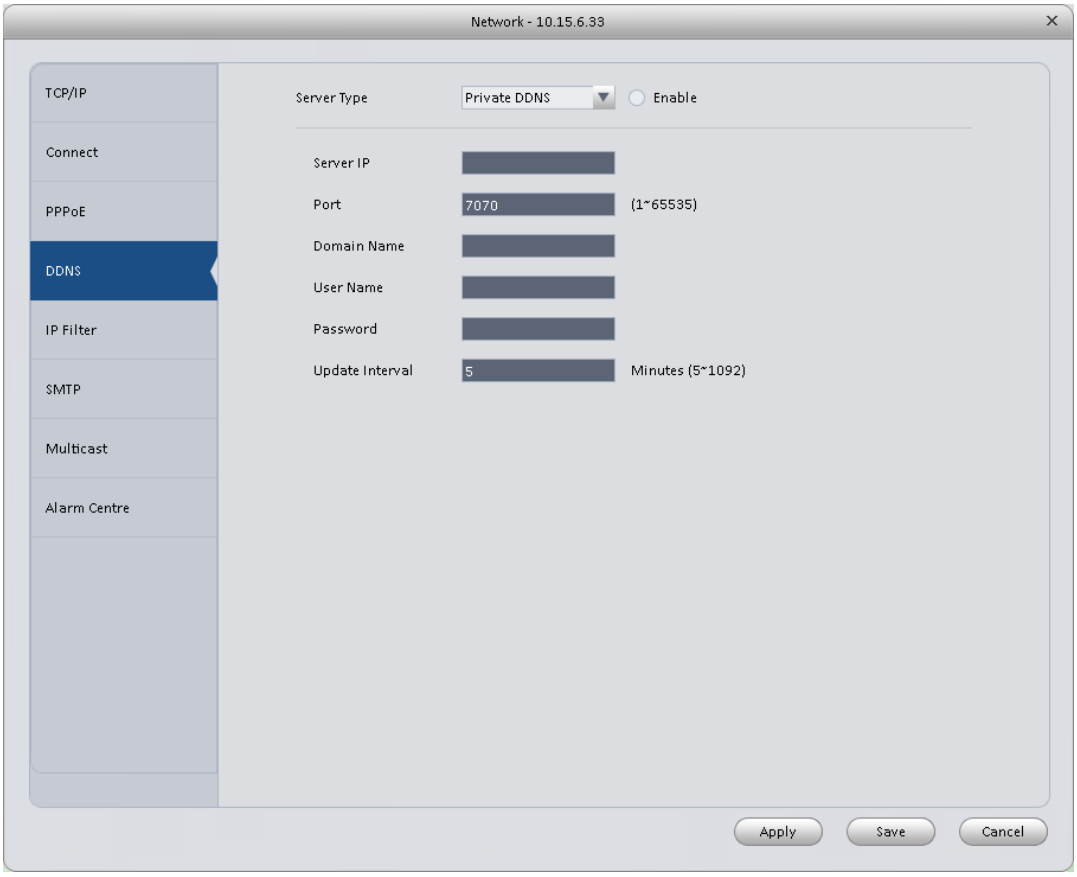

Figure 3-21

Please refer to the following sheet for detailed information.

Parameter	Function
Server Type	You can select DDNS protocol from the dropdown list and then enable DDNS function.
Server IP	DDNS server IP address.
Port	DDNS server port.
Domain Name	Your self-defined domain name.
User Name	The user name you input to log in the server.
Password	The password you input to log in the server.
Update interval	Device sends out alive signal to the server regularly. You can set interval value between the device and DDNS server here.

3.6.1.1.5 IP Filter

IP filter interface is shown as in Figure 3-22. You can add IP in the following list.

After you enabled whitelist function, only the IP listed below can access current device.

If you enable blacklist function, the following listed IP addresses can not access current device.

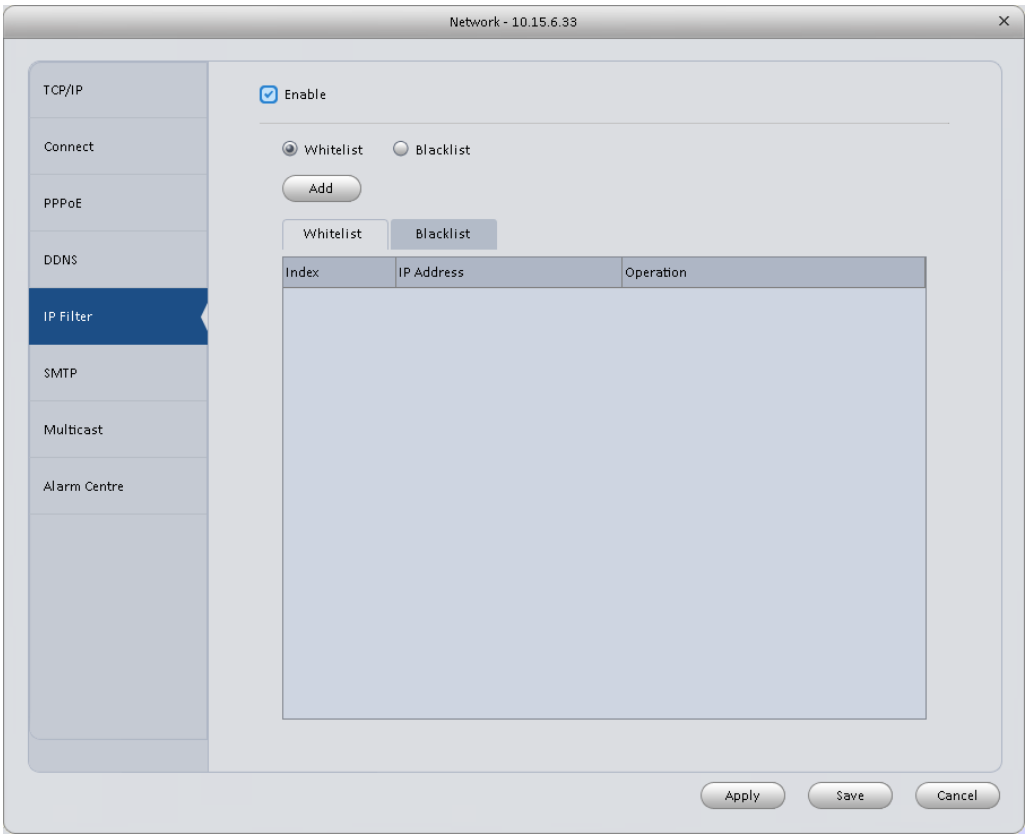

Figure 3-22

3.6.1.1.6 SMTP (Email)

The SMTP interface is shown as in Figure 3-23. Here you can set email receiver, encryption mode, send out interval and etc.

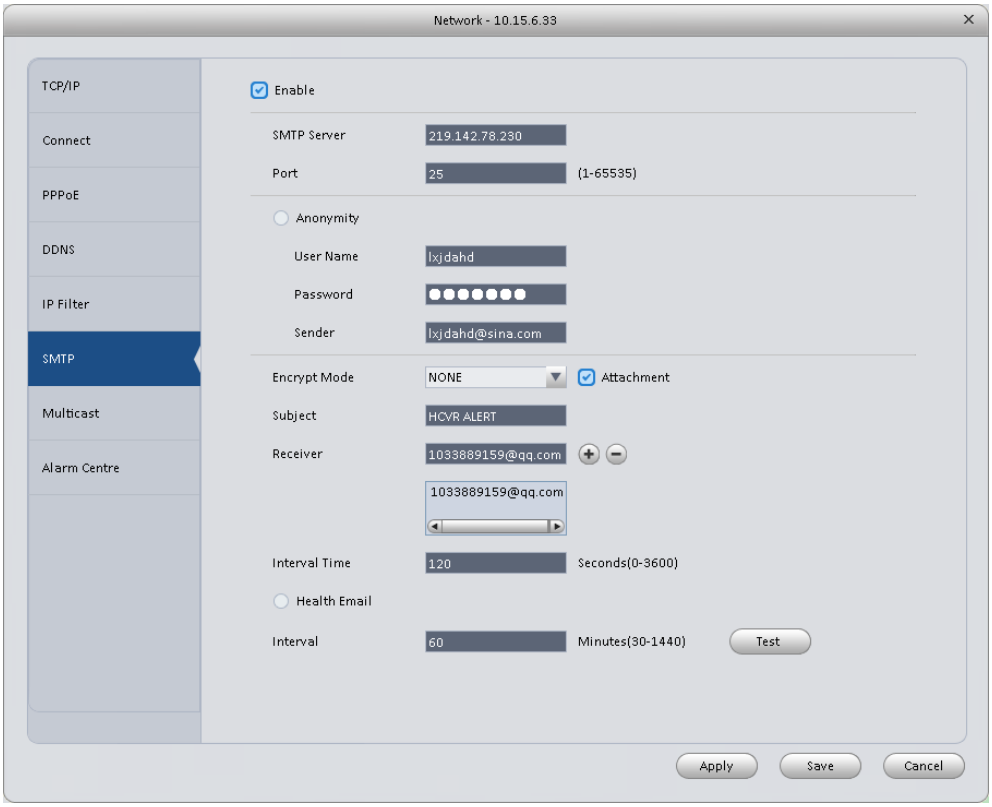

Figure 3-23

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	Please check the box here to enable email function.
SMTP Server	Input server address and then enable this function.
Port	Default value is 25. You can modify it if necessary.
Anonymity	For the server supports the anonymity function. You can auto login anonymously. You do not need to input the user name，password and the sender information.
User Name	The user name of the sender email account.
Password	The password of sender email account.
Sender	Sender email address.
Encrypt mode	System supports SSL/NONE/TLS.
Subject	Input email subject here.
Attachment	System can send out the email of the snapshot picture once you check the box here.
Receiver	Input receiver email address here. Max three addresses.
Interval	The send interval ranges from 0 to 3600 seconds. 0 means there is no interval. Please note system will not send out the email immediately when the alarm occurs. When the alarm, motion detection or the abnormity event activates the email, system sends out the email according to the interval you specified here. This function is very useful when there are too many emails activated by the abnormity events, which may result in heavy load for the email server.
Health mail	Please check the box here to enable this function.
Health mail interval	This function allows the system to send out the test email to check the connection is OK or not. Please check the box to enable this function and then set the corresponding interval. System can send out the email regularly as you set here.
Test	The system will automatically sent out an email once to test the connection is OK or not .Before the email test, please save the email setup information.

3.6.1.1.7 Multicast

The multicast interface is shown as in Figure 3-24.

Multicast is a transmission mode of data packet. When there is multiple-host to receive the same data packet, multiple-cast is the best option to reduce the broad width and the CPU load. The source host can just send out one data to transit. This function also depends on the relationship of the group member and group of the outer.

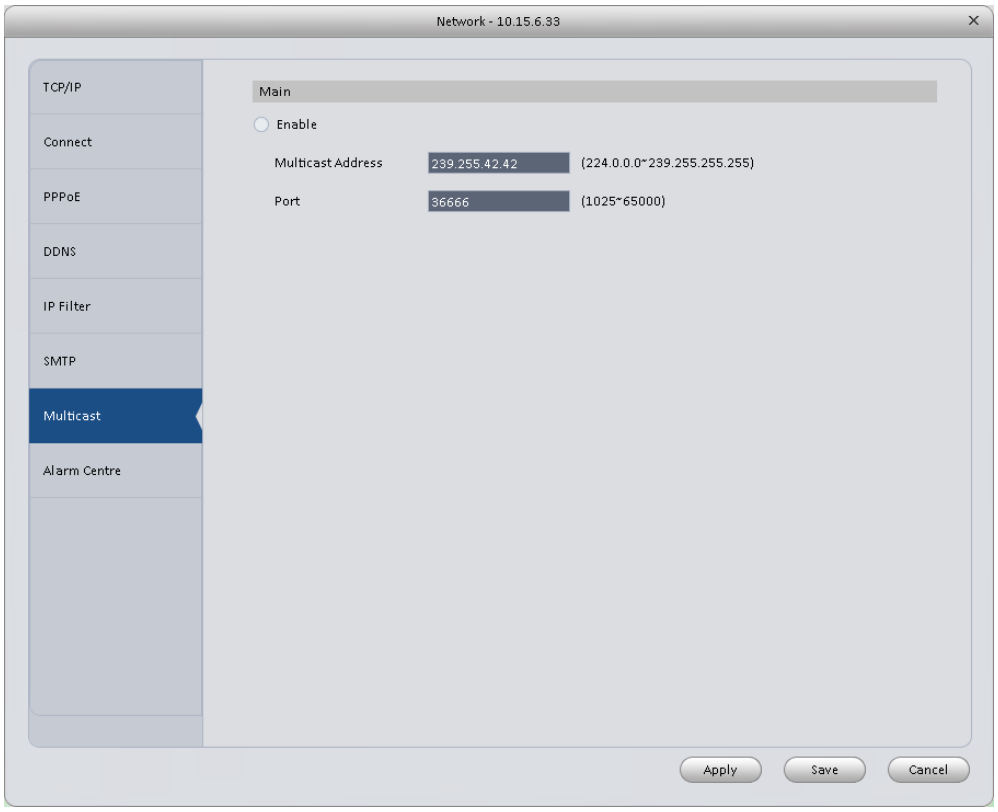

Figure 3-24

3.6.1.1.8 Alarm Server

The alarm centre interface is shown as below. See Figure 3-25.

This interface is reserved for you to develop. System can upload alarm signal to the alarm centre when local alarm occurs.

Before you use alarm centre, please set server IP, port and etc. When an alarm occurs, system can send out data as the protocol defined, so the client-end can get the data.

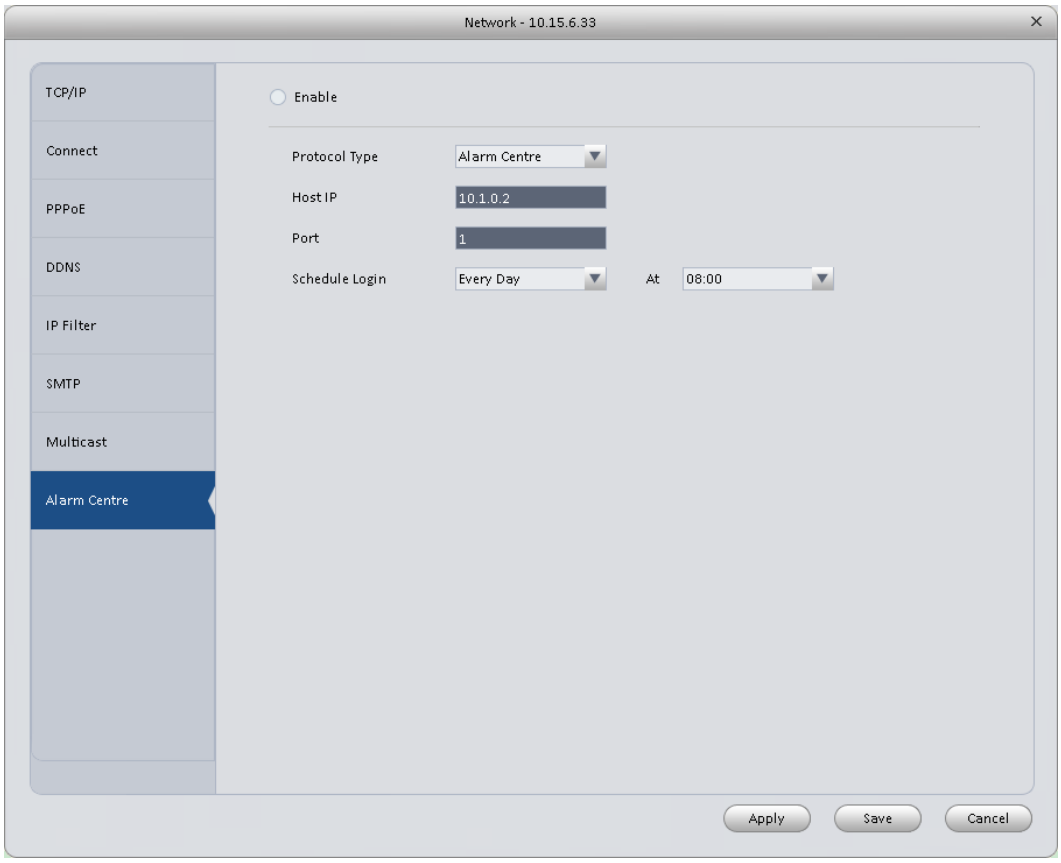

Figure 3-25

3.6.1.2 Remote

Here you can add remote device manually or automatically. See Figure 3-26.

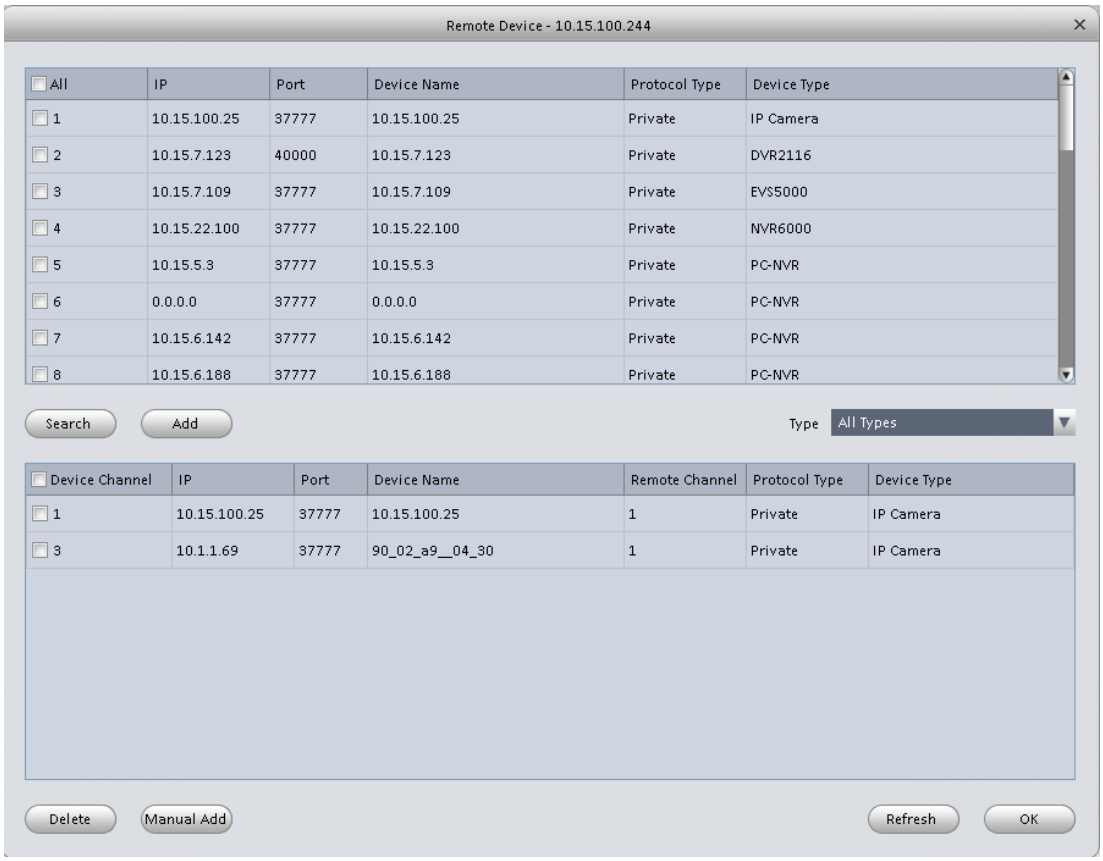

Figure 3-26

Click Search device button, system can list all the devices on the same IP section. Select a device and then click Add button; you can add a remote device.

Click Manual add button, System pops up the following dialogue box. See Figure 3-27. Please input the corresponding information and then click OK button to add a remote device.

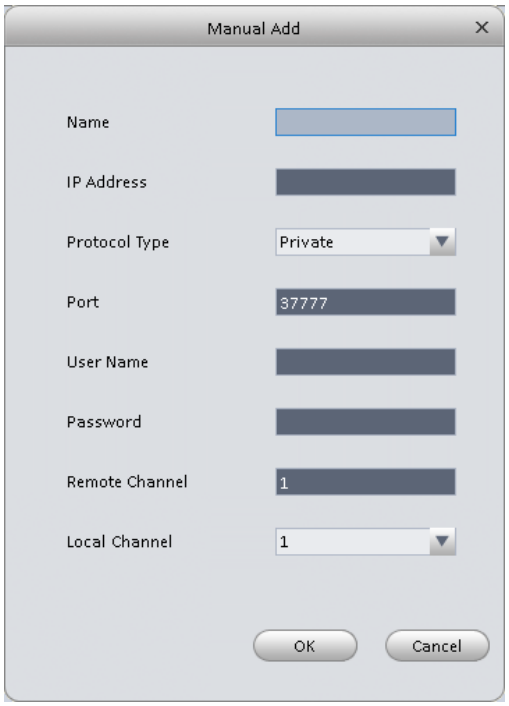

Figure 3-27

3.6.1.3 Encode

3.6.1.3.1 Audio/Video

The interface is shown as below. See Figure 3-28. Here you can set audio/video bit stream.

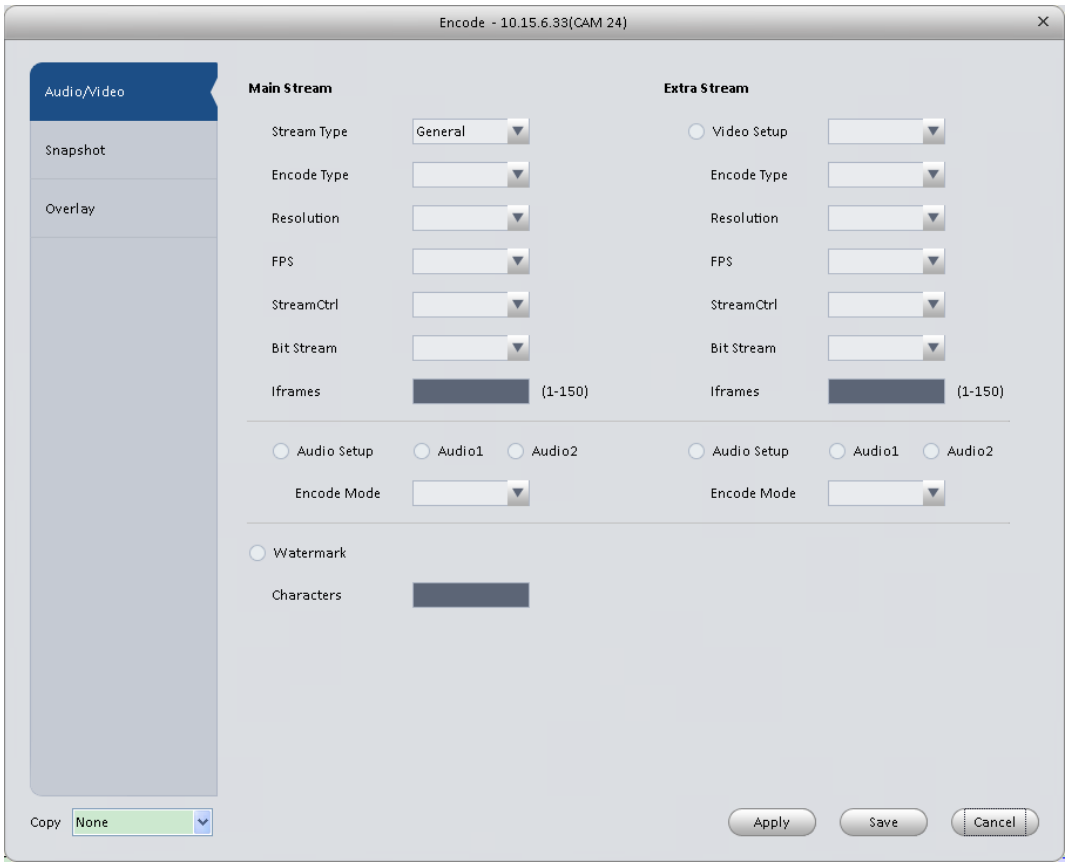

Figure 3-28

Please refer to the following sheet for detailed information.

Parameter	Function
Video setup	Check the box here to enable extra stream video. This item is enabled by default.
Stream type	It includes main stream, motion stream and alarm stream. You can select different encode frame rates form different recorded events.
Encode mode	It is to set audio/video encode mode. Default setup is H.264.
Resolution	System supports various resolutions, you can select from the dropdown list.
FPS	PAL：1～25f/s；NTSC：1～30f/s.
Bit stream	In VBR mode, it is the max value of the bit stream. In the CBR mode, it is a fixed value.
Ref Stream	According to selected encode mode, resolution, display bit stream. (range)
Iframes	Interval between key frames.

Audio encode mode	Check the box here to enable audio function and select encode type from the dropdown list.
Watermark /watermark character	This function allows you to verify the video is tampered or not. Here you can select watermark bit stream, watermark mode and watermark character.
Copy	Click it to copy current setup to other channel(s).

3.6.1.3.2 Snapshot

The snapshot interface is shown as below. See Figure 3-29.

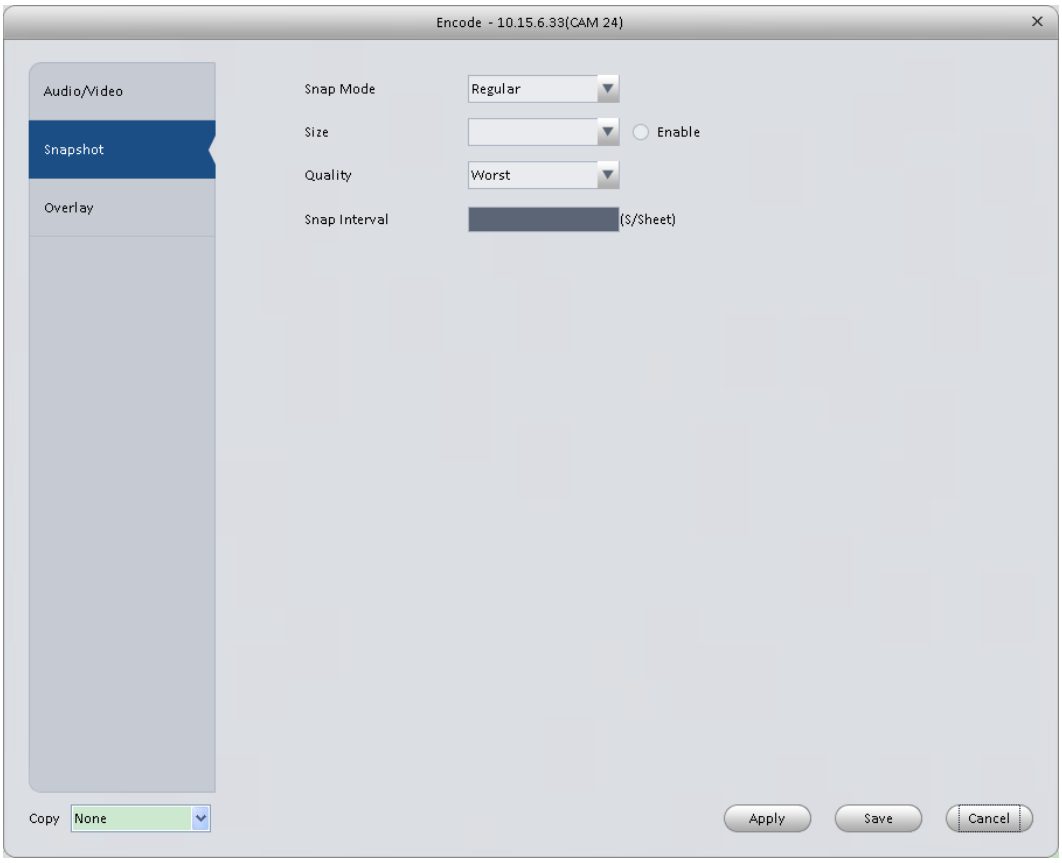

Figure 3-29

Please refer to the following sheet for detailed information.

Parameter	Function
Snapshot type	There are three modes. ● Regular: It enables snapshot function as you set on the snapshot plan. ● Trigger: It enables snapshot function when motion detect occurs. ● ALM: It enables snapshot function when an alarm occurs.
Image size	It is the same with the resolution of the main stream.
Quality	It is to set the image quality.
Interval	It is to set snapshot frequency.
Copy	Click it; you can copy current channel setup to other channel(s).

3.6.1.3.3 Overlay

Here is for you to overlay information on the video. See Figure 3-30.

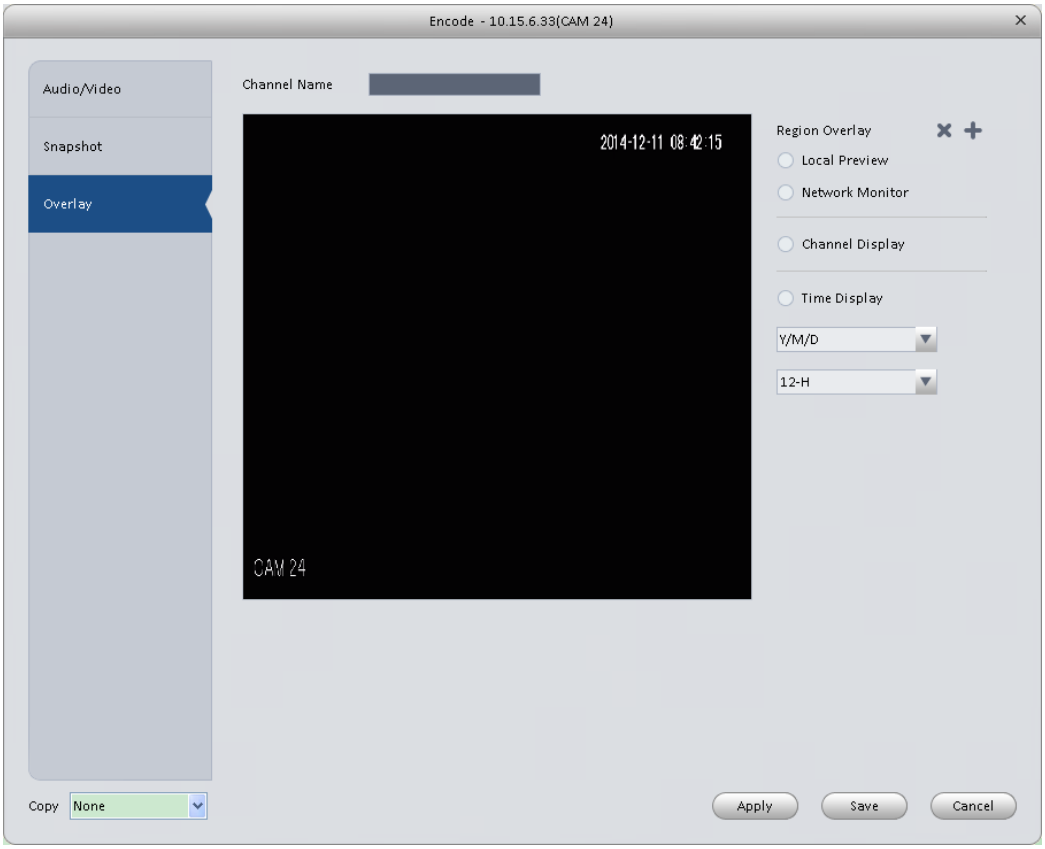

Figure 3-30

Please refer to the following sheet for detailed information.

Parameter	Function
Channel Name	Set channel name.
Region overlay	There are two types: Local liveview/network monitor. Local liveview: It is to shield the corresponding video under local liveview mode. Network monitor: It is to shield the corresponding video under network monitor mode.
Channel display	You can enable this function so that system overlays channel information in video window. Please input channel name here. You can use the mouse to drag the channel title position.
Time display	You can enable this function so that system overlays time information in video window. You can use the mouse to drag the time title position. You can view time title on the live video of the WEB or the playback video.
Date format	Select date format from the dropdown list if you want to overlay date information.

Time format	Select date format from the dropdown list if you want to overlay time information.
Copy	Click it; you can copy current channel setup to other channel(s).

3.6.1.4 Image

Here you can set camera property. See Figure 3-31.

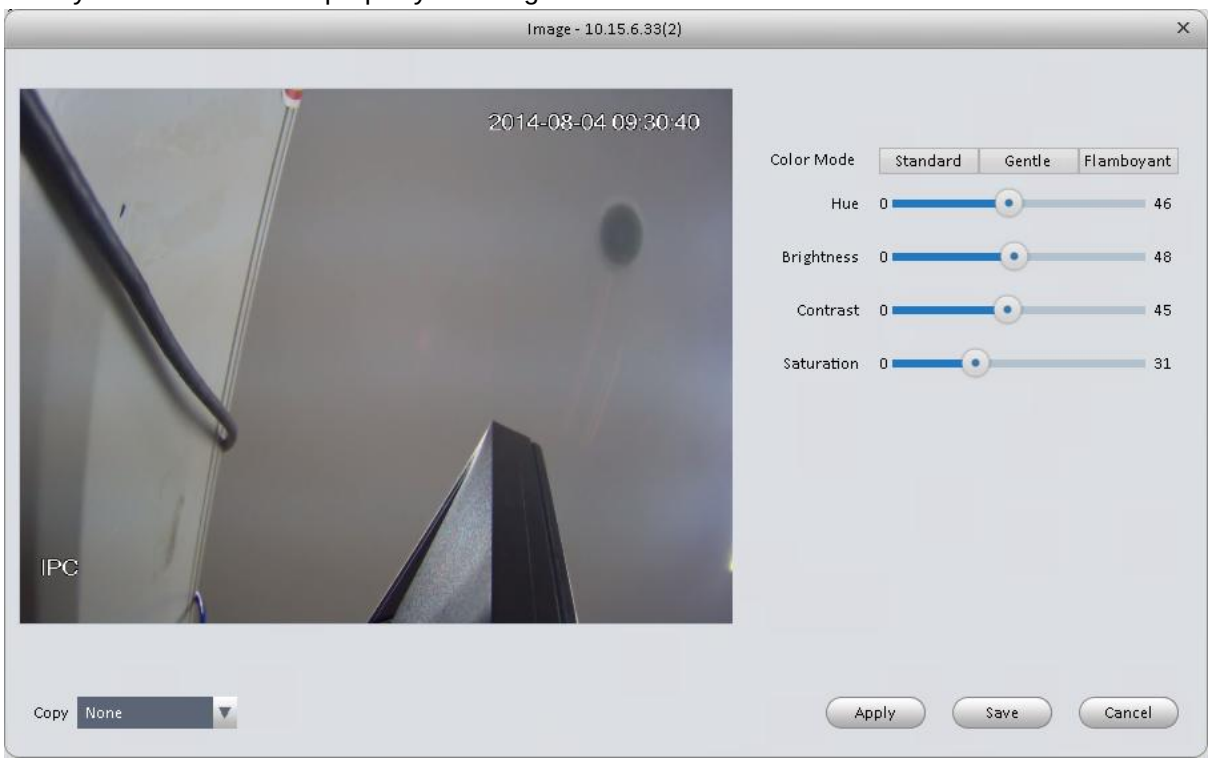

Figure 3-31

Please refer to the following sheet for detailed information.

Parameter	Function
Color mode	It is to set color mode.
Hue	It is to set color hue.
Brightness	It is to adjust color whole brightness. The large the value is, the bright the video is and vice versa. When you set, the dark pane and the bright pane of the video can be increased or decreased accordingly at the same time.
Contrast	It is to set video contrast. The large the value is, the big the contrast is, vice, versa.
Saturation	It is to set color saturation. The larger the value is, the strong the color is and vice versa.

3.6.1.5 PTZ Control

It is for you to set PTZ parameters. See Figure 3-32.

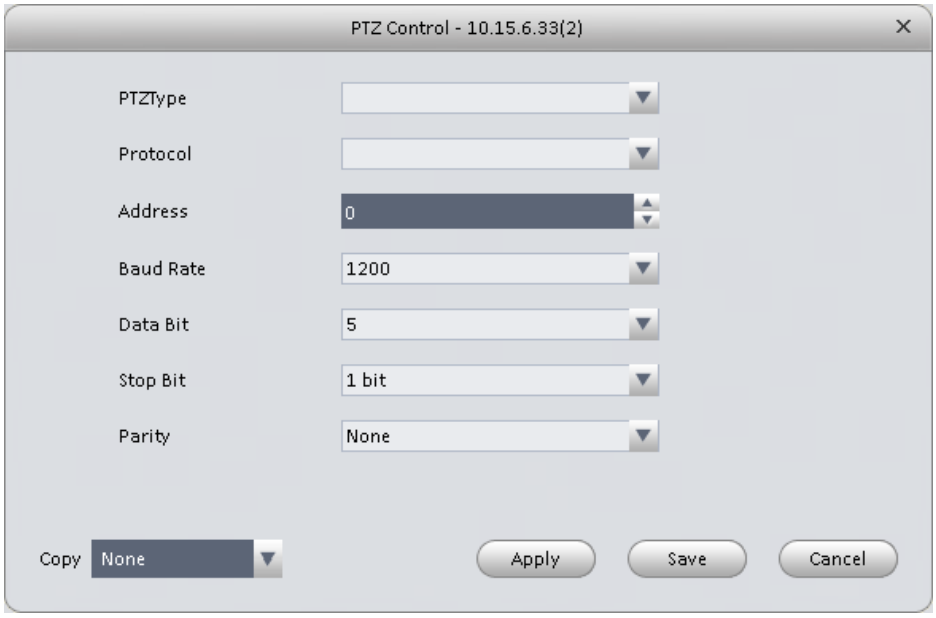

Figure 3-32

Please refer to the following sheet for detailed information.

Parameter	Function
Protocol	Select the corresponding dome protocol such as PELCOD.
Address	Set corresponding dome address. Default value is 1. **Please note your setup here shall comply with your dome address; otherwise you can not control the speed dome.**
Baud Rate	Select the dome baud rate. Please set according to the speed dome dial switch setup.
Data Bit	Please set according to the speed dome dial switch setup.
Stop bit	Please set according to the speed dome dial switch setup.
Parity	Please set according to the speed dome dial switch setup.

3.6.2 Event

3.6.2.1 Video Detect

The video detect includes three types:

- Motion detect: Through analyze video, system can enable motion detect alarm when it detects any moving signal that reaches the sensitivity threshold you set here.
- Video loss: This function allows you to be informed when video loss phenomenon occurred. You can enable alarm output channel and then enable show message function.
- Camera masking: When someone viciously masks the lens, or the output video is in one-color due to the environments light change, the system can alert you to guarantee video continuity.

Here we use motion detect interface as an example. See Figure 3-33.

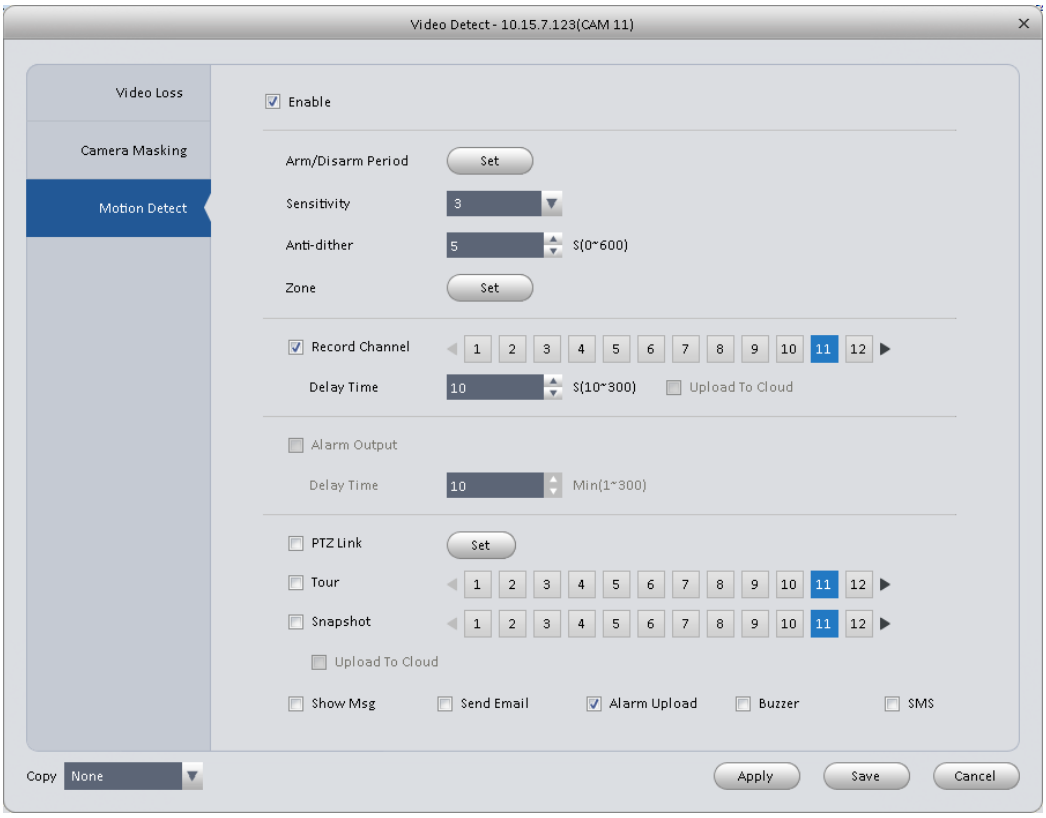

Figure 3-33

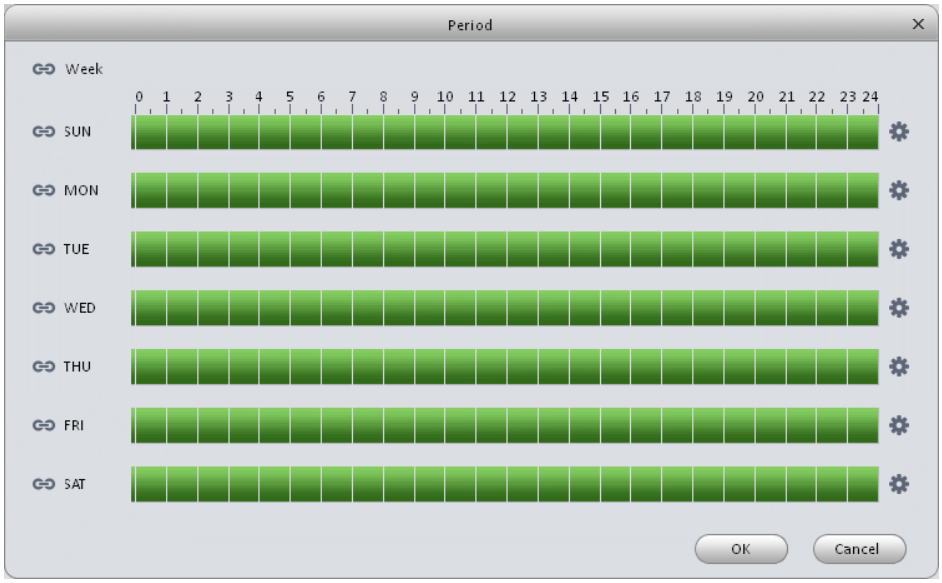

Figure 3-34

Figure 3-35

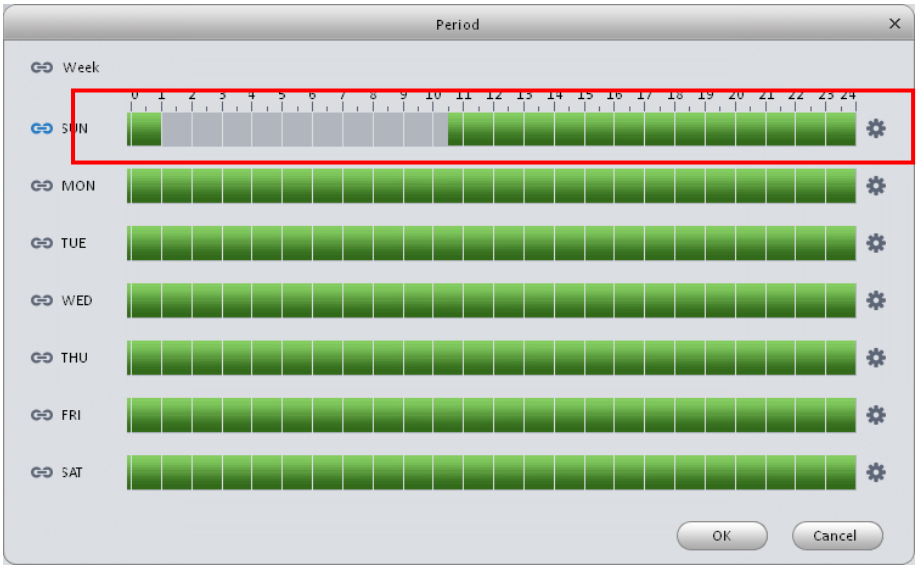

Figure 3-36

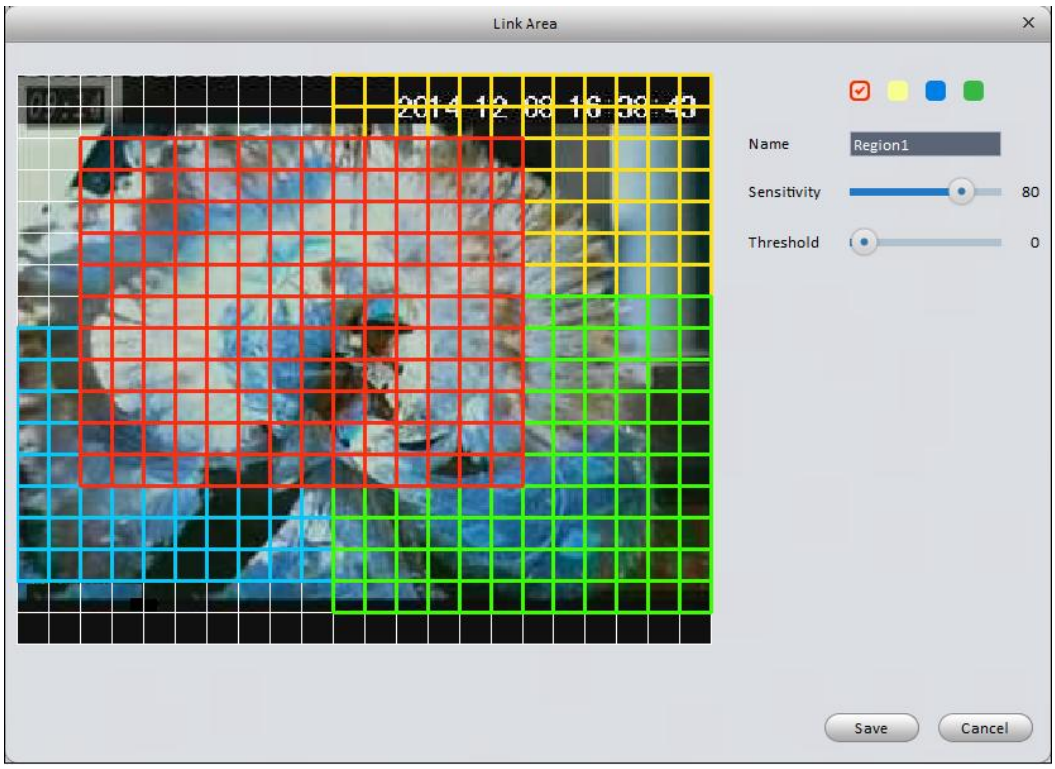

Figure 3-37

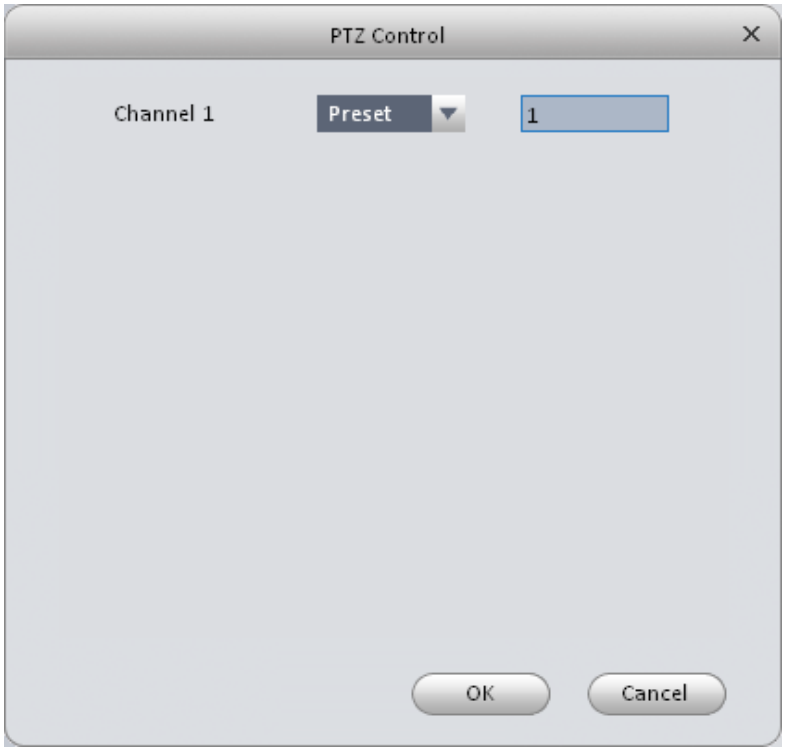

Figure 3-38

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	You need to check the box to enable motion detection function.

Parameter	Function
Arm/disarm Period	Motion detection function becomes activated in the specified periods. See Figure 3-34. There are six periods in one day. You can click to set (Figure 3-35) or use mouse to draw the corresponding period on the time bar directly (Figure 3-36). Click OK button, system goes back to motion detection interface, please click OK button to exit.
Anti-dither	System only memorizes one event during the anti-dither period. The value ranges from 5s to 100s.
Zone	You can click this button to set motion detection zone. The interface is shown as in Figure 3-37. Do remember clicking OK button to save your motion detection zone setup.
Record channel	If you select this parameter, then you perform motion detection alarm recording to this channel. Please note you need to select auto record in Record-> record control
Record Delay	System can delay the record for specified time after alarm ended.
Upload To Cloud	Check if to upload to Cloud.
Alarm output	Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when an alarm occurs.
Delay time	System can delay the alarm output for specified time after an alarm ended.
Show msg	System can pop up a message to alarm you in the local host screen if you enabled this function.
Buzzer	Check the box here to enable this function. The buzzer beeps when an alarm occurs.
Alarm upload	System can upload the alarm signal to the centre (Including alarm centre.
Send Email	If you enabled this function, System can send out an email to alert you when an alarm occurs.
SMS	If you enabled this function, System can send out a message to specified phone to alert you when an alarm occurs.
Tour	You need to check the box here to enable this function. System begins 1-wiindow or multiple-window tour display among the channel(s) you set to record when an alarm occurs.
PTZ Activation	Here you can set PTZ movement when alarm occurs. See Figure 3-38.

3.6.2.2 Alarm

Before operation, please make sure you have properly connected alarm devices such as buzzer. The input mode includes local alarm and network alarm.

The local alarm interface is shown as in Figure 3-39.

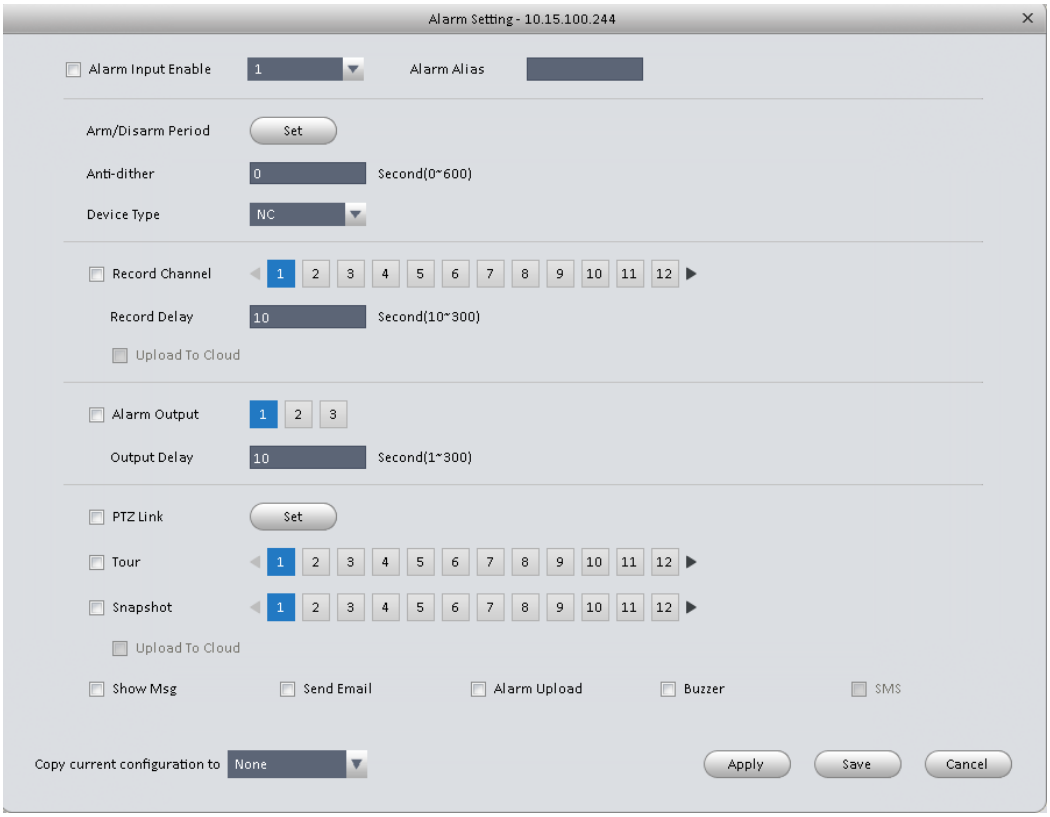

Figure 3-39

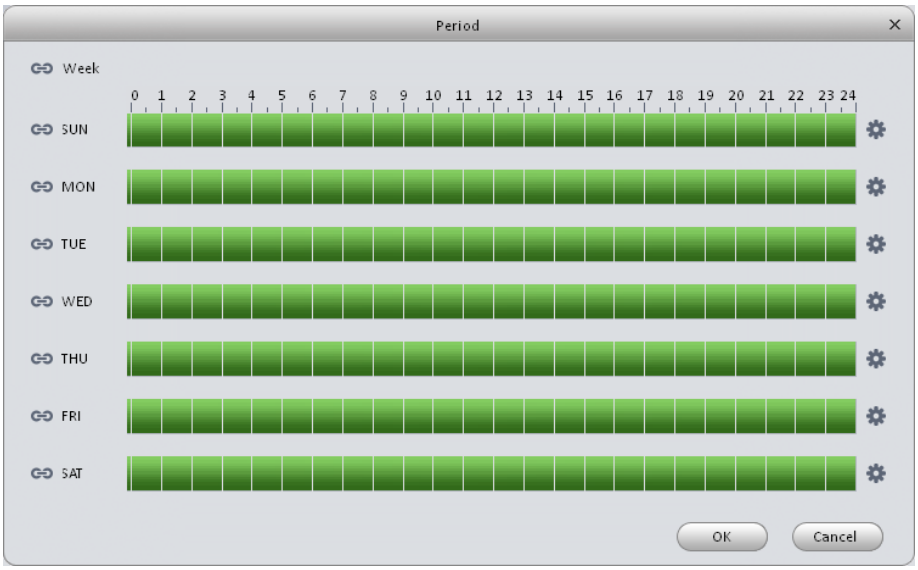

Figure 3-40

Figure 3-41

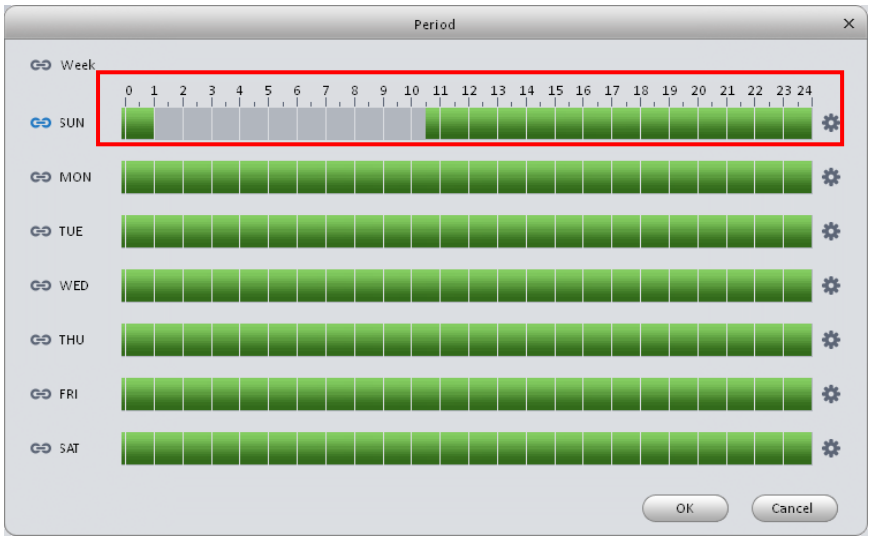

Figure 3-42

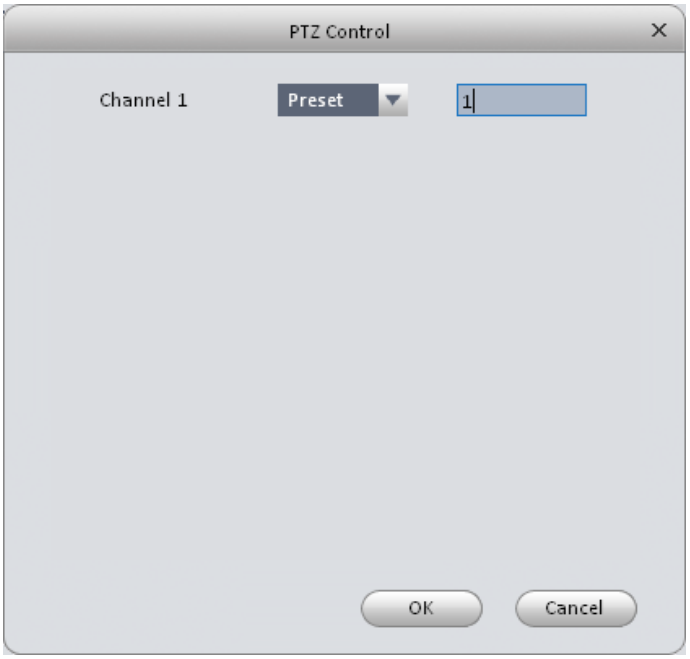

Figure 3-43

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	You need to check the box to enable this function. Please select a channel from the dropdown list.
Arm/disarm Period	This function becomes activated in the specified periods. There are six periods in one day. See Figure 3-40. There are six periods in one day. You can click to set (Figure 3-41) or use mouse to draw the corresponding period on the time bar directly (Figure 3-42). Click OK button, system goes back to alarm interface, please click OK button to exit.
Anti-dither	System only memorizes one event during the anti-dither period.
Device (Sensor) type	There are two options: NO/NC.
Record Delay	System can delay the record for specified time after alarm ended.
Output delay	System can delay the alarm output for specified time after an alarm ended.
Record channel	If you select this parameter, then you perform local alarm recording to this channel. Please note you need to select auto record in Record-> record control
Record Delay	Means when alarm link ends, record delay for a certain period of time before stop.
Alarm output	Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when an alarm occurs.

Parameter	Function
Show msg	System can pop up a message to alarm you in the local host screen if you enabled this function.
Buzzer	Check the box here to enable this function. The buzzer beeps when an alarm occurs.
Alarm upload	System can upload the alarm signal to the centre (Including alarm centre.
Send Email	If you enabled this function, System can send out an email to alert you when an alarm occurs.
SMS	If you enabled this function, System can send out a message to specified phone to alert you when an alarm occurs.
Tour	You need to check the box here to enable this function.
Snapshot	If you select this parameter, then the channel is config with alarm snapshot function.

3.6.2.3 Abnormality

It includes six statuses: No device, no space, device error, net offline, IP conflict and MAC conflict. See Figure 3-44 through Figure 3-49.

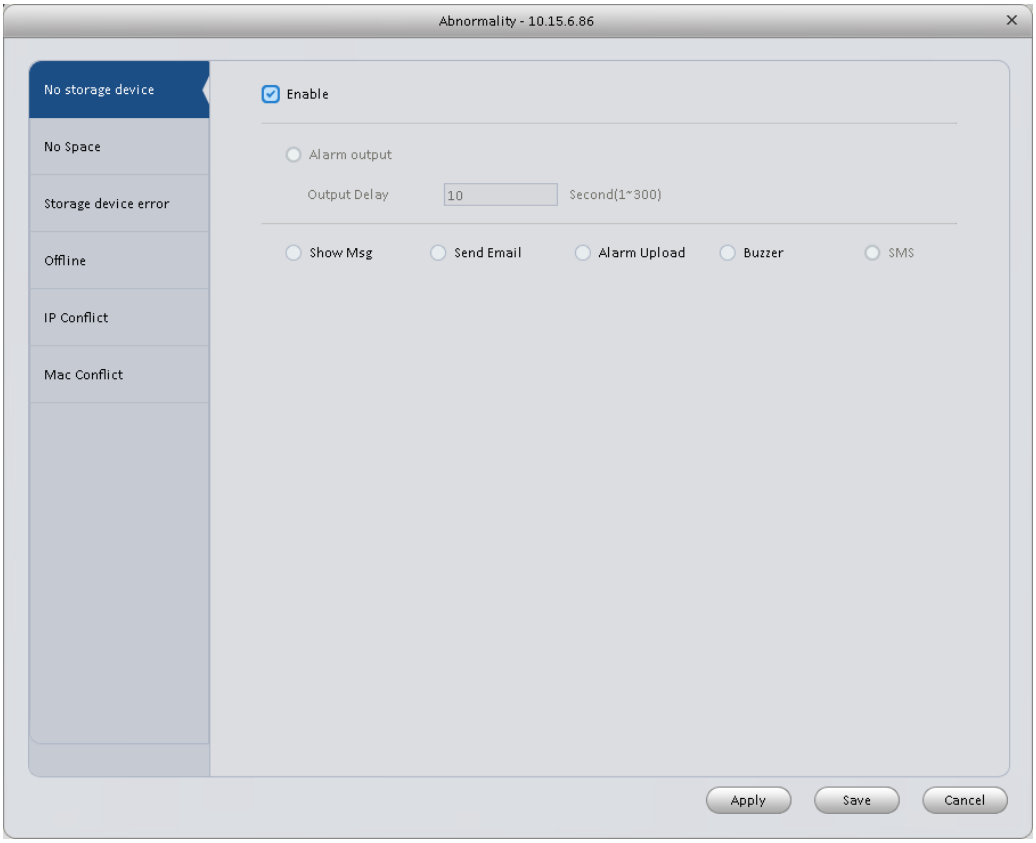

Figure 3-44

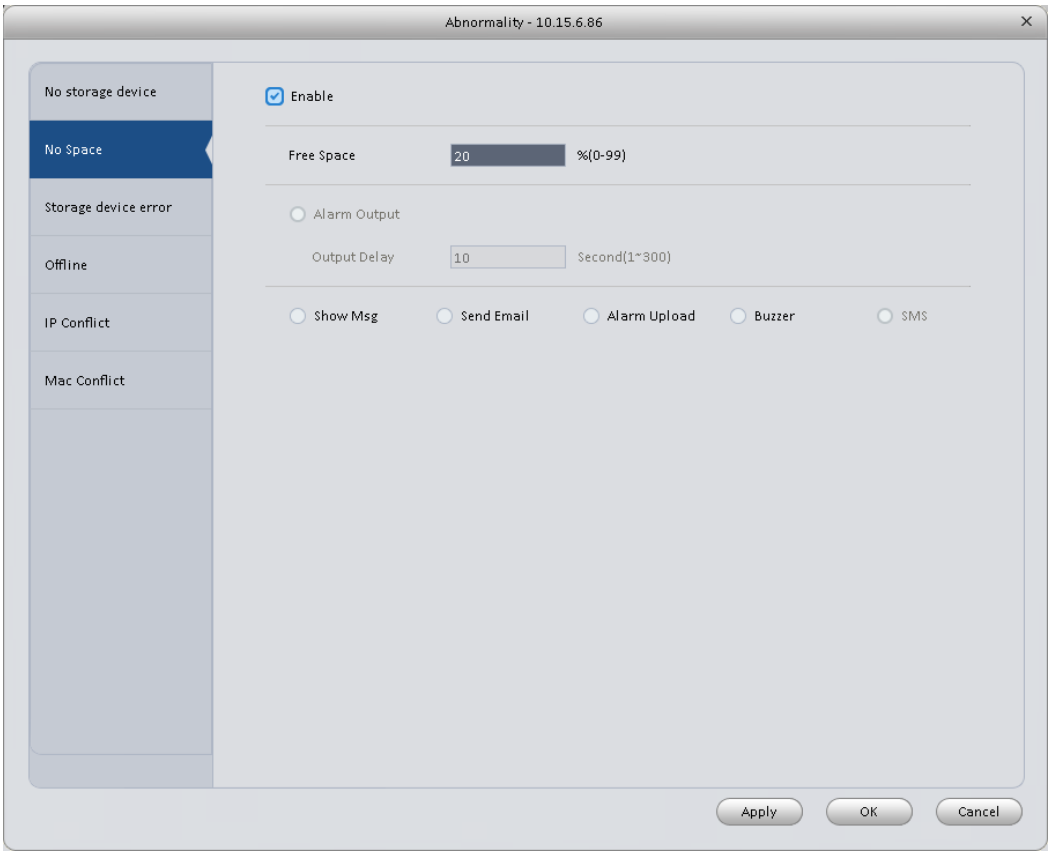

Figure 3-45

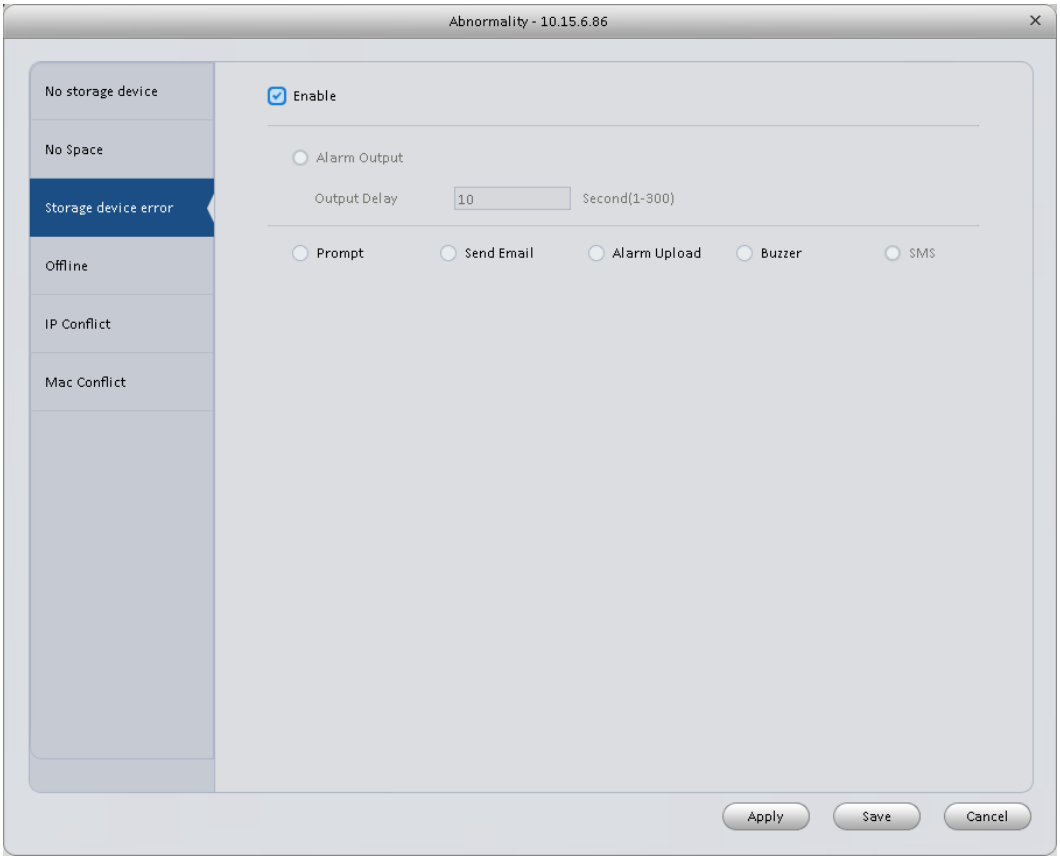

Figure 3-46

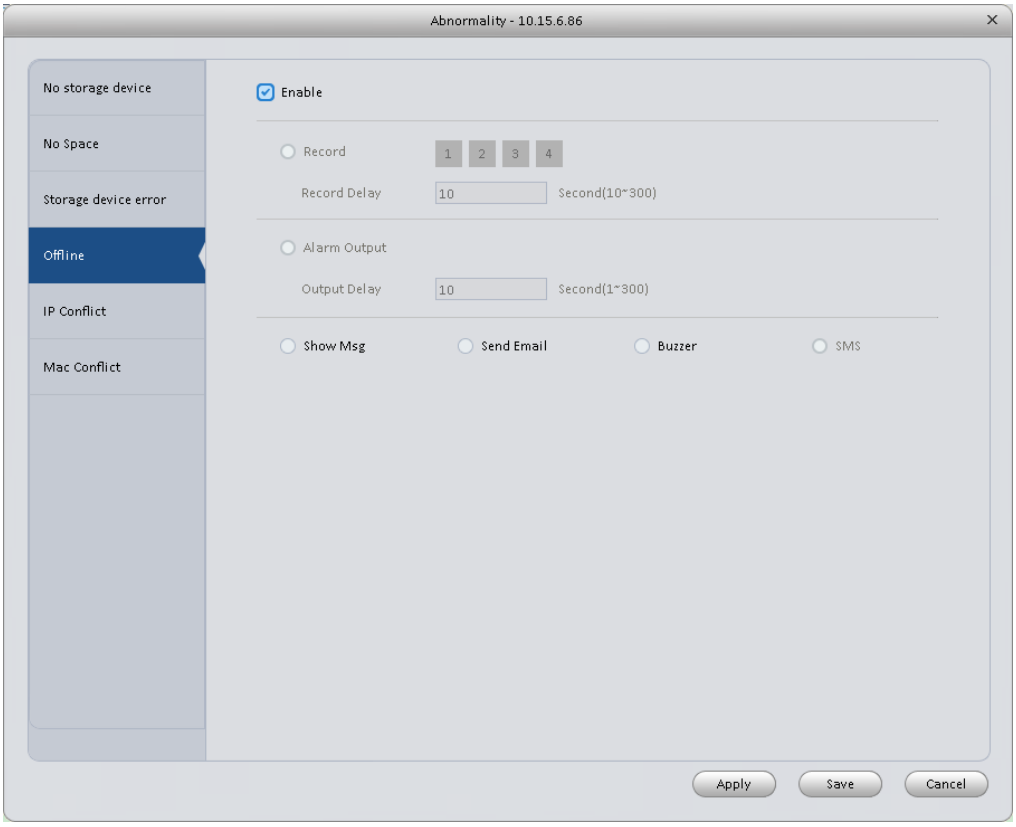

Figure 3-47

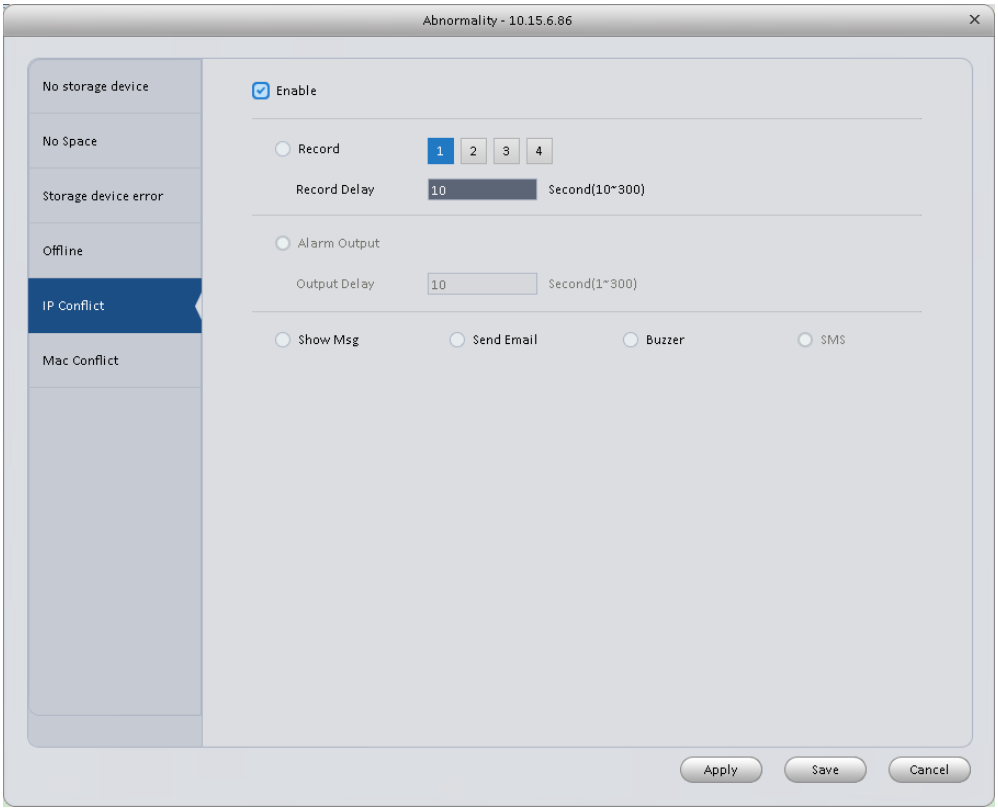

Figure 3-48

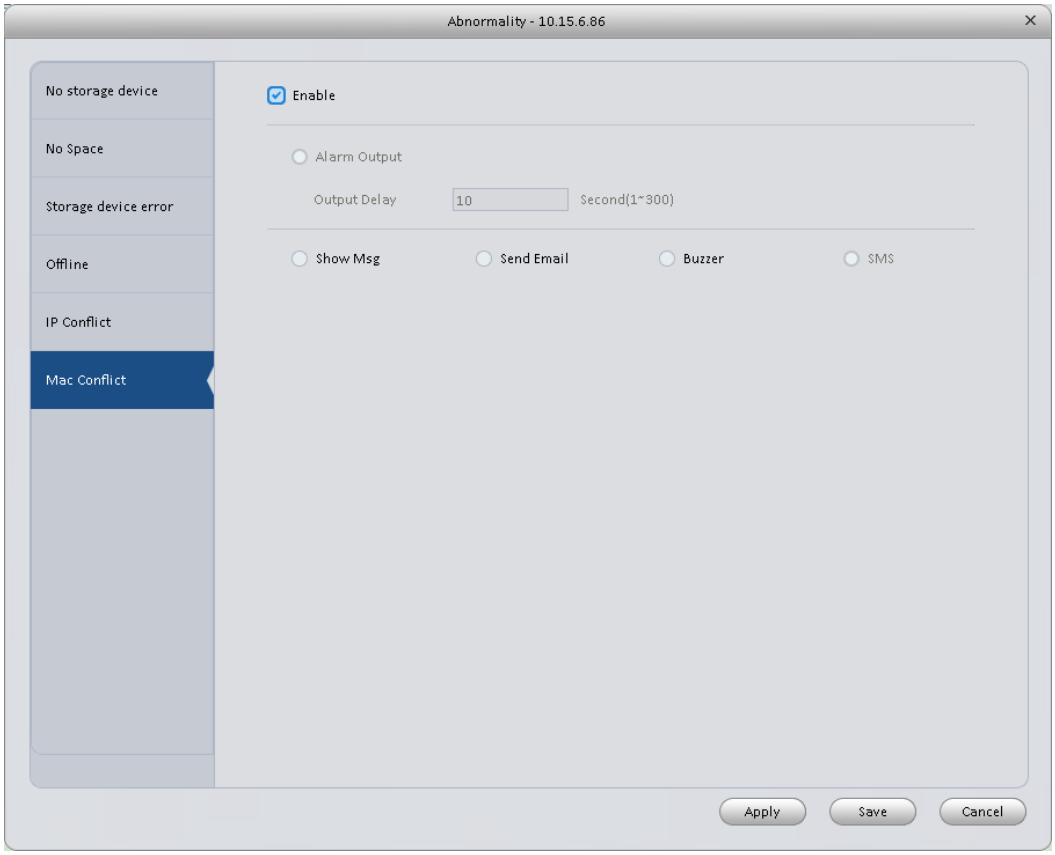

Figure 3-49

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	Check the box here to enable selected function.
Alarm Output	Please select corresponding alarm output channel when an alarm occurs. You need to check the box to enable this function.
Output delay	The alarm output can delay for the specified time after an alarm stops.
Show message	System can pop up a message to alarm you in the local host screen if you enabled this function.
Alarm upload	System can upload the alarm signal to the centre (Including alarm centre.
Send Email	If you enabled this function, System can send out an email to alert you when an alarm occurs.
Buzzer	Check the box here to enable this function. The buzzer beeps when an alarm occurs.
SMS	If you enabled this function, System can send out a message to specified phone to alert you when an alarm occurs.

3.6.2.4 Smart Config

SmartPSS supports to add SmartIPC and config added intelligent device, including audio detection config and face recognition. After config is complete, you can go to live interface for preview. Please refer to Ch 4.1.1.
See Figure 3-48.

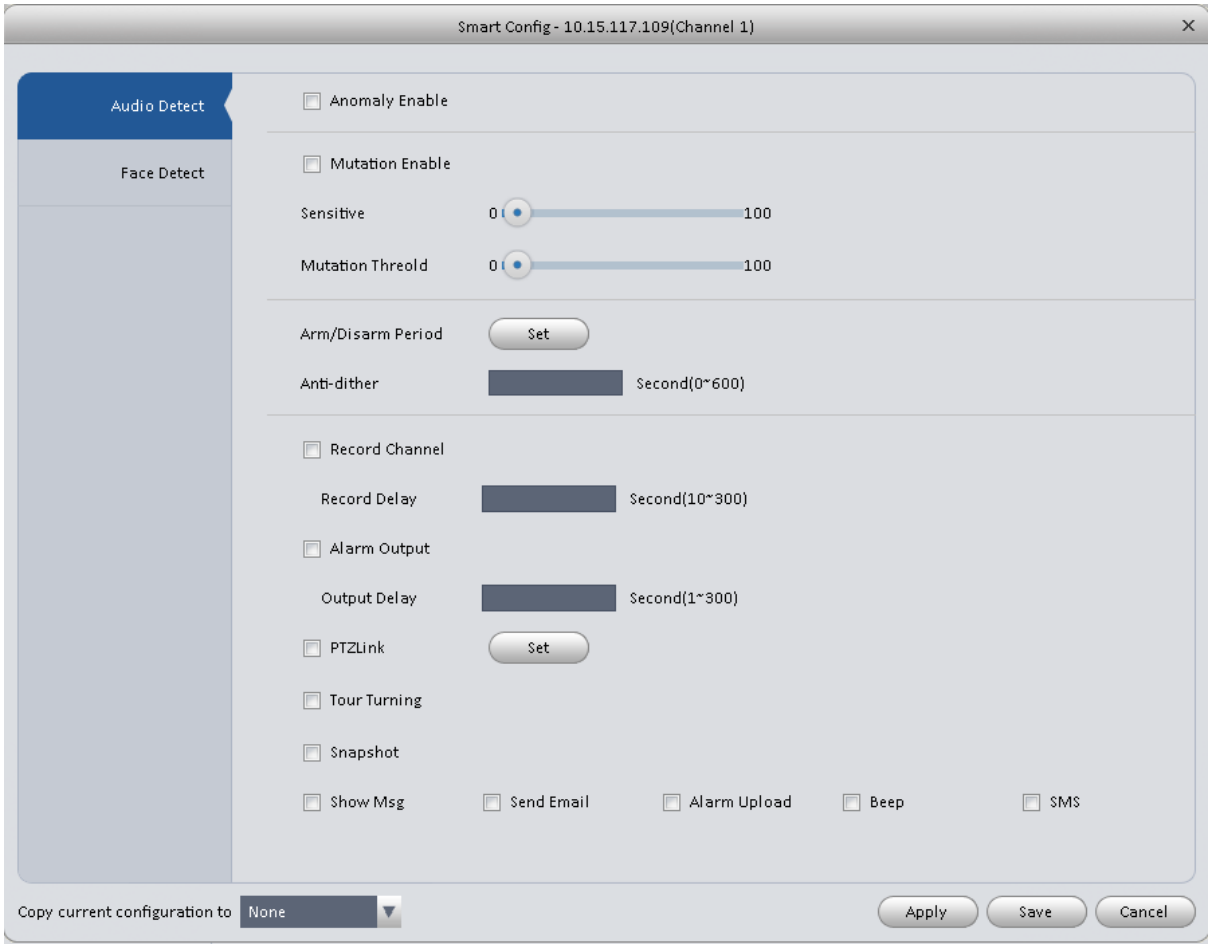

Figure 3-50

Parameter	Note
Abnormal Enable	If enable this parameter, then audio detection alarm is enabled.
Mutation Enable	May config sensitivity and mutation threshold. If select this parameter, then mutation detect is enabled. Sensitivity： 1-100 level adjustable. The smaller the value is, the more input sound volume change exceeds constant environmental sound and is judged as abnormal audio. User shall adjust according to actual environment. Mutation threshold：1-100 level adjustable. It is used to set filter of environmental sound intensity. If environmental noise is high, then you shall set this value high. Please set and adjust according to actual environment.

Parameter	Note
Arm/Disarm Period	Set alarm arm/disarm period. Click set pop up Arm/Disarm Period box for setup.
Anti-dither	Means only record one motion detection event within the period. Value range 0s～600s.
Record Channel	If select the parameter, then alarm record the channel. Go to “Record >Record Control” and select auto record.
Record Delay	Means when alarm link is end, motion detection record will remain for a period of time before stop.
Alarm Output	If select the parameter, then enable alarm link output port, so when alarm occurs, it can link corresponding alarm output device.
Output Delay	Means when alarm link ends, alarm will remain for a period of time before stop.
Snapshot	If select this parameter, then select this parameter, then this channel config motion detection snapshot function.
Send EMAIL	If select this parameter, then when alarm occurs, it send Email to user.
Alarm Upload	If select this parameter, then when alarms occurs, alarm will be sent to center.
SMS	If select this parameter, then when alarm occurs, user will receive SMS.

Face Detect is shown in Figure 3-49.

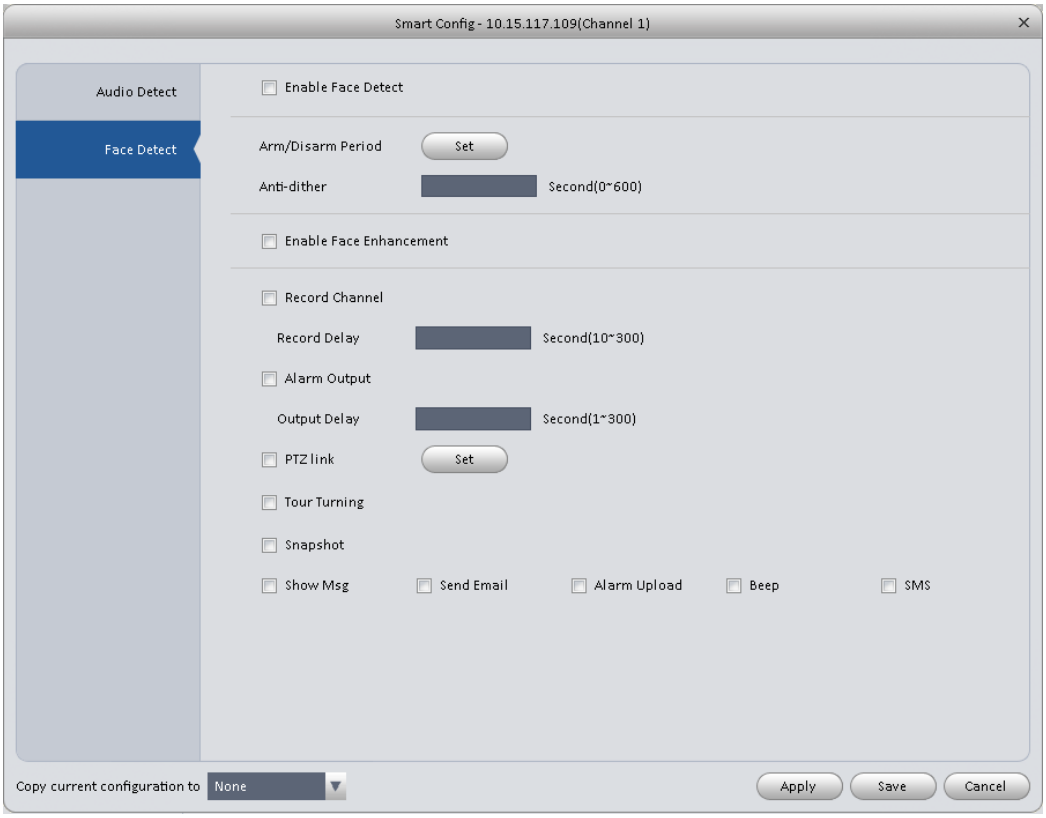

Figure 3-51

Parameter	Note
Enable	If select this parameter, it will link alarm.
Arm/Disarm Period	Set alarm arm/disarm period. Click setup to pop up arm/disarm period box.
Enable Face Enhancement	If select this parameter, then it enable dynamic trick.
Record Channel	If select this parameter, then the channel has record of alarm. Go to “Record > Record Control” and select “auto” record.
Record Delay	Means when alarm link ends, motion detection delays for a period of time.
Alarm Output	If select this parameter, then enable alarm link output port, when alarm occurs, may link alarm output device.
Output Delay	Means when alarm link ends, alarm delays for a period of time.
Snapshot	If select this parameter, then it configures dynamic snapshot function for this channel.
Send EMAIL	If select this parameter, then when alarm occurs, it send Email to user.
Alarm Upload	If select this parameter, then when alarms occurs, alarm will be sent to center.

Parameter	Note
SMS	If select this parameter, then when alarm occurs, user will receive SMS.

3.6.3 Record/Storage

3.6.3.1 Schedule

Record setup has record plan and record control.

- Record plan (schedule): Record during set period.
- Record control: Select mode of record.

You can set the corresponding period to enable schedule record function. You can follow the steps listed below to set schedule record function.

1) Click Schedule button, you can go to the following interface. See Figure 3-52.

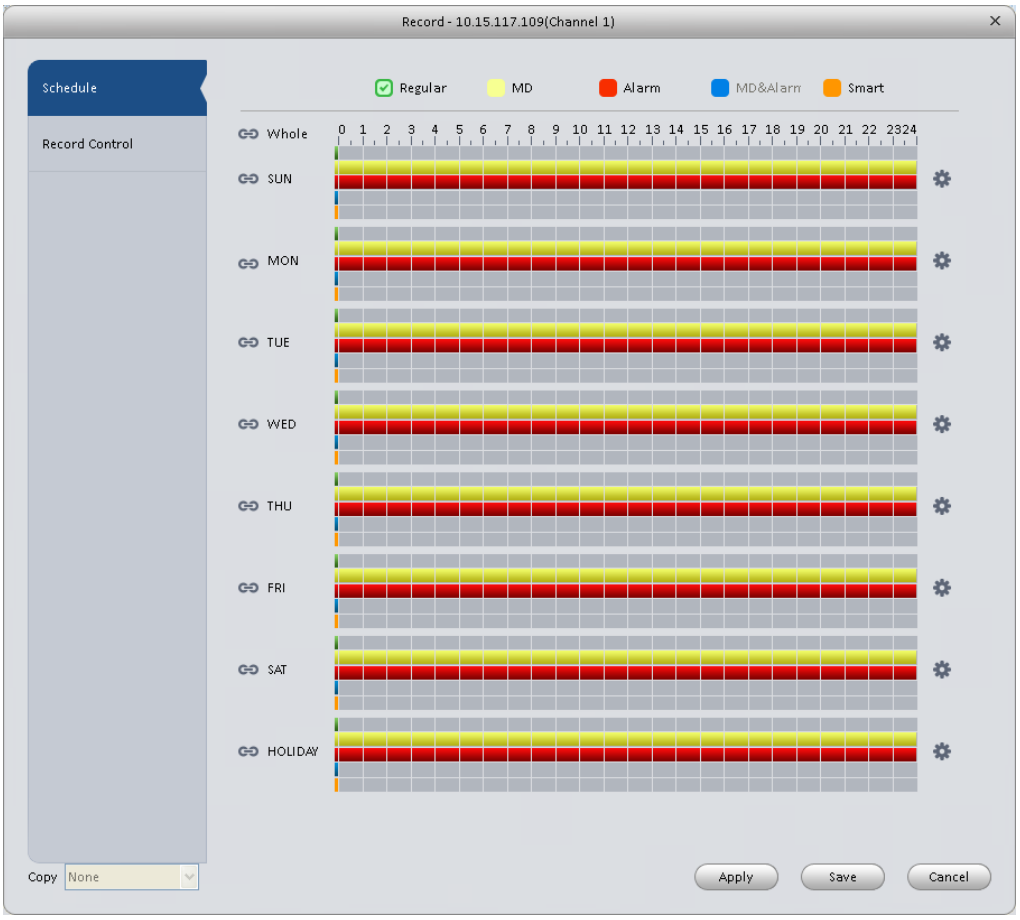

Figure 3-52

2) Click button after corresponding date, you can see an interface shown as below. See Figure 3-53.

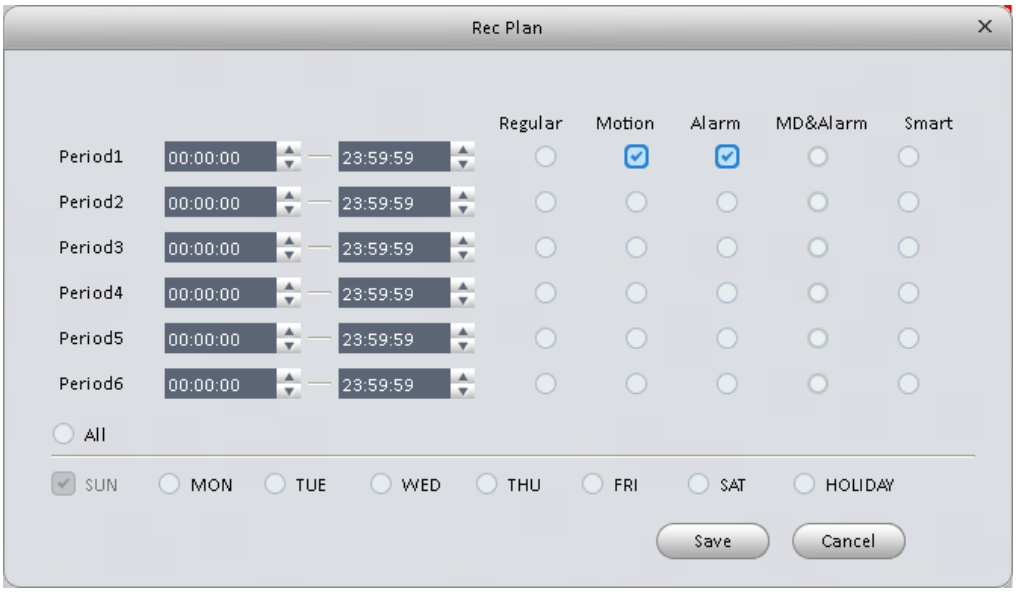

Figure 3-53

3) Set record period and check the box to select record type. Click OK button, now you can see an interface shown as in Figure 3-54.

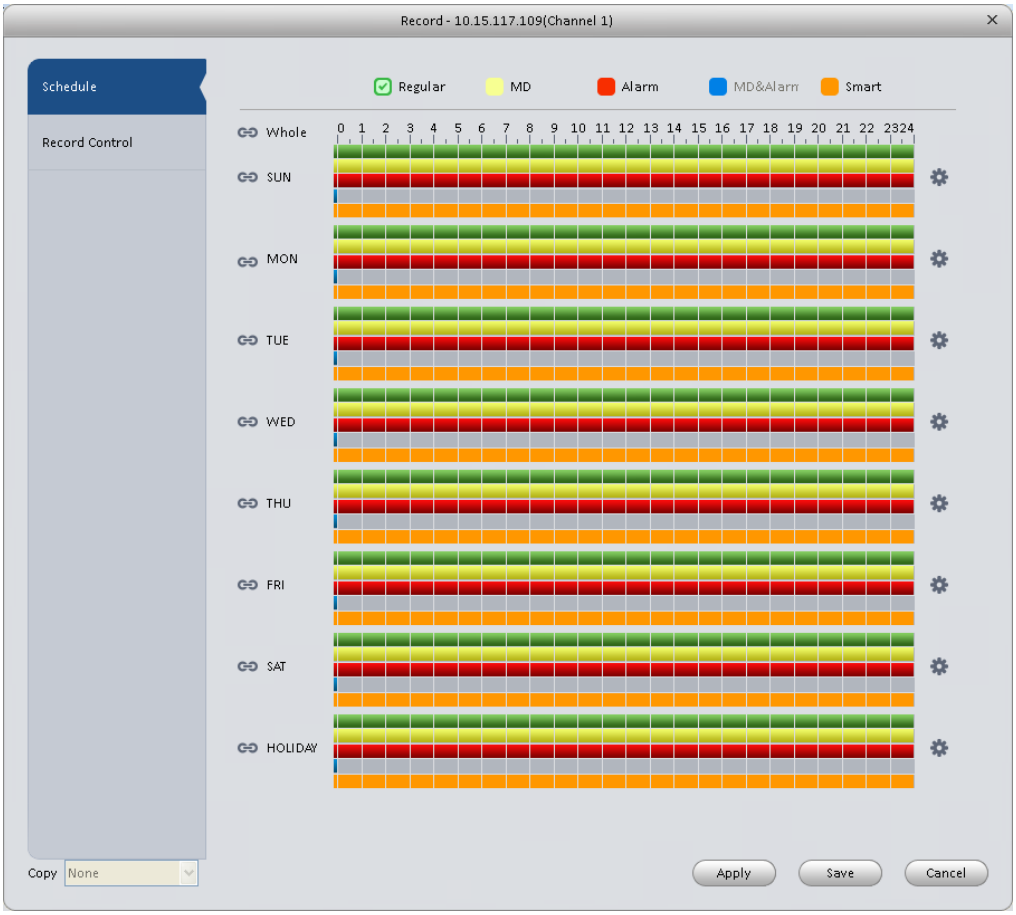

Figure 3-54

You can view the current time period setup from the color bar.

- Green color stands for the general record.
- Yellow color stands for the motion detect record.
- Red color stands for the alarm record.
- Blue color stands for MD and alarm record.
- Orange color stands for smart alarm record.

Tips

Choose the channel you want, then click save button to copy current setup

3.6.3.1.1 Record Control

It is for you to set record control mode. See Figure 3-55.

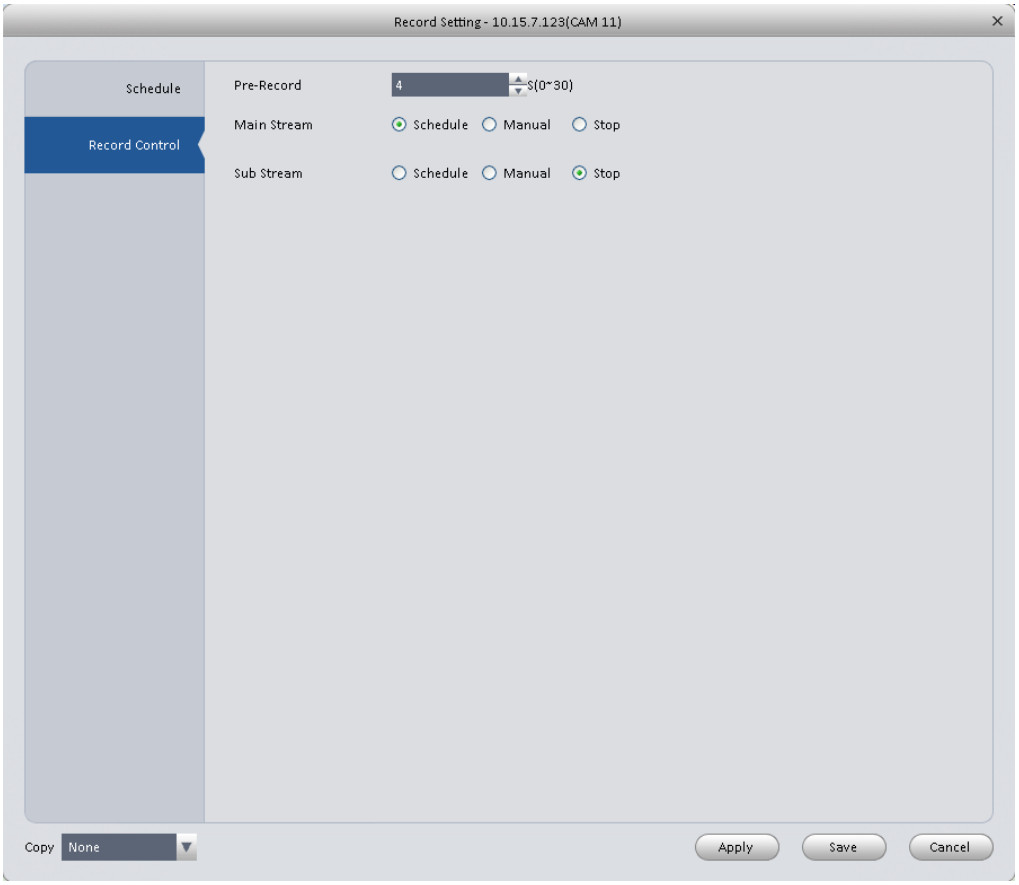

Figure 3-55

Please refer to the following sheet for detailed information.

Parameter	Function
Pre-record	Please input pre-record time here.
Main stream	It is to set main stream record mode. It includes: Schedule/manual/stop.
Sub stream	It is to set sub stream record mode. It includes: Schedule/manual/stop.

3.6.3.2 Disk

3.6.3.2.1 Local Store

The local interface is shown as in Figure 3-56. Here you can save data to local SD card or HDD and meanwhile view health status of HDD.

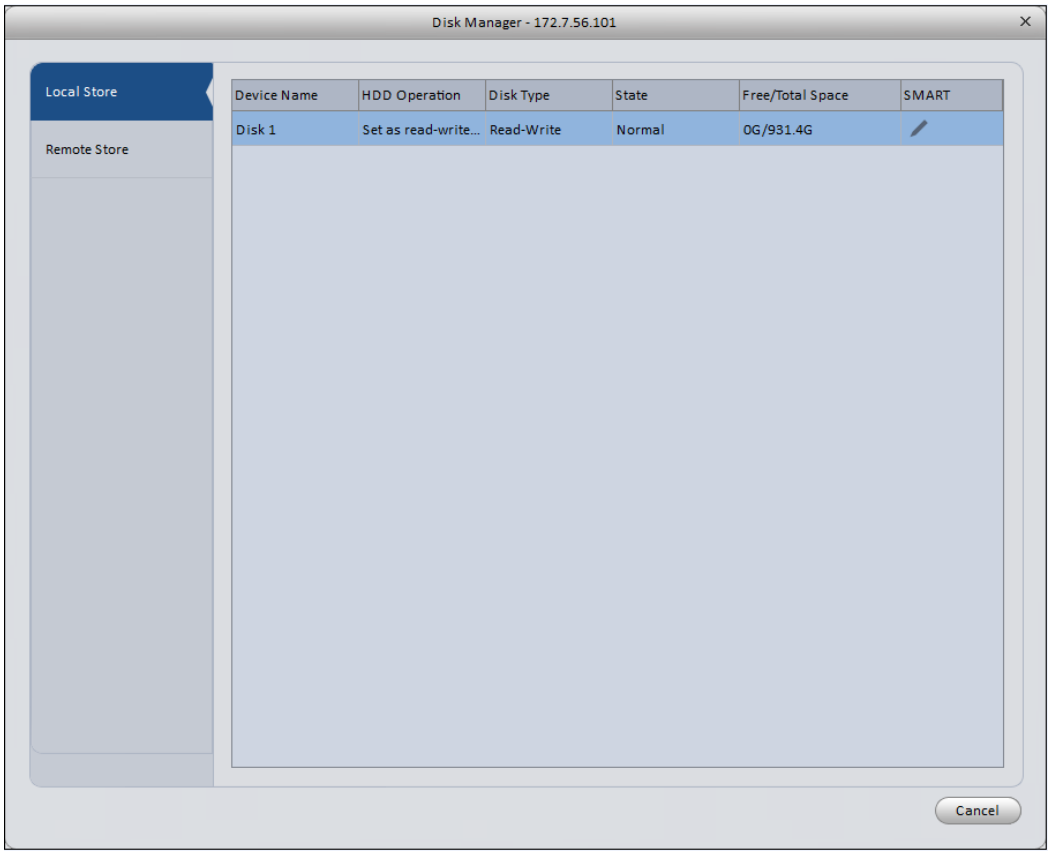

Figure 3-56

3.6.4 Maintenance

3.6.4.1 Account

Here you can add/modify/delete a group or add/modify/delete a user. System default user group is admin/user. System default user is admin/888888/666666.

Click Account button in Signals interface and then click Role button. See Figure 3-57.

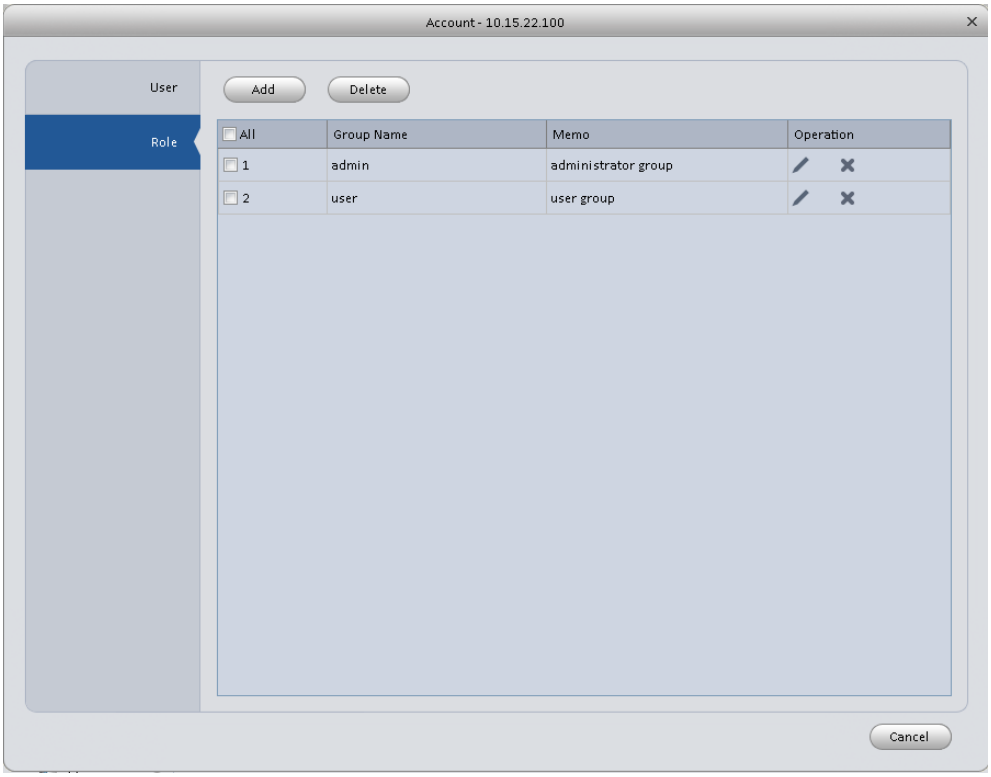

Figure 3-57

Click Add button, you can see system pops up the following interface. See Figure 3-58. Please input a group name and then select corresponding rights, input some note information for your reference if necessary. Click OK button to exit.

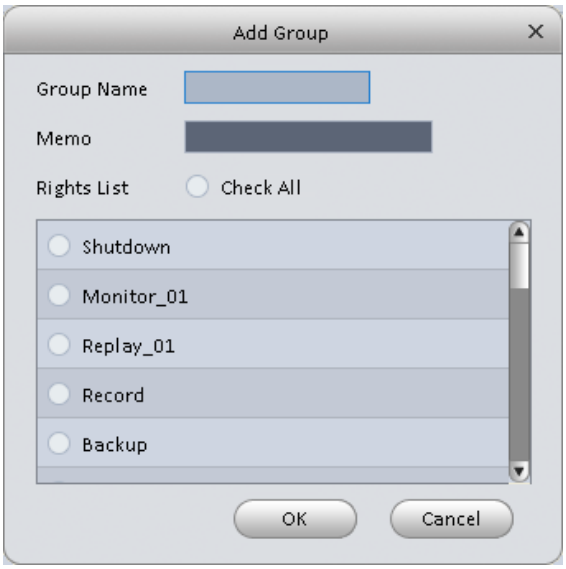

Figure 3-58

Go to the User interface, here you can add/remove user and modify user name. See Figure 3-59.

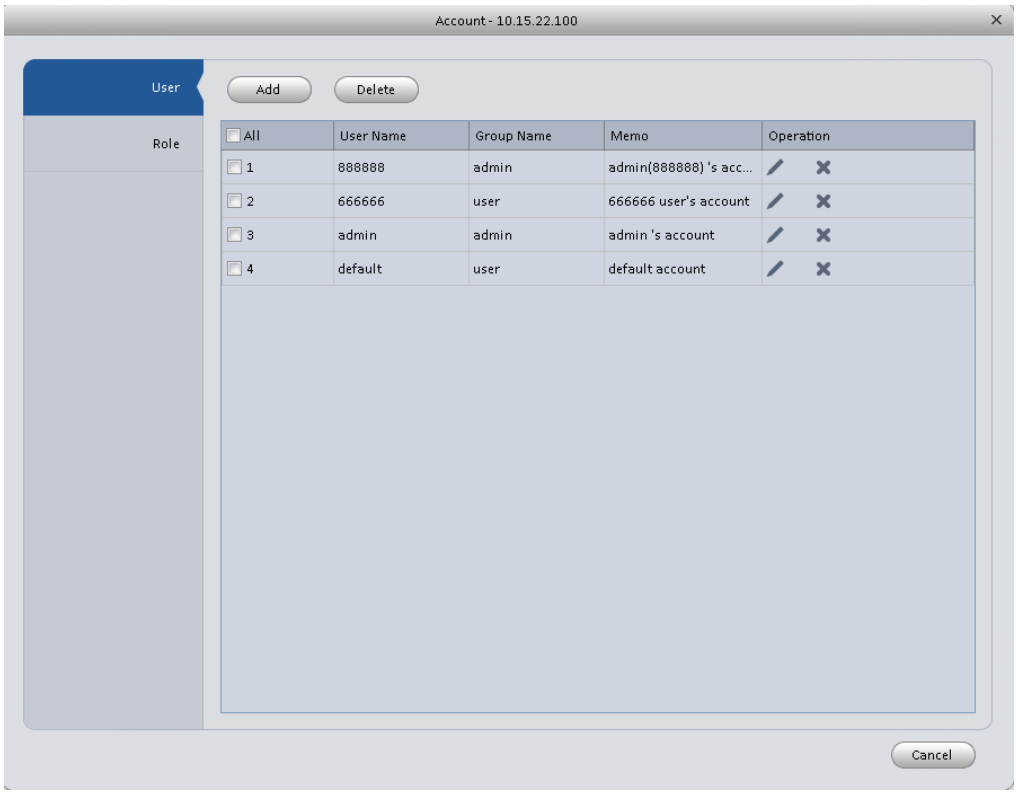

Figure 3-59

Click Add button, you can see the following interface. See Figure 3-60. Please input user name, password, and select a group from the dropdown list. Select corresponding rights and then click OK button.

Tips

If you want to multiple users to use this account login at the same time, you need to check the box to select reusable function.

Figure 3-60

3.6.4.2 Maintenance

3.6.4.2.1 Host

Here you can set system time, date format, record period and etc. See Figure 3-61.

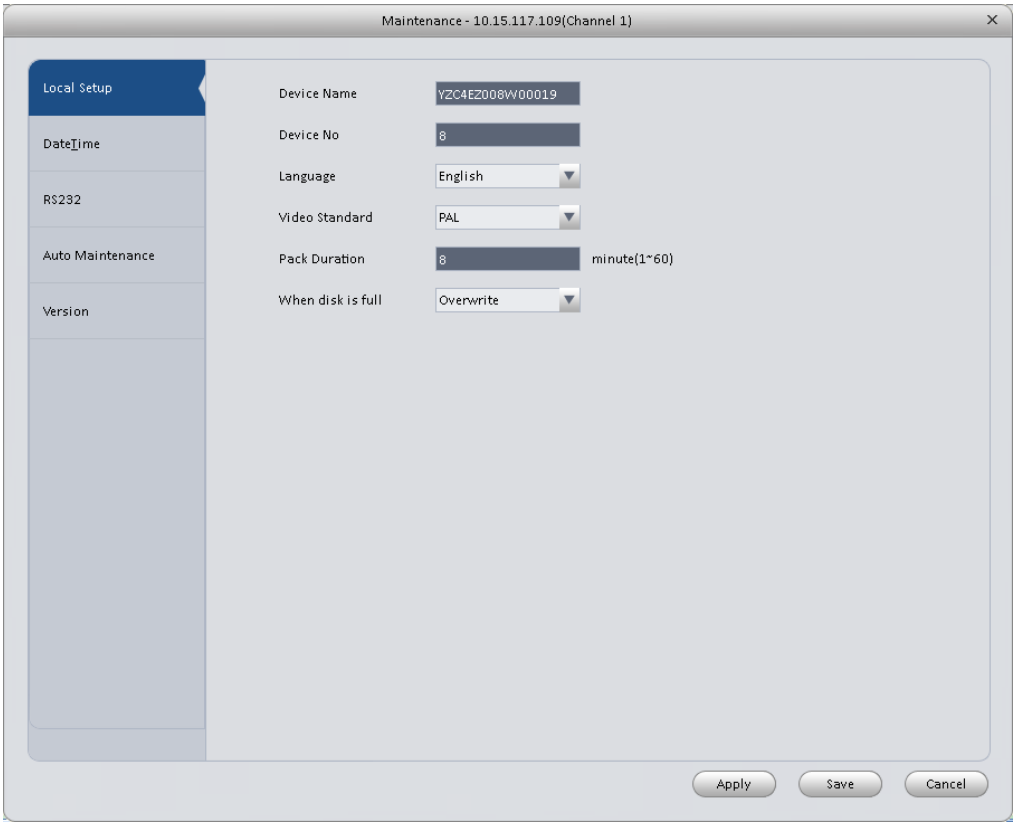

Figure 3-61

Please refer to the following sheet for detailed information.

Parameter	Function
Device name	It is to set device name.
Device No.	When you are using one remote control to manage multiple devices, you can give a serial numbers to the device. Before the operation, please make sure you have clicked address button on the remote control and input a number for current device.
Language	You can select the language from the dropdown list. **Please note the device needs to reboot to get the modification activated.**
Video Standard	This is to display video standard such as PAL.
HDD full	Here is for you to select working mode when hard disk is full. There are two options: stop recording or rewrite. • If current working HDD is overwritten or the current HDD is full while the next HDD is no empty, then system stops recording, • If the current HDD is full and then next HDD is not empty, then system overwrites the previous files.
Pack duration	Here is for you to specify record duration.

3.6.4.2.2 Date&Time

The date and time interface is shown as in Figure 3-62.

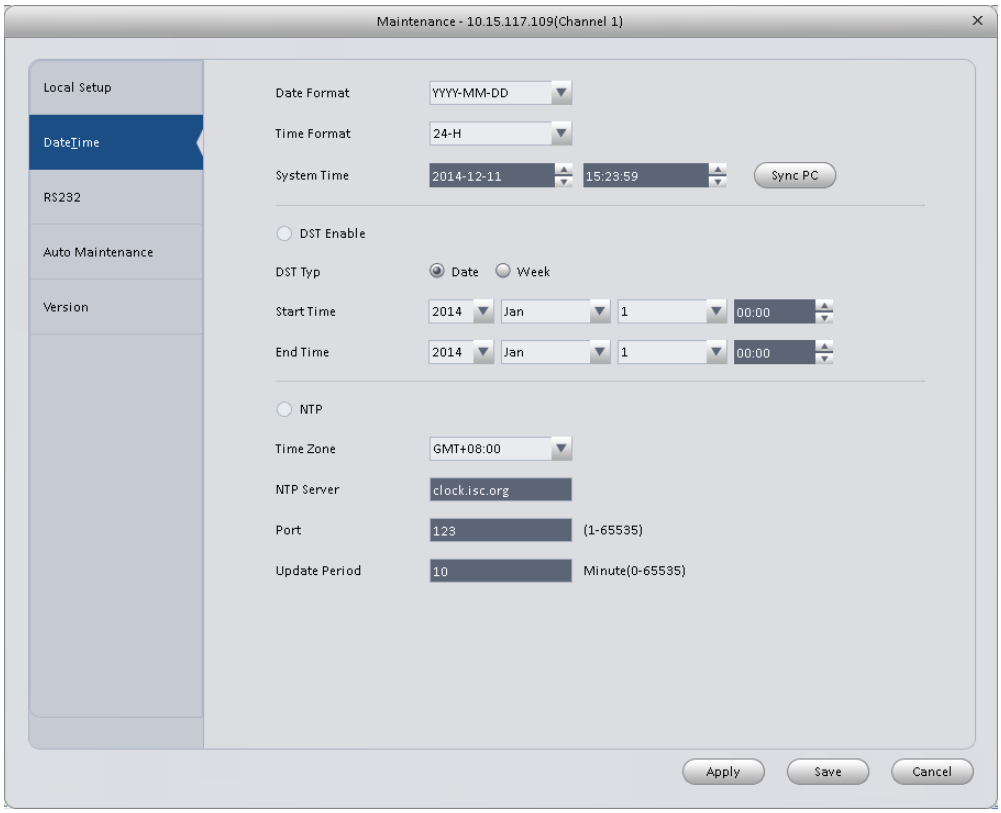

Figure 3-62

Please refer to the following sheet for detailed information.

Parameter	Function
Date format	Here you can select date format from the dropdown list.
Time Format	There are two options: 24-H and 12-H.
Time zone	The time zone of the device.
System time	It is to set system time. It becomes valid after you set.
Sync PC	You can click this button to save the system time as your PC current time.
DST enable	Here you can set day night save time begin time and end time. You can set according to the date format or according to the week format.
NTP	You can check the box to enable NTP function.
NTP server	You can set the time server address.
Port	It is to set the time server port.
Update period	It is to set the sync periods between the device and the time server.

3.6.4.2.3 RS232

The RS232 interface is shown as in Figure 3-63.

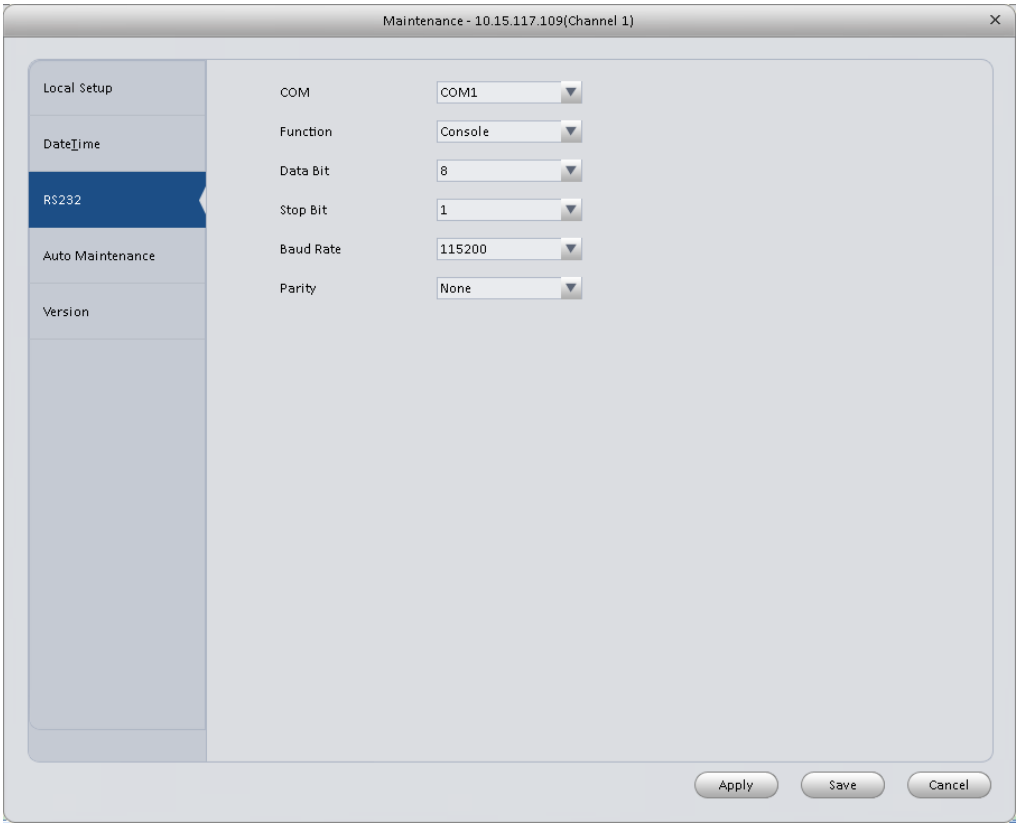

Figure 3-63

Please refer to the following sheet for detailed information.

Parameter	Function
COM	You can select from the dropdown list.
Function	There are various devices for you to select. ● Console is for you to use the COM or mini-end software to upgrade or debug the program. ● The control keyboard is for you to control the device via the special keyboard. ● Transparent COM (adapter) is to connect to the PC to transfer data directly. ● Protocol COM is for card overlay function. ● Network keyboard is for you to use the special keyboard to control the device.
Baud Rate	Default setup is 115200.
Data Bit	Default setup is 8.
Stop bit	Default setup is 1.
Parity	Default setup is none.

3.6.4.2.4 Auto Maintenance

Here you can set auto-reboot time and auto-delete old files setup. You can set to delete the files for the specified days. See Figure 3-64.

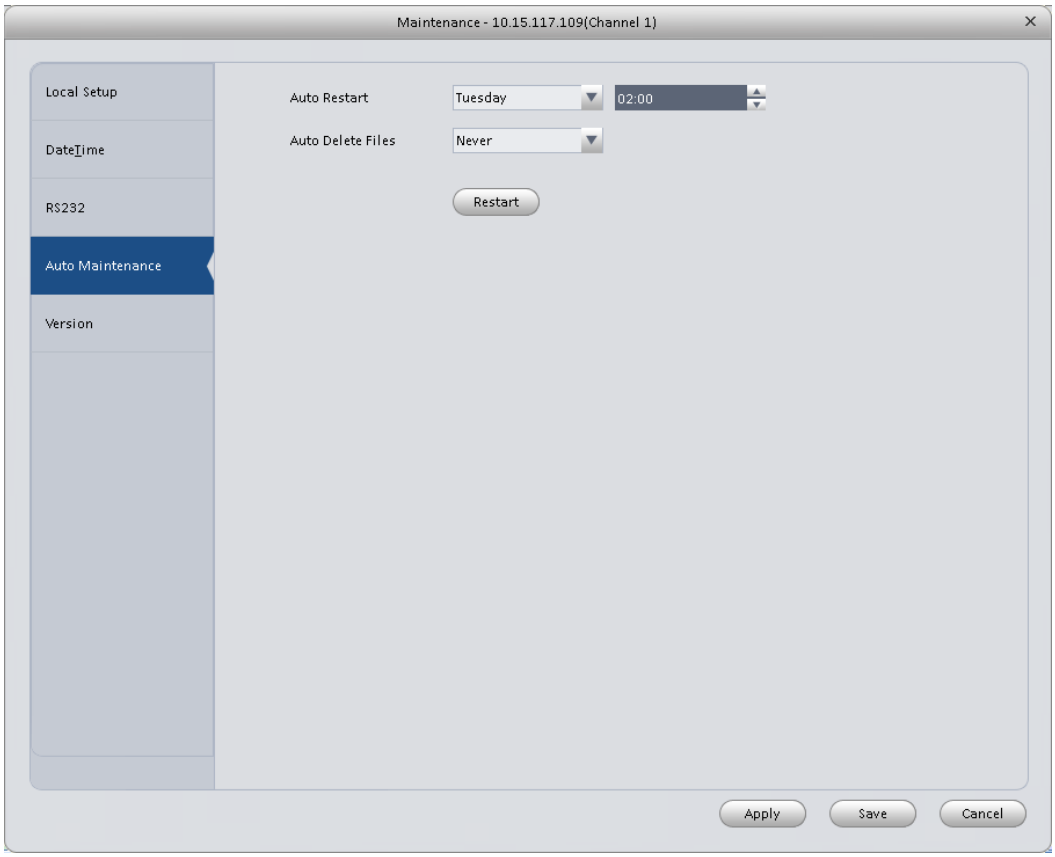

Figure 3-64

3.6.4.2.5 Version

Version interface is shown as below. See Figure 3-65.

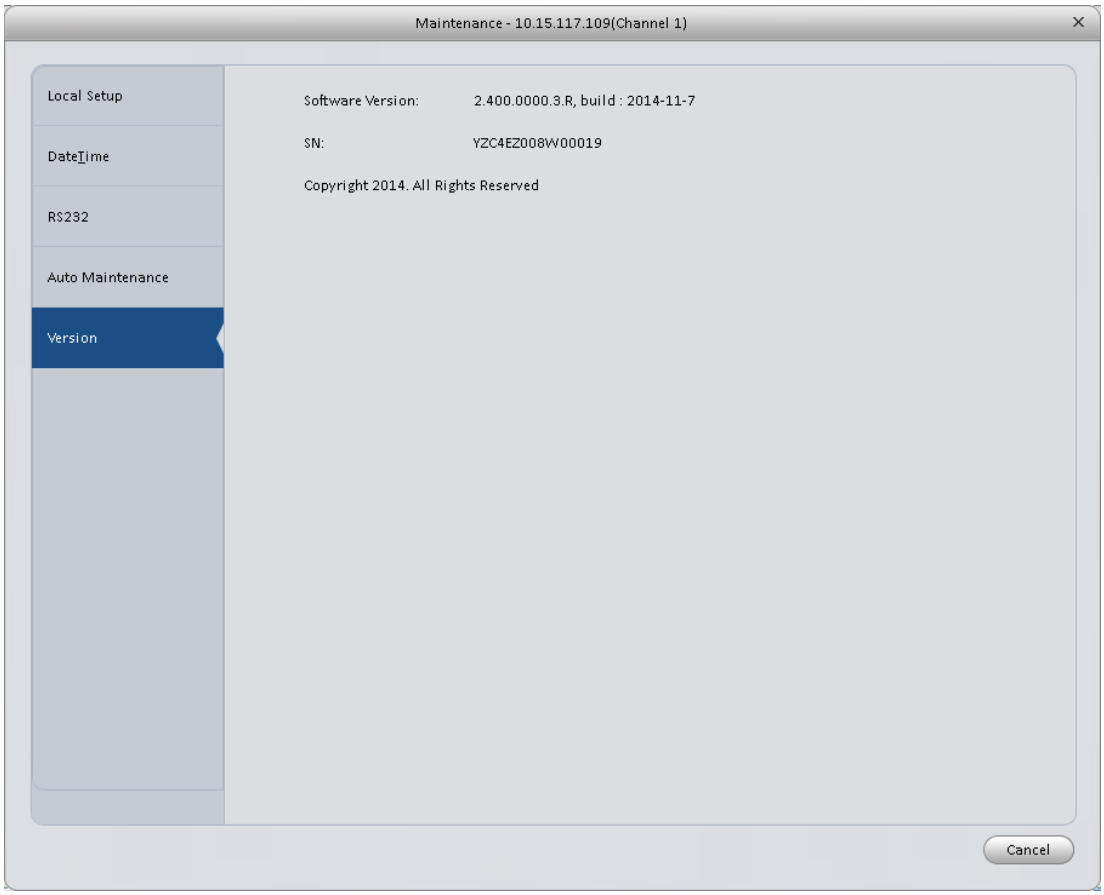

Figure 3-65

3.6.4.3 WEB

Click it to go to the WEB of the device. See Figure 3-66. The following figure is for reference only.

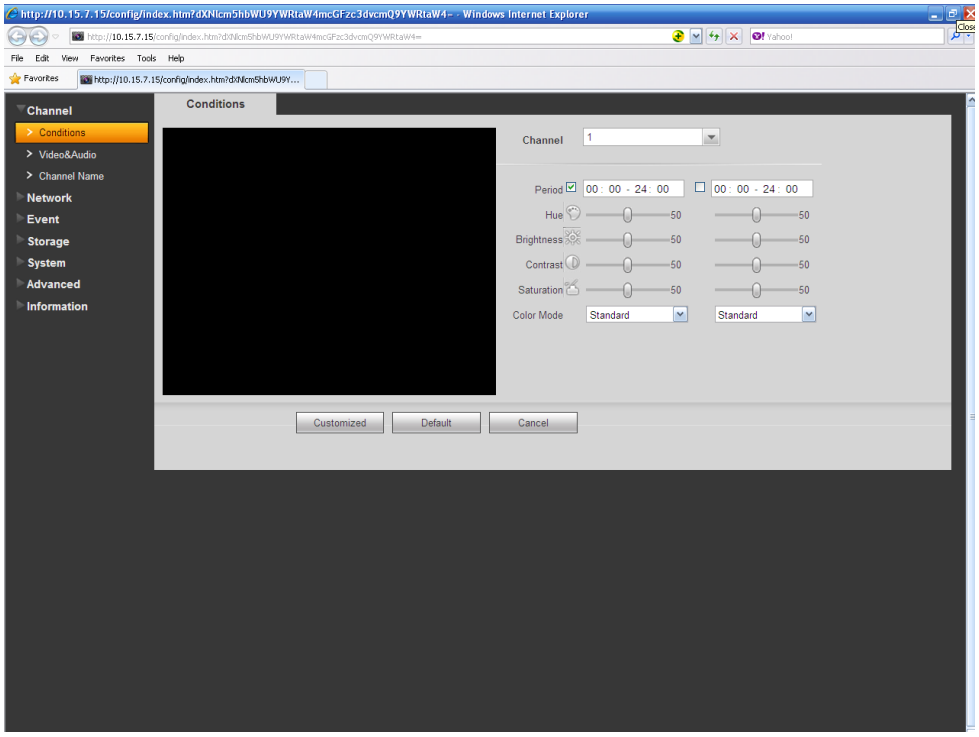

Figure 3-66

3.7 Alarm Setup

3.7.1 Set Alarm Scheme

You can follow the steps listed below to set an alarm scheme.

1) Click the icon in the Settings pane, you can go to alarm configuration interface. See Figure 3-67.

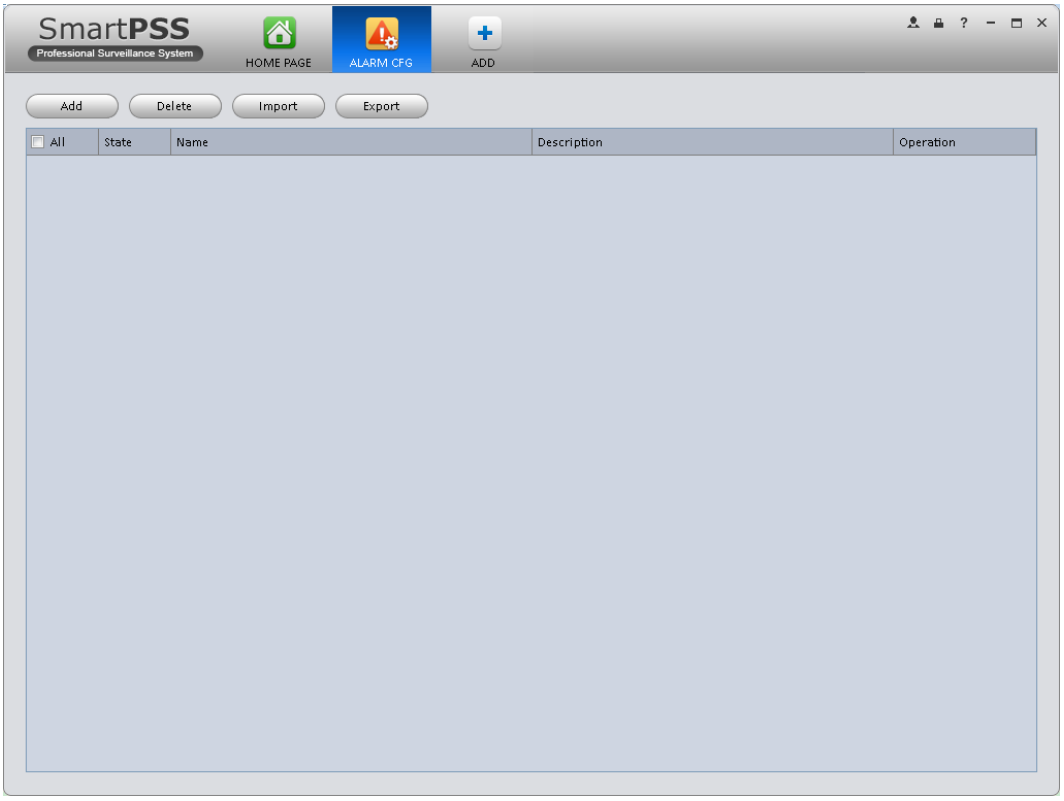

Figure 3-67

2) Set alarm sources.

   a) Click  button in Figure 3-67 , system goes to alarm sources setup interface. See Figure 3-68.

3) Here you can input a scheme name and some reference information. select the alarm type from the dropdown list.

a) Check the box to select a channel you want to set alarm scheme on the left pane; you can add it to the list on the right pane.

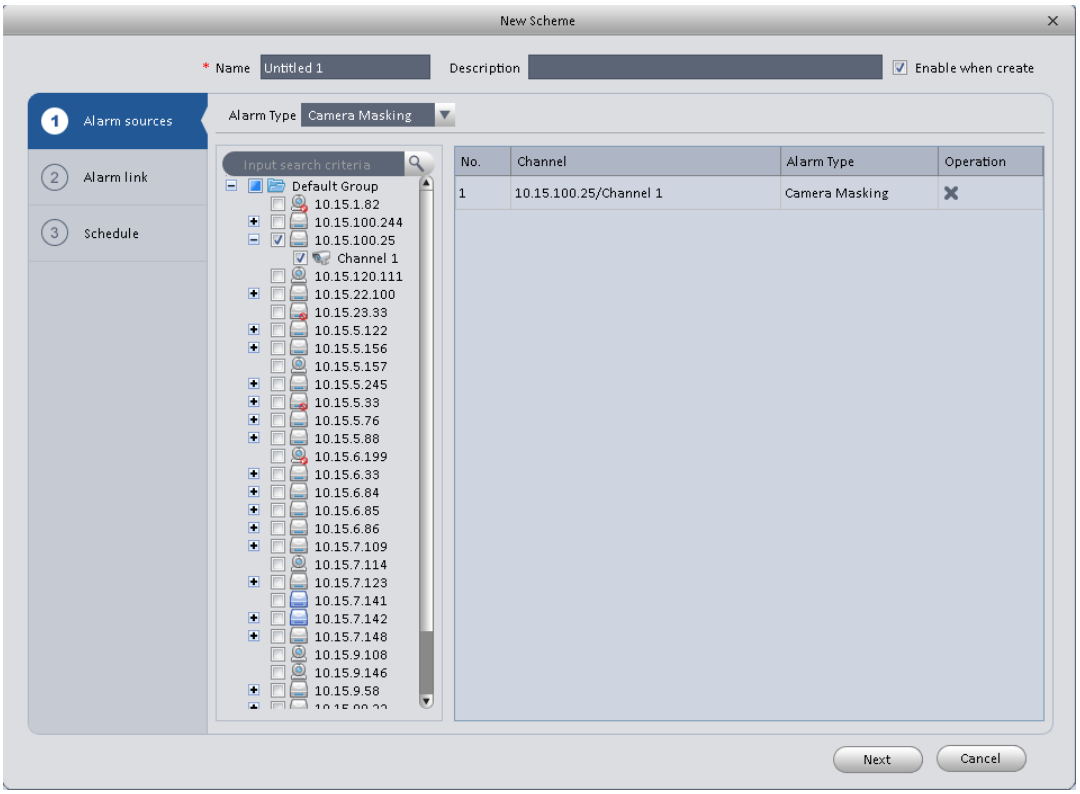

Figure 3-68

b) Click Alarm Link on the left pane or click next button in Figure 3-68 , you can go to the following interface. Please check the trigger channel in Figure 3-69 and alarm output channel in Figure 3-70.

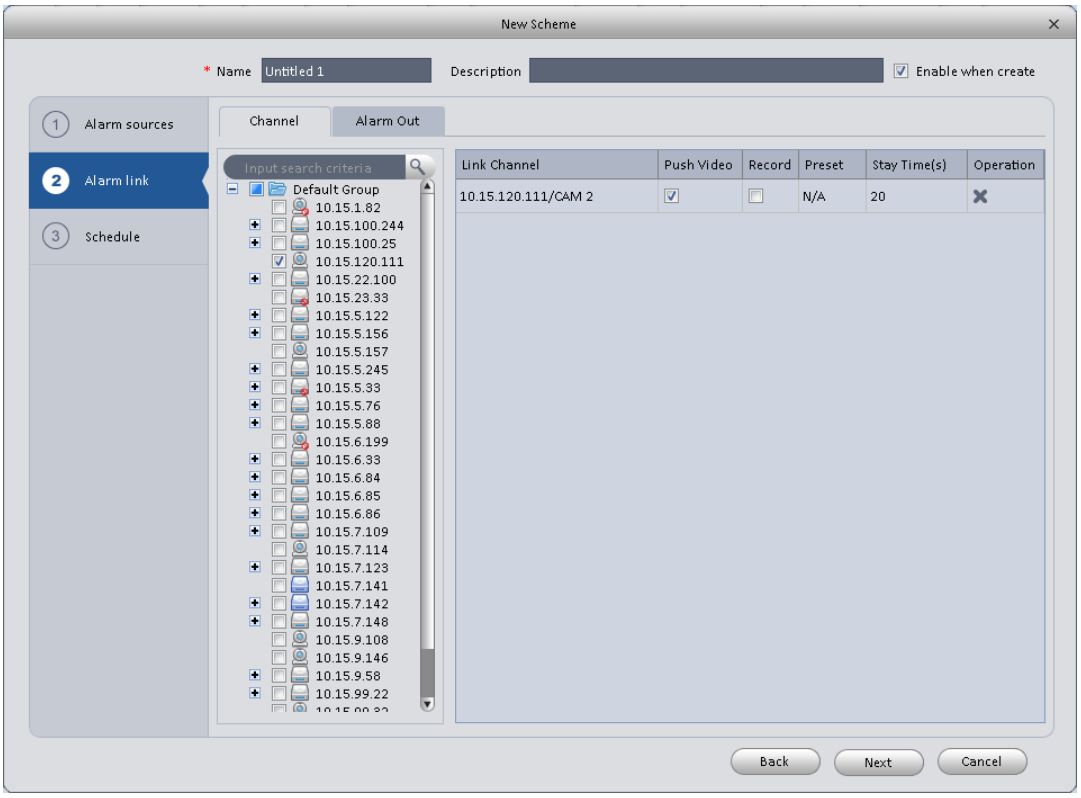

Figure 3-69

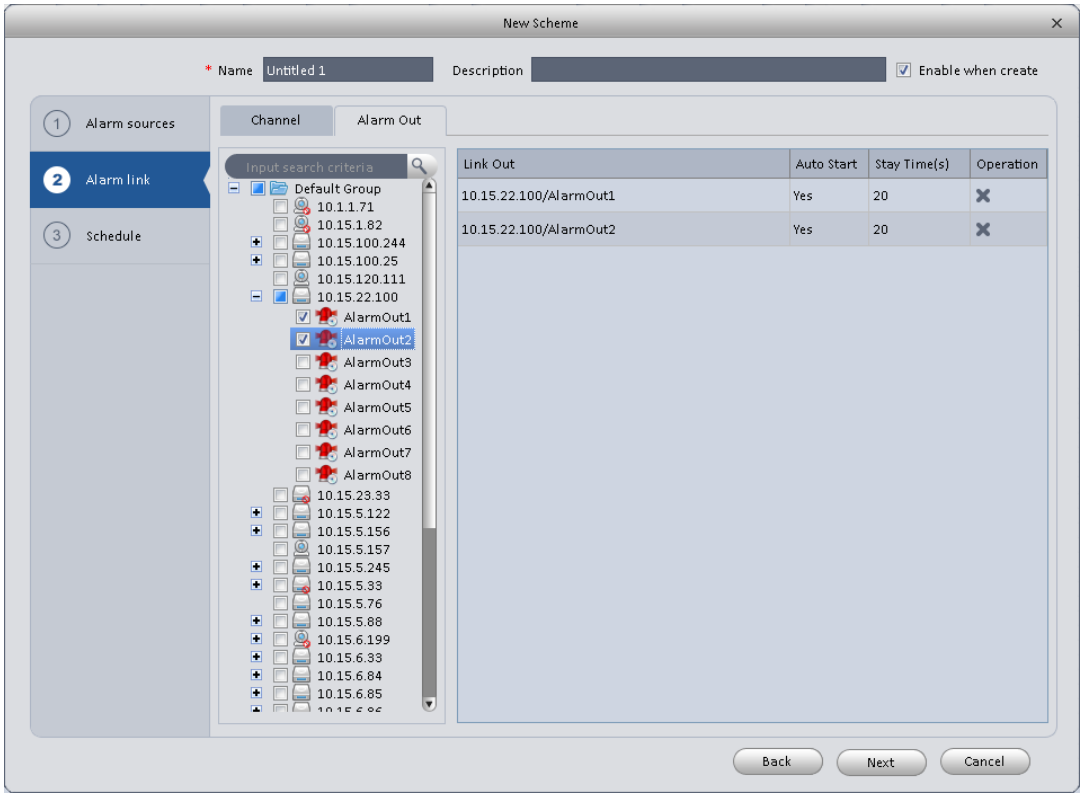

Figure 3-70

c) Click Period button on the left pane or click next button in Figure 3-69, you can go to the following interface. See Figure 3-71.

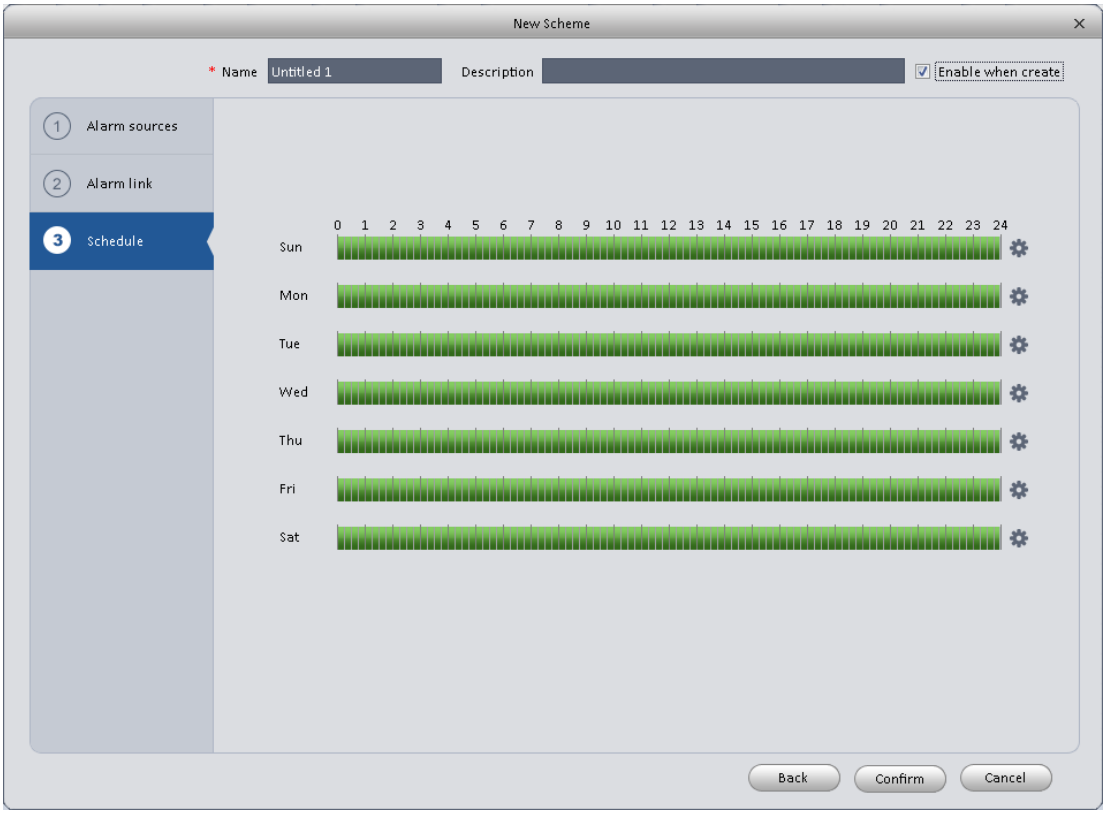

Figure 3-71

Click after a date to set alarm activation period. There are six periods in one day. See Figure 3-72. Click OK button to exit.

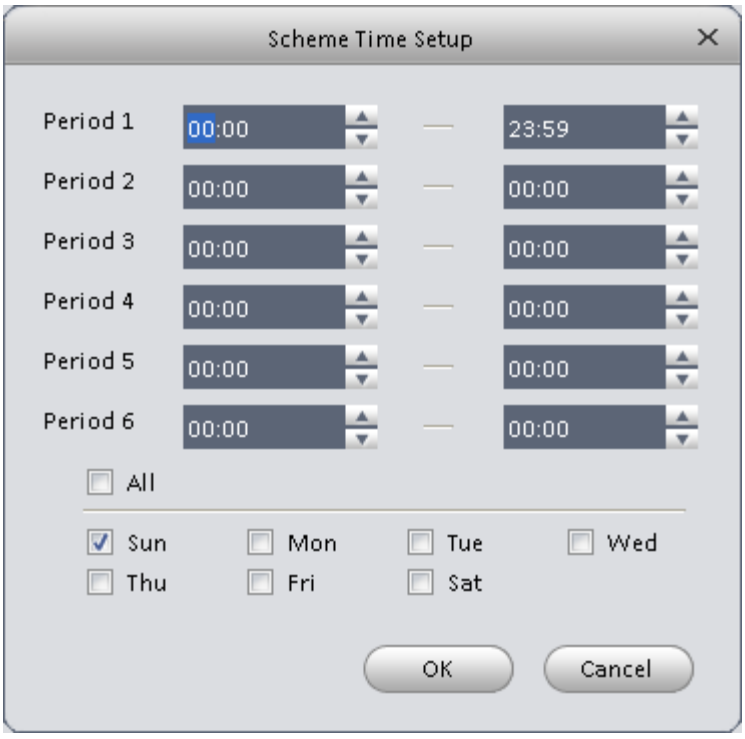

Figure 3-72

d) Click OK button, you can view the scheme information on the alarm setup interface. See Figure 3-73.

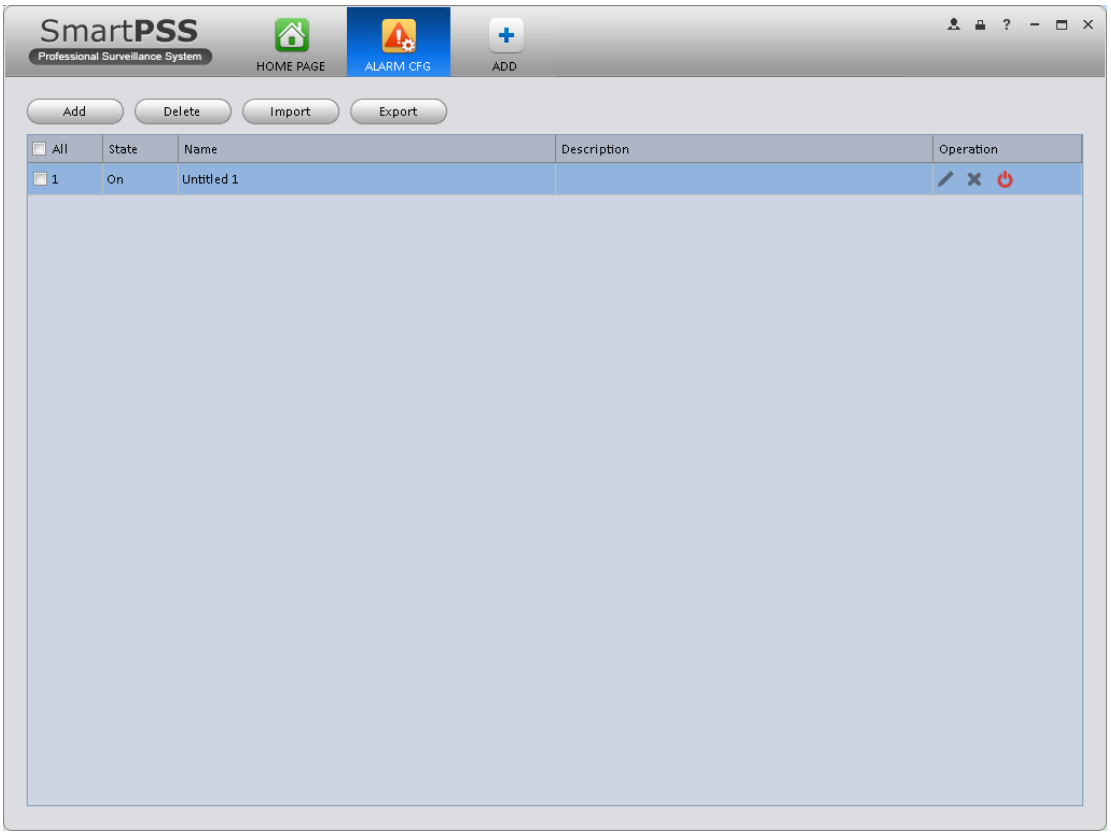

Figure 3-73

3.7.2 Enable/Disable/Export Scheme

After you added a scheme, you can view the following contents for operation information.

- : Delete current scheme.
- : Disable current scheme.
- : Enable current scheme.
- Add: Add scheme.
- Delete: Select one or more scheme(s) and then click this button to delete.
- Import: Import scheme information.
- Export: Export scheme informaiton.

3.8 Video Wall Configuration

This function allows you to output video to the video wall. Please follow the steps listed below.

1) Click , system goes to video wall setup interface. See Figure 3-74.

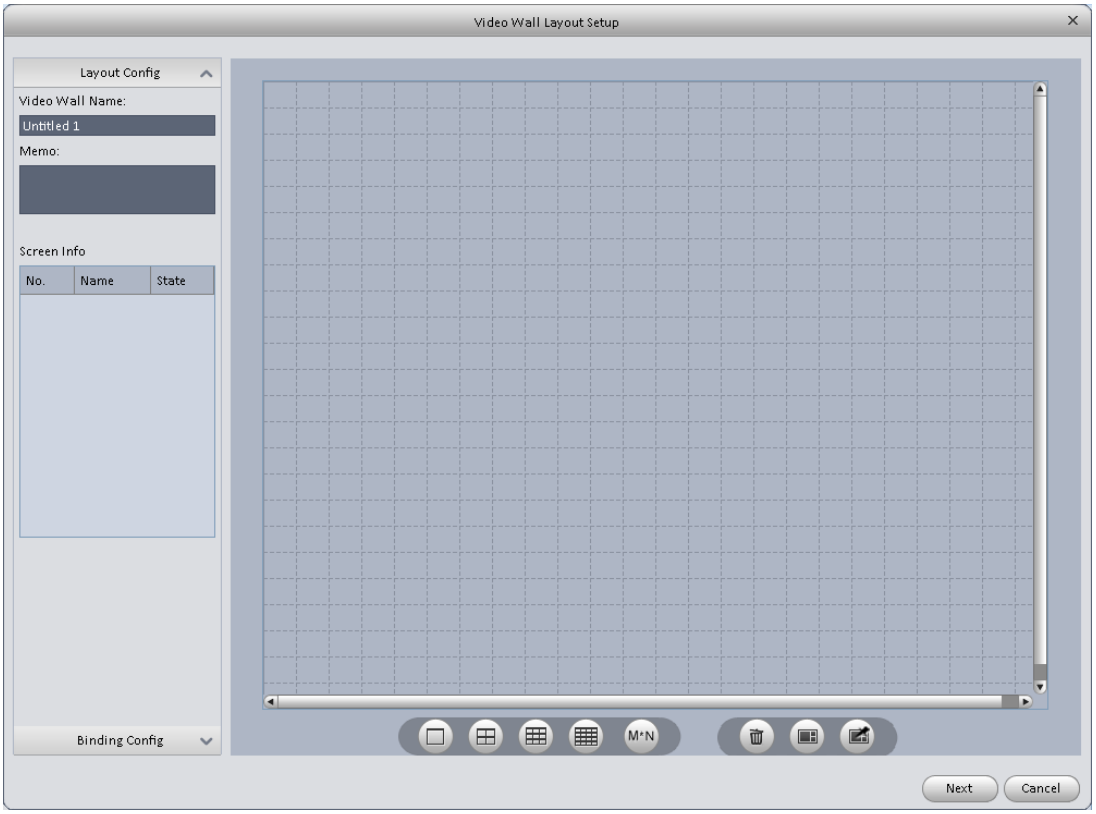

Figure 3-74

2) Config video wall.
   a) Enter video wall name and description.
   b) Click below, select layout as 1*1, 2*2, 3*3, 4*4 or M*M.

      Click screen to draw video wall physical layout, see Figure 3-75.

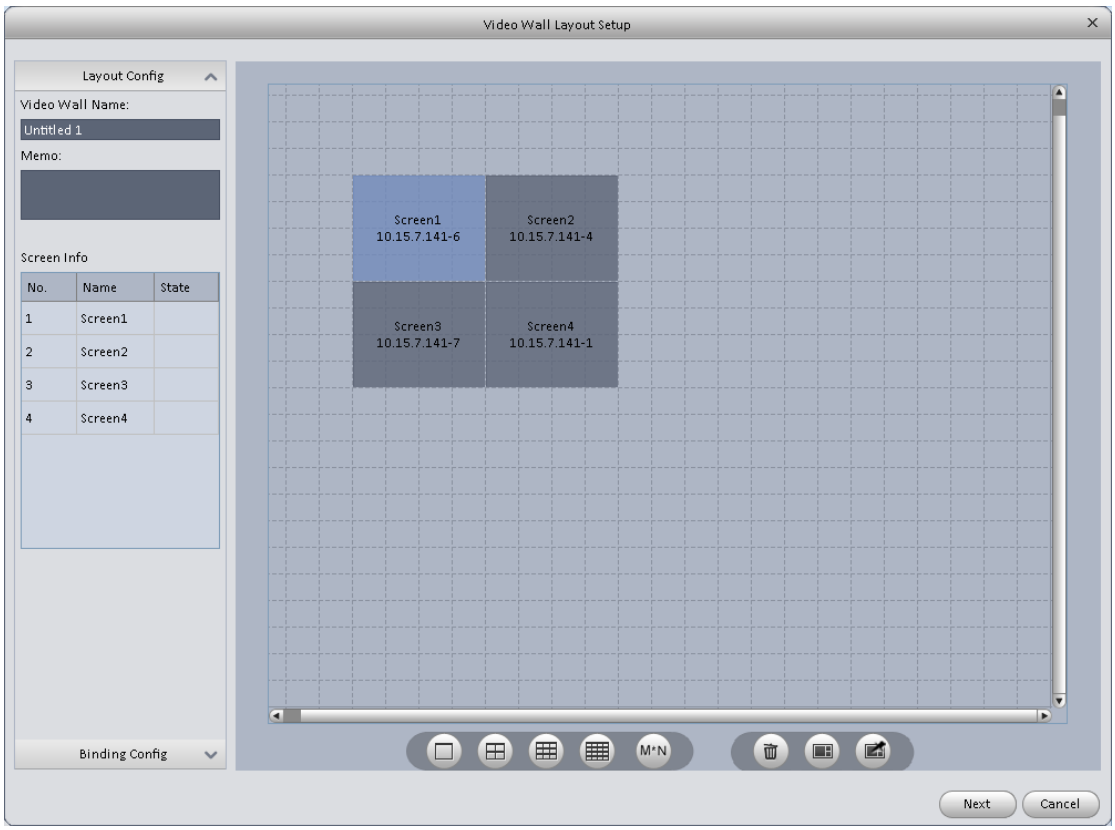

Figure 3-75

Note

- Use Ctrl+left click mouse to select several screens, right click mouse to select splicing or click , you can combine several screens to a splicing screen. Right click mouse, select unbind splicing or click , you can cancel splicing.
- Select a screen and right click to select rename or delete, you can rename screen name or delete a screen. Click , you can delete all screens.

c) Click Next button, you can go to video wall input binding interface.

3) Binding decoder channel

Select a decoder channel and then drag it to the corresponding screen of the video wall. See Figure 3-76.

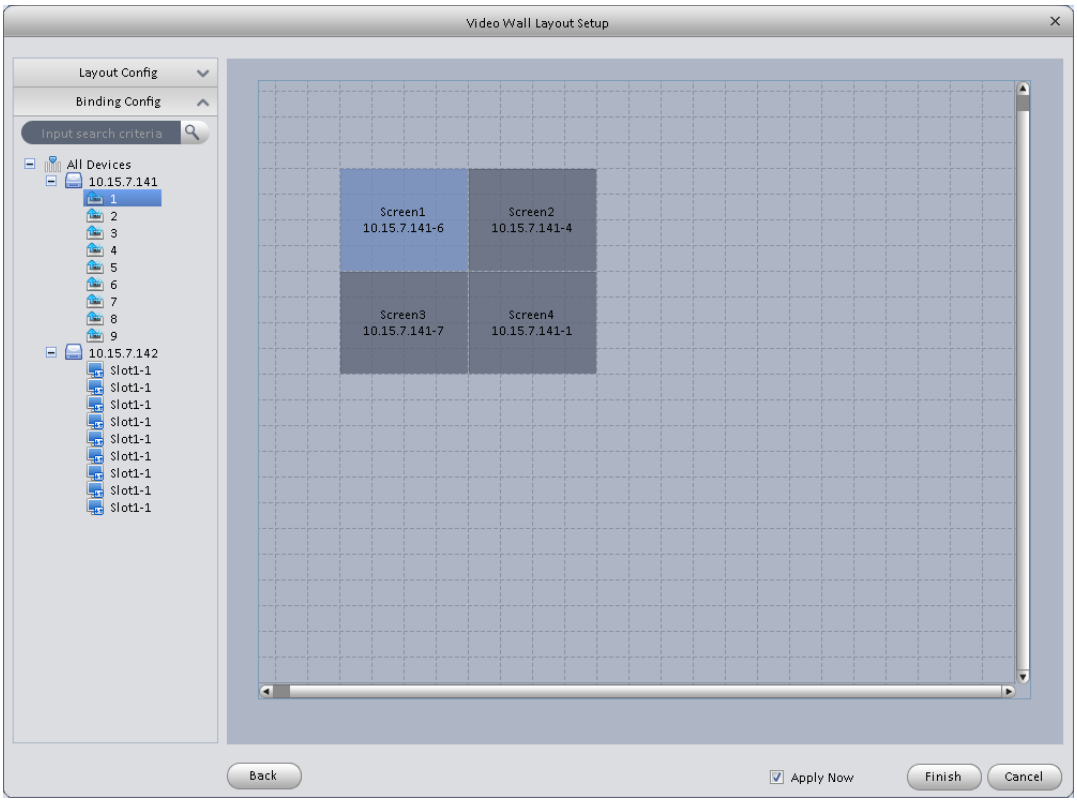

Figure 3-76

Note:

When a screen binds M30, you need to splice physical layout, otherwise you cannot bind.

4) Check the box to enable setup immediately and then click Finish button, you can see an interface shown as in Figure 3-77.

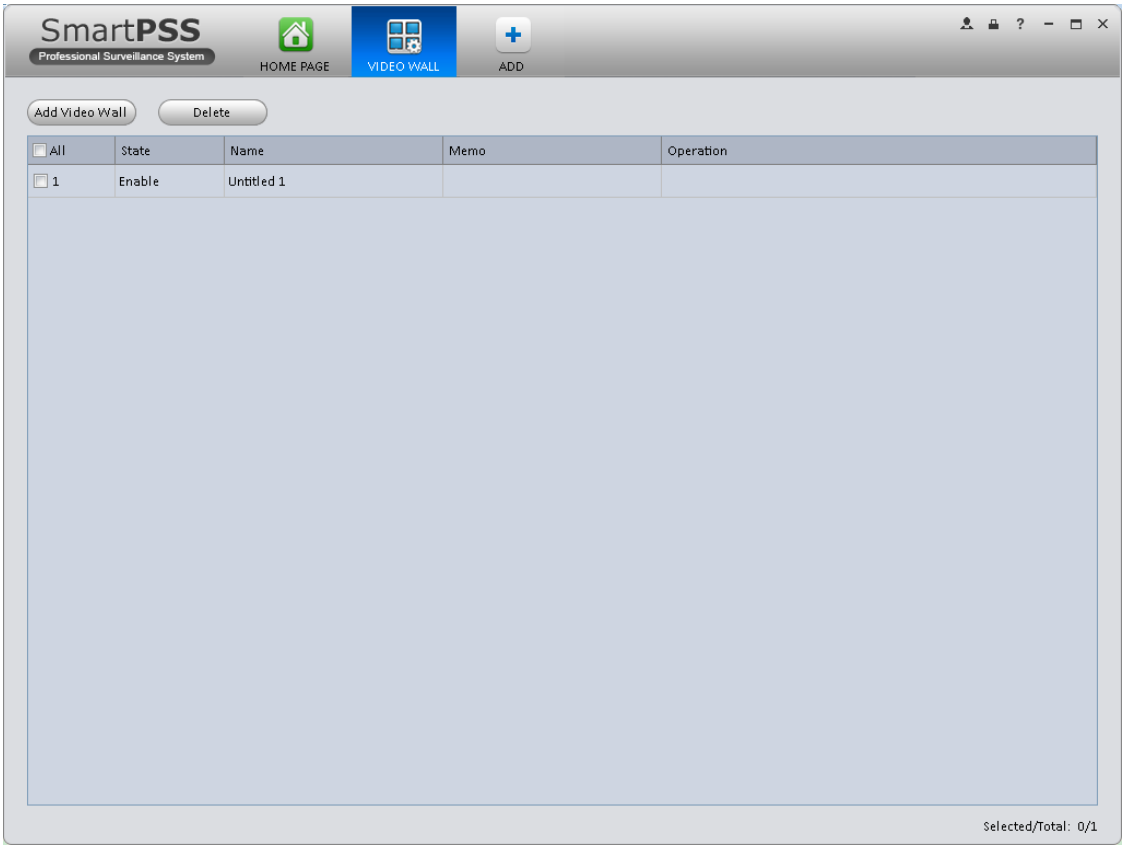

Figure 3-77

In Figure 3-77, double click a video wall, or select a video wall and then click Modify button, you can change its setup. You can also click Delete button or to remove. Click, you can change video wall on/off setup.

3.9 Tour &Task

It is to realize monitor tour among each window. Please follow the steps listed below to set.

- Click icon in the Settings pane, you can go to monitor tour interface. See Figure 3-78.

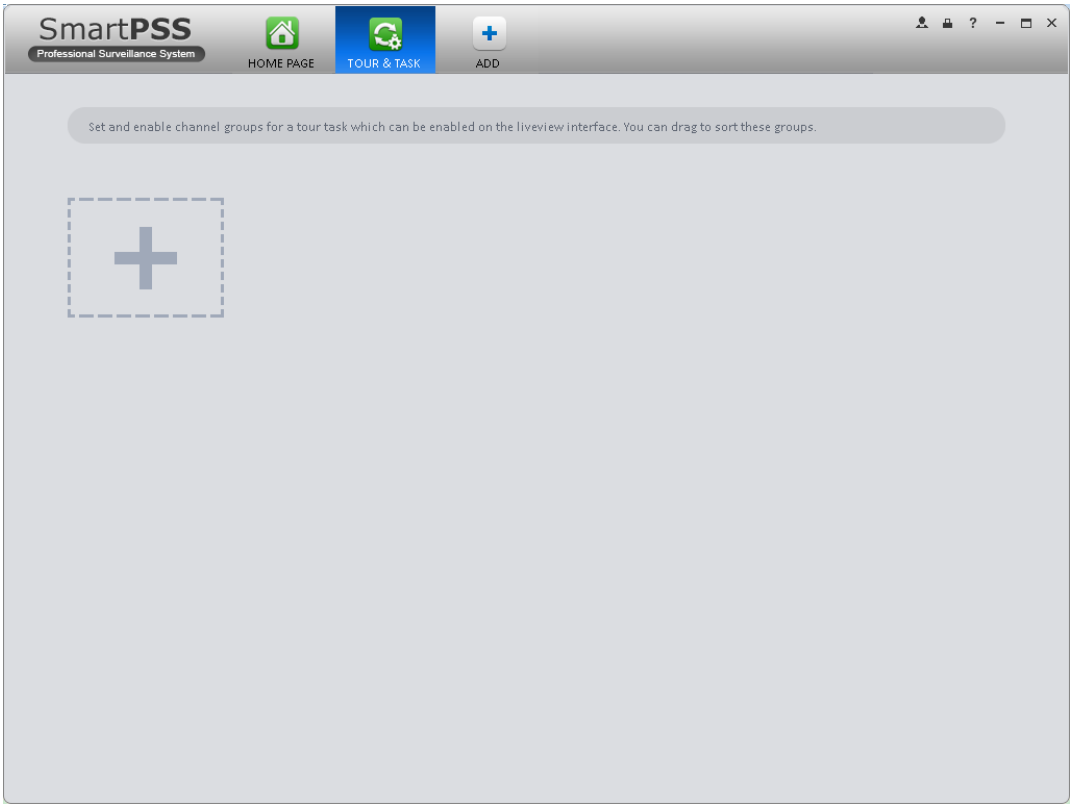
SmartPSS
Professional Surveillance System
HOME PAGE
TOUR & TASK
ADD
Set and enable channel groups for a tour task which can be enabled on the liveview interface. You can drag to sort these groups.

Figure 3-78

- Click button to add task interface. See Figure 3-81.
- Input task name, stay time.
- Click at the bottom of the interface to select window amount.
- Drag channel(s) on the right pane to the windows on the left pane. See Figure 3-79.

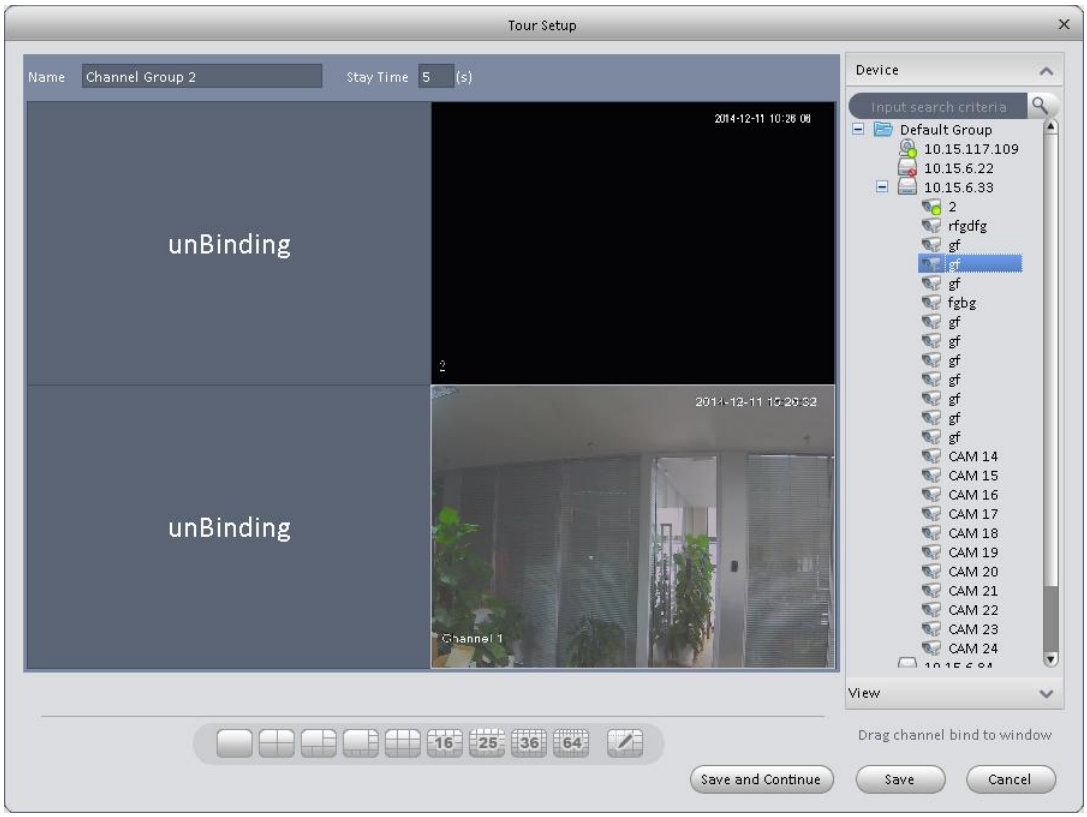

Figure 3-79

Click button to save current setup. See Figure 3-80.

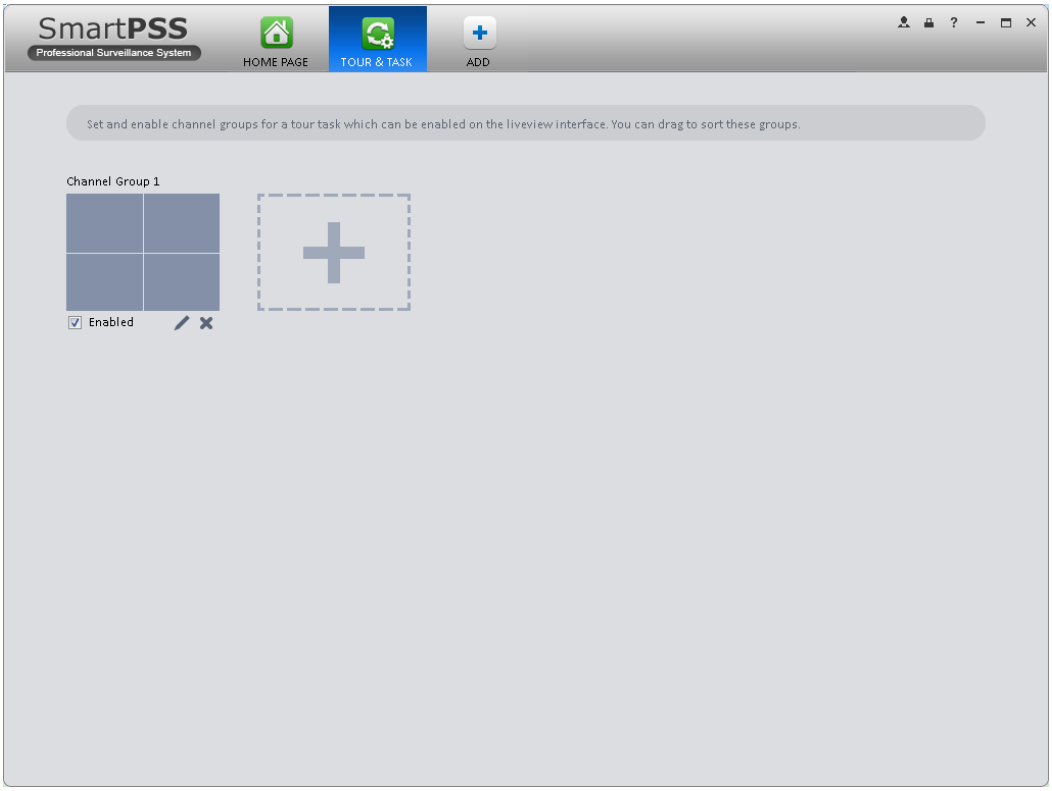
SmartPSS
Professional Surveillance System
HOME PAGE
TOUR & TASK
ADD
Set and enable channel groups for a tour task which can be enabled on the liveview interface. You can drag to sort these groups.
Channel Group 1
Enabled

Figure 3-80

Tips

Click to save current task setup and add more tasks at the same time.

- In Figure 3-80, you can check the enable button to open current scheme. Or you can go to the main interface and then click Liveview button ( ) to go to the following interface. See Figure 3-81. Click at the bottom of the interface to enable the scheme.

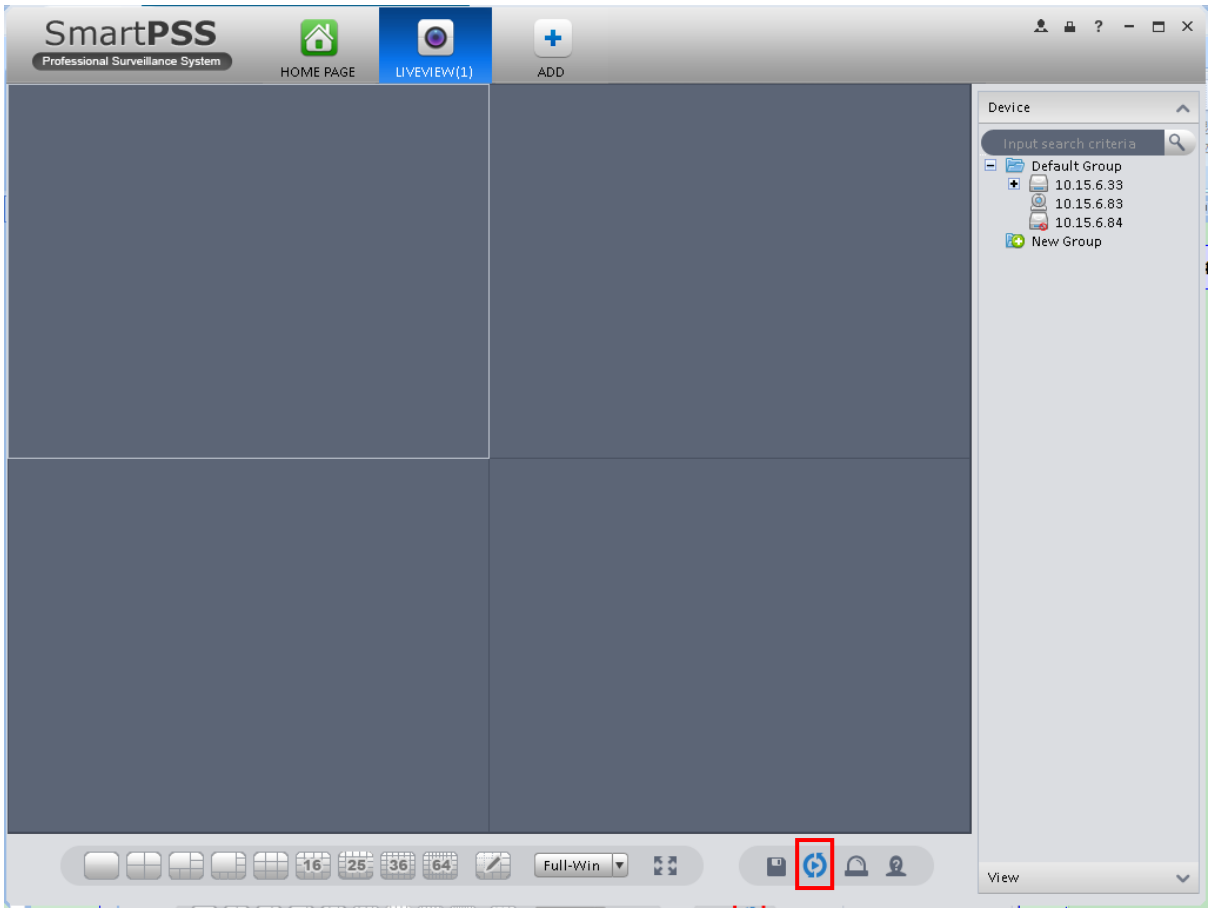

Figure 3-81

3.10 PC-NVR

Important

Before you use this function, please make sure you have installed PC-NVR and the PC-NVR applications are running now!

This function allows you to storage record file on the PC to effectively use wideband. You can add, modify or delete PC-NVR and set PC-NVR parameter. Please follow the steps listed below.

1) Click icon in the Settings pane, you can go the PC-NVR interface. See Figure 3-82.

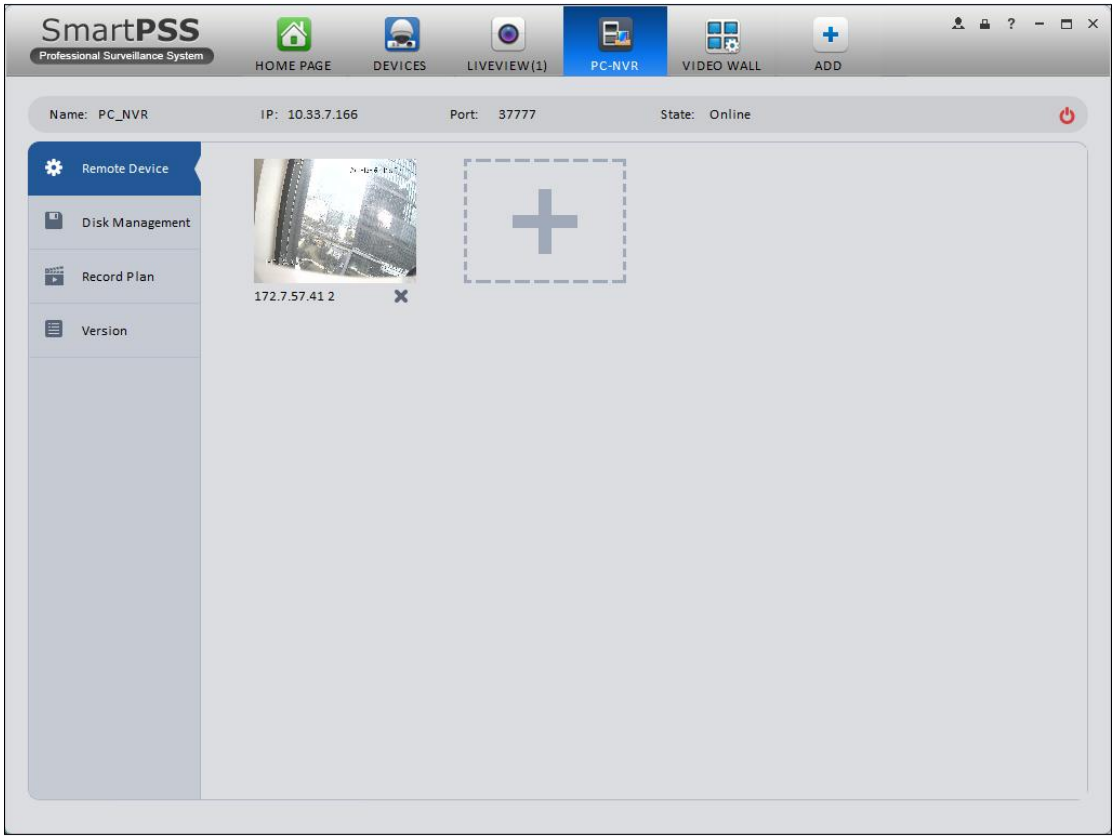

Figure 3-82

2) Remote device

a) Click button, you can see an interface shown as in Figure 3-83. Here you can add channels.

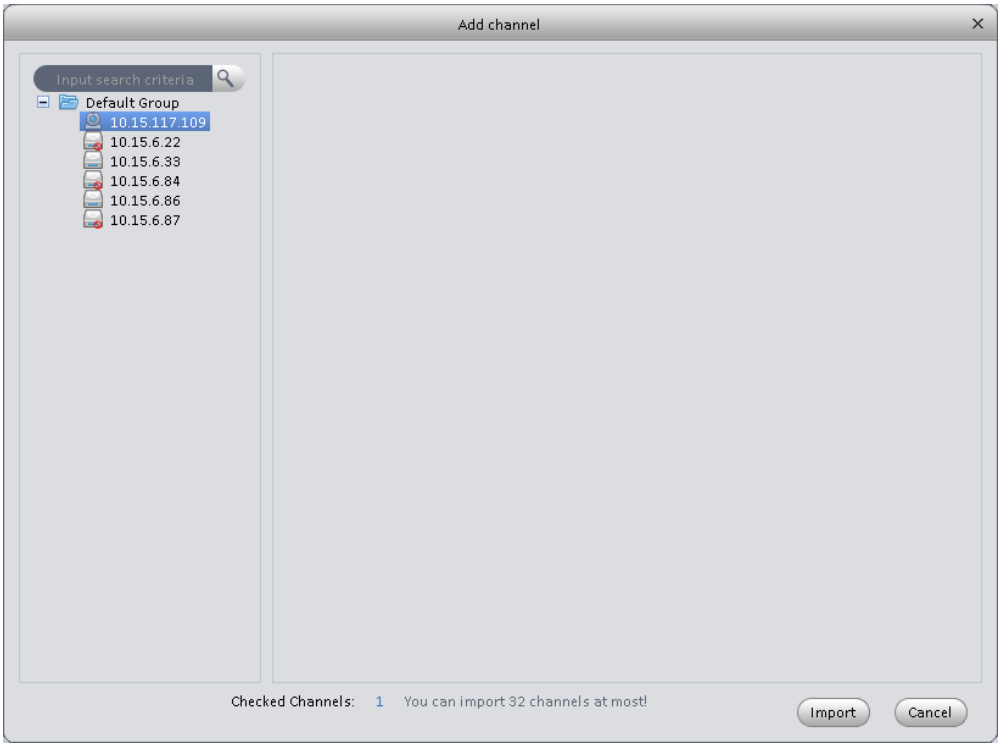

Figure 3-83

b) Please select a device and then check the record channels

c) Click Save button.

3) Disk manager

SmartPSS support disk allocation management of PC-NVR.

Note: Before allocation, make sure the disk has at least 7G in free space.

a) In Figure 3-82, click disk manager button on the left pane, you can go to the setup interface.

b) You can select saved disk and input the space then click Allocate. See Figure 3-84.

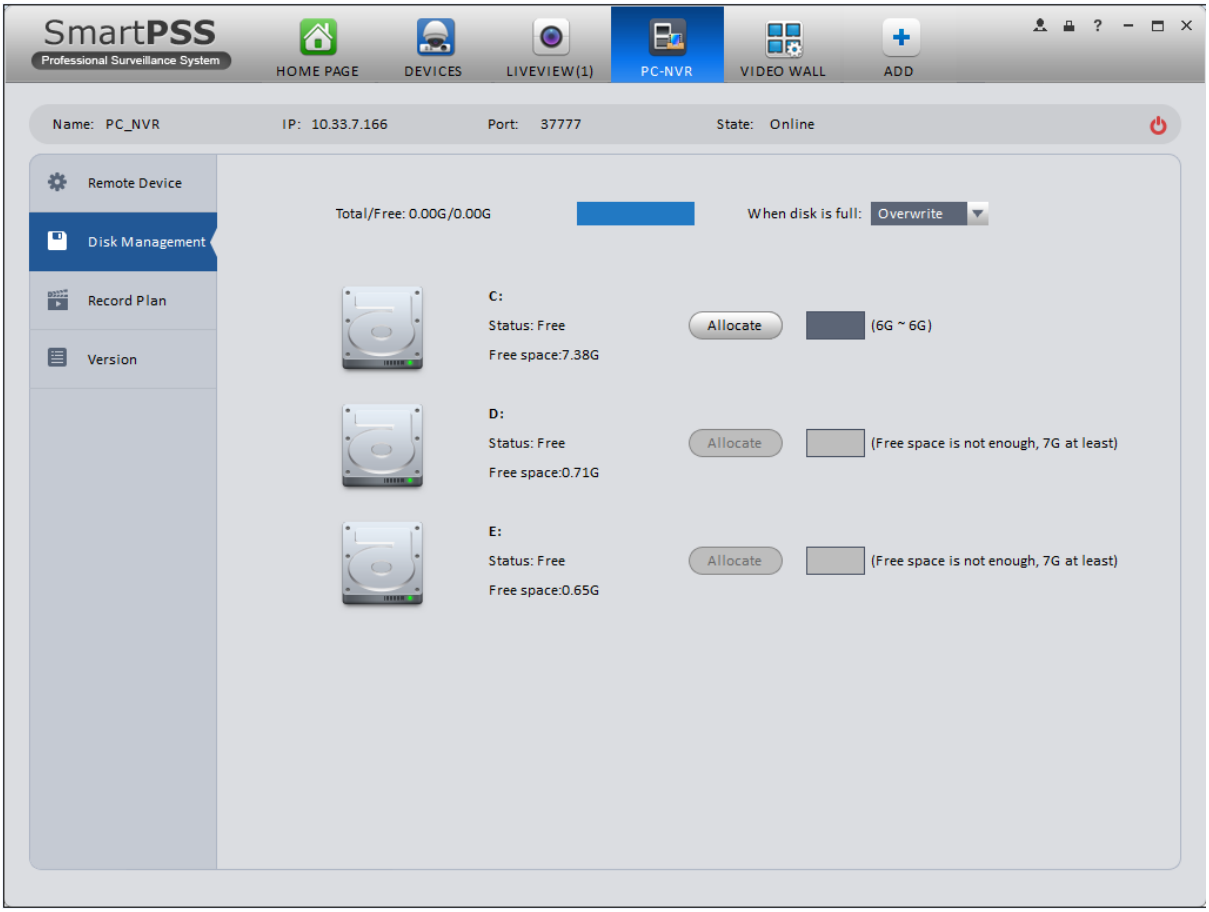

Figure 3-84

4) Add record plan

a) In Figure 3-82, click Record Plan button on the left pane. And then select a channel from the dropdown list and then click button . You can go to the following interface. See Figure 3-85.

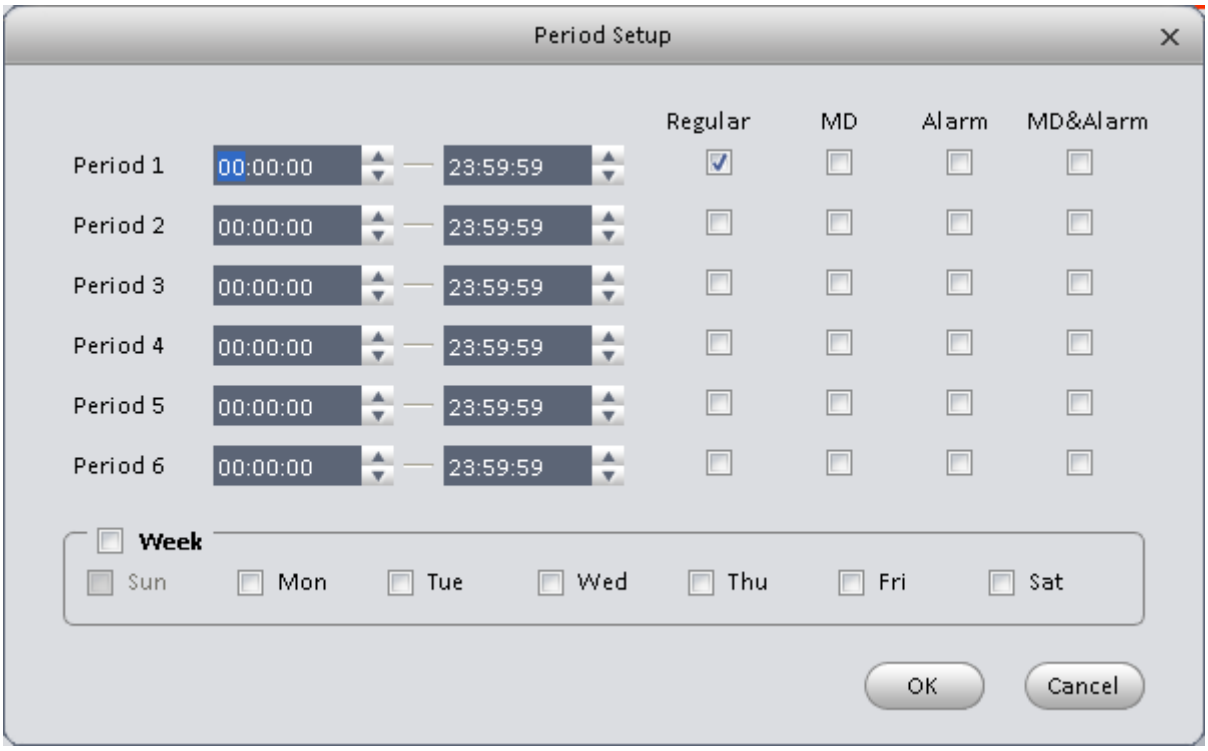

Figure 3-85

b) Please set period information and type.

c) Please set the corresponding time.

d) Click OK button. You can see an interface shown as in Figure 3-86.

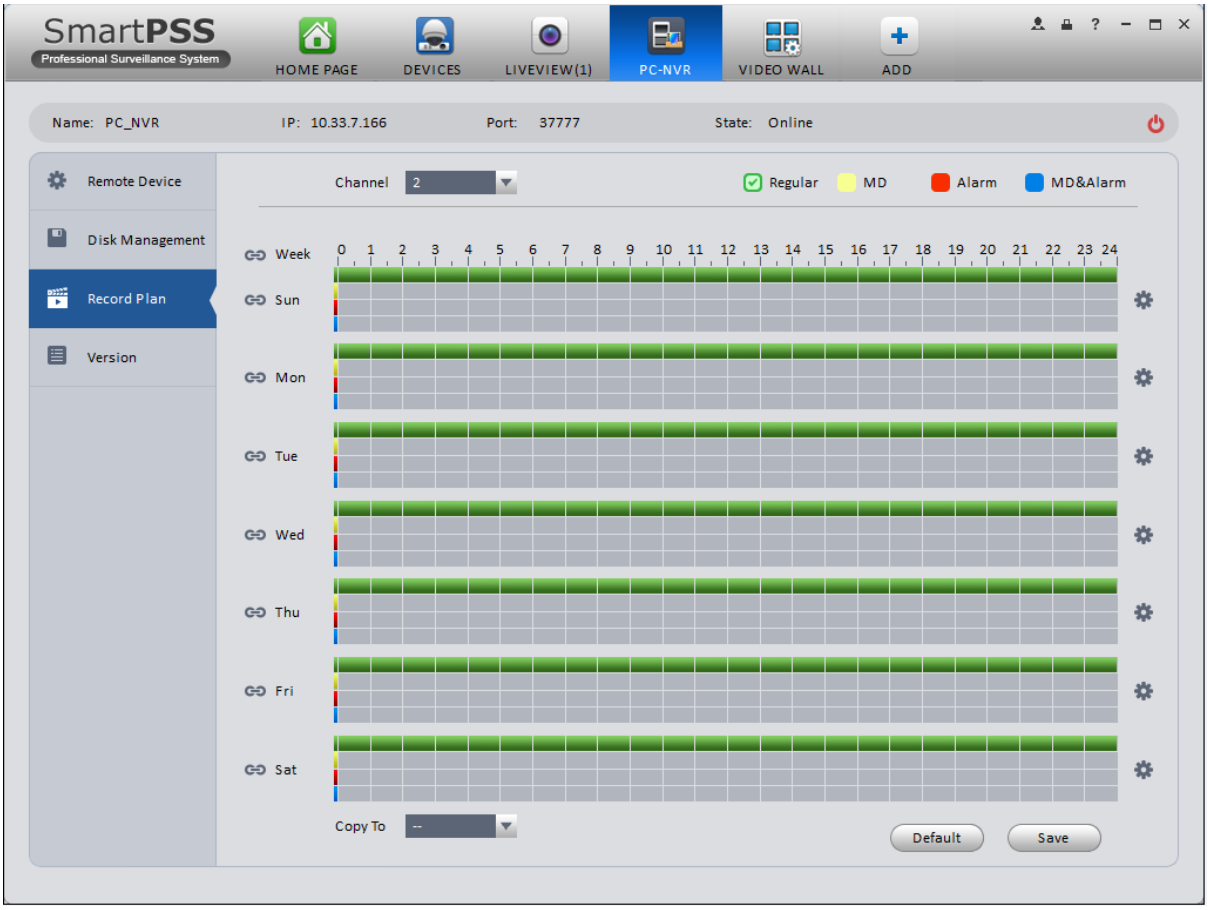

Figure 3-86

e) Click Save.

Tips

After you complete setup for one channel, you can click Dropdown in Figure 3-86 to copy current setup to other channel(s).

5) View version.

4. Basic Operation

4.1 Liveview

4.1.1 Real-time Liveview

After you set channel group, you can realize real-time liveview, record, snap, PTZ operation and etc.

On the main interface, click in the Basic pane, you can go to the liveview interface. See Figure 4-1.

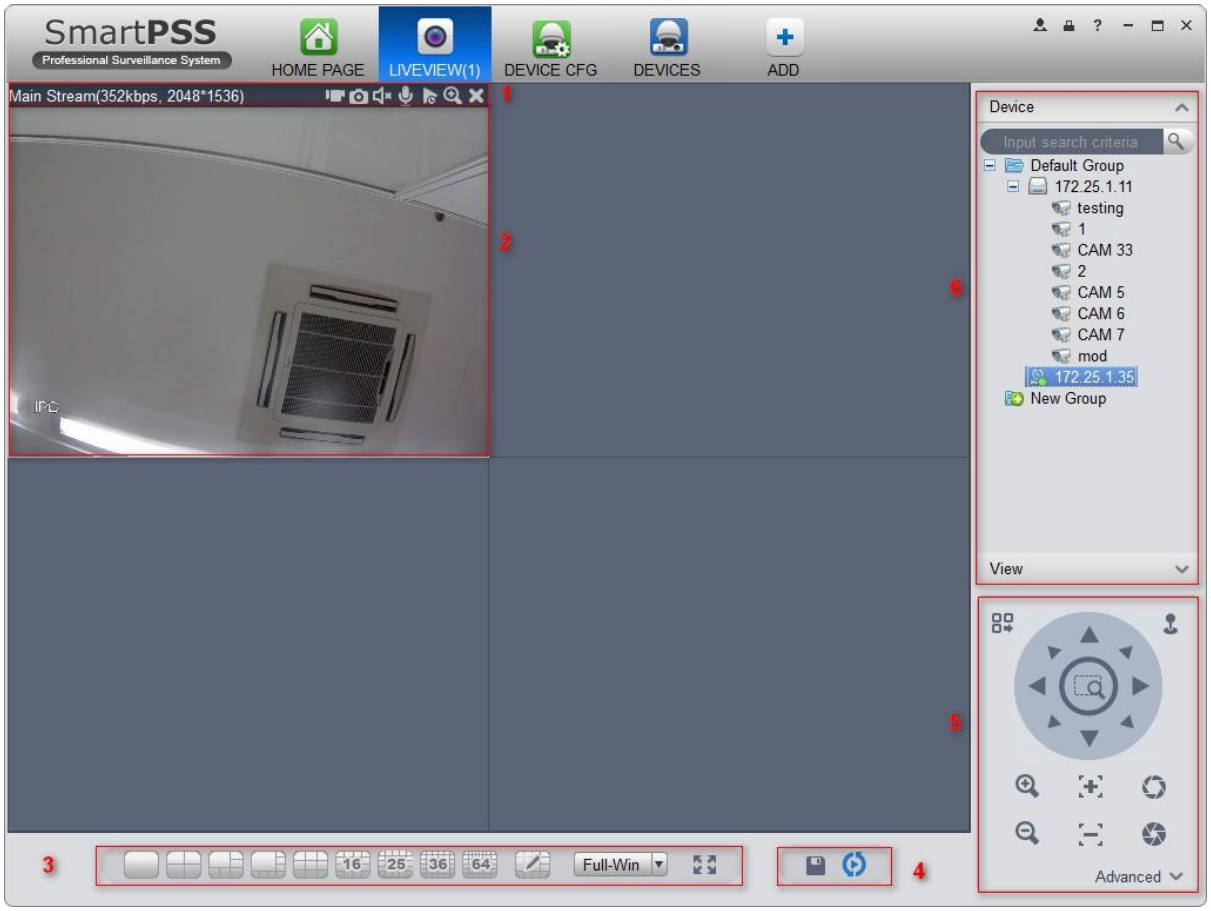

Figure 4-1

Please refer to the following sheet for detailed information.

SN	Item	Function
1	Bit stream information and shortcut operation menu	Please refer to the following contents for detailed information. ● : Enable/disable local record. ● : Snapshot. ● : Enable/disable audio. ● : Enable/disable bidirectional talk. ● : Instant playback. ● : Digital zoom ● : Close current window.
2	Video window	Real-time video
3	Window split mode	● : It is to set 1-wind to 64-window mode. ● : Select a window and then click this button to custmoze its setup. ● Original : Adjust video scale. ● : Full screen.
4	Tour button	: Save current liveview as image. You can view under View, Playback, and View in tour interface. Note: When add view, check add to tour task before you can view it in tour&task. : Enable tour plan. Refer to Ch 3.9. : Close tour plan.
5	PTZ	It is for PTZ dome camera or fisheye camera series product only. Here you can set camera direction, zoom in, zoom out, iris and etc. Click advanced button to set preset, tour, aux function and so on.
6	Device list	Display device group and the corresponding channel. Here you can create a new group and drag a device to it. Right click a channel, you can select main stream/sub stream or quickly go to the device setup interface.

Select a liveview window, double click a device channel on the right pane to open the video. Double click a group name; you can open all channels under current group. Right click device channel, you can switch between main stream/extra stream.

Right click liveview window, you can see an interface shown as in Figure 4-2.

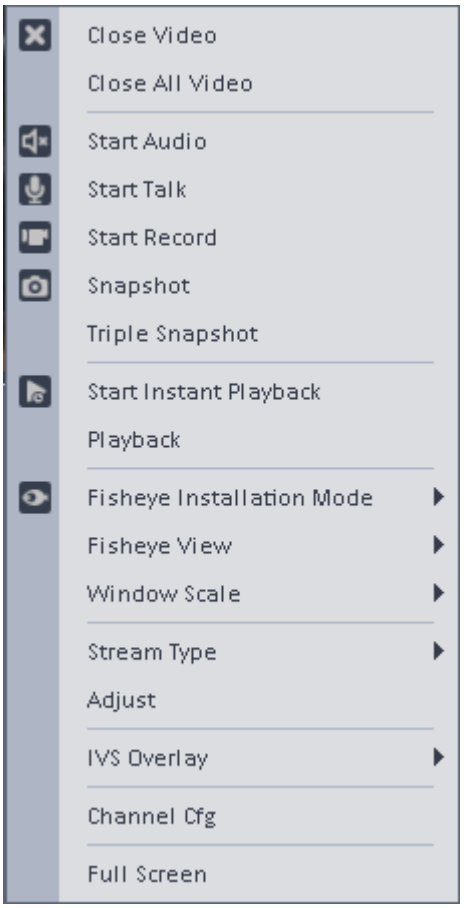

Figure 4-2

Please refer to the following sheet for detailed information.

Item	Function
Close video	Click it to close current window.
Close all video	Click it to close all windows.
Start audio	Click it to enable audio function.
Start talk	Click it to enable bidirectional talk function.
Start record	Save audio/video of current window to a record file.
Snapshot	Snapshot current window. Click it once to save one picture.
Triple Snapshot	Snapshot current window. Click it once to save three pictures by default.
Start instant playback	It is to enable instant playback in current window.
Playback	Click it to go to the playback interface to playback record of current window.
Fisheye installation mode	It is to adjust fisheye installation mode. It includes: ceiling mount, wall mount and ground mount.
Fisheye view	It is to adjust fisheye view mode.
Window scale	It is to adjust window scale.

Item	Function
Stream type	Switch between main stream/sub stream
Adjust	Set video brightness, contrast, hue and saturation.
Channel setup	Click it to go to the channel setup interface (chapter 错误！未找到引用源。).
Full-screen	Click it to switch to full screen mode. You can double click video window or right click mouse and then select exit full screen/press Esc to exit.

4.1.2 Record

During the liveview process, you can follow the steps listed below to record.

On the liveview interface, right click mouse and then select record button.

Or you can click the button at the top of the video window to record.

The icon becomes when device is recording.

You can right click mouse to select stop record or click the at the top of the video window to stop record.

The default record save path is SmartPSS/Record. Here you can go to chapter 3.3 General and then select file setup icon to modify record save path.

4.1.3 Snapshot

During the liveview process, you can follow the steps listed below to snapshot.

1) On the liveview window, right click mouse and then select snapshot. You can see system pops up snapshot dialogue box. See Figure 4-3.

Tips

You can also click at the top of the video window to snapshot.

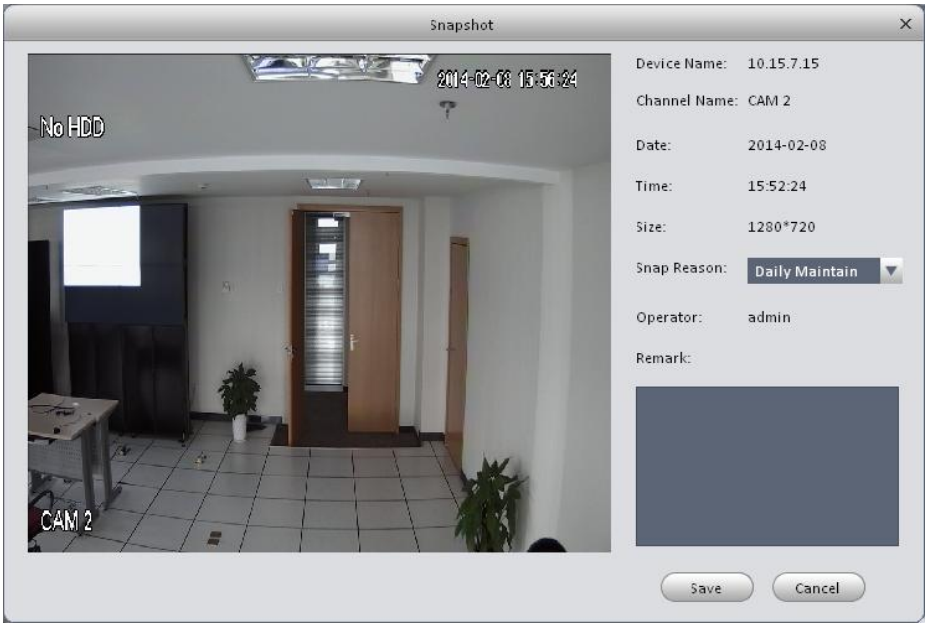

Figure 4-3

2) Please select corresponding parameter from the snapshot reason dropdown list and then input the information in the Remarks column.
3) Click save button, you can see system prompts “Successfully saved snapshot!”.

On the Liveview window, right click mouse and then click Triple snapshot, you can snap three pictures at one time. You can see the corresponding dialogue box if the snapshot succeeds. The default picture save path is SmartPSS/capture. Here you can go to chapter 3.3 General and then select file setup icon to modify picture save path.

4.1.4 Smart Alarm

If the system configures SmartIPC device, then you can configure rule for smart channel of the device in Liveview interface.

Step 1. In Liveview interface, device list on the right, right click intelligent device, select IVS Channel Cfg. See Figure 4-4.

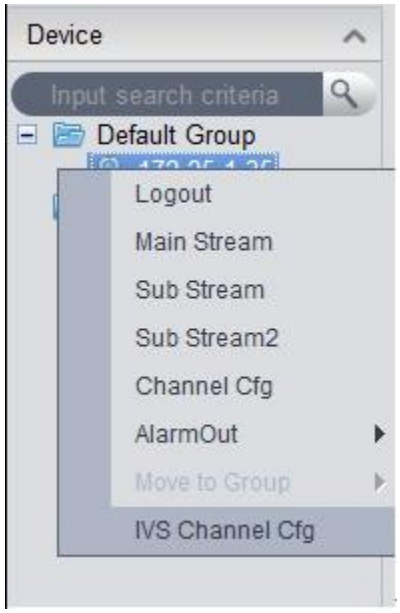

Figure 4-4

Step 2. In channel list dropdown list, select channel, see Figure 4-5.

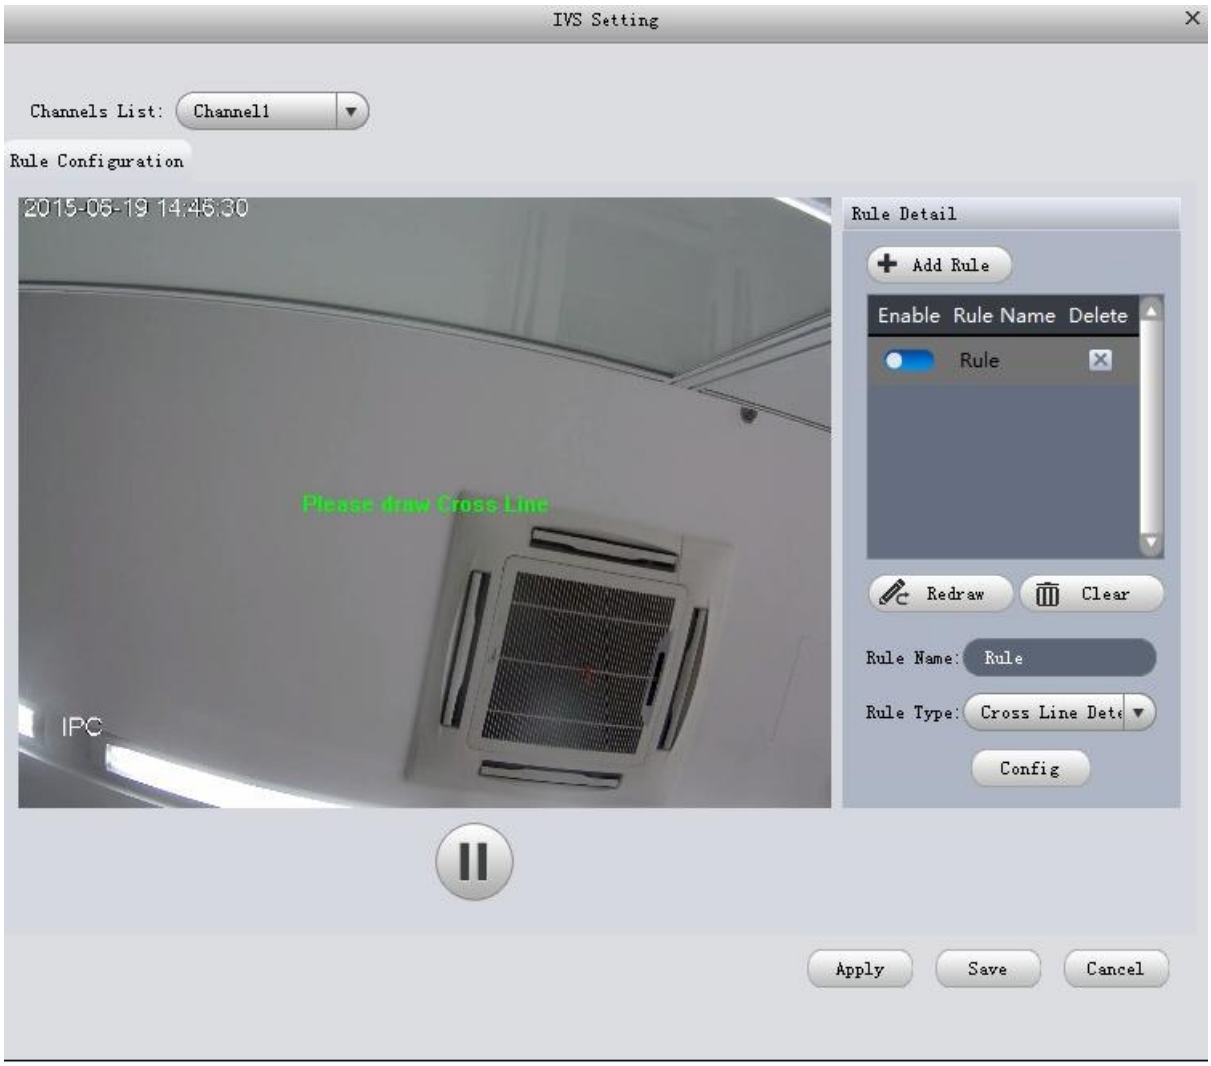

Figure 4-5

Step 3. Click . See Figure 4-6.

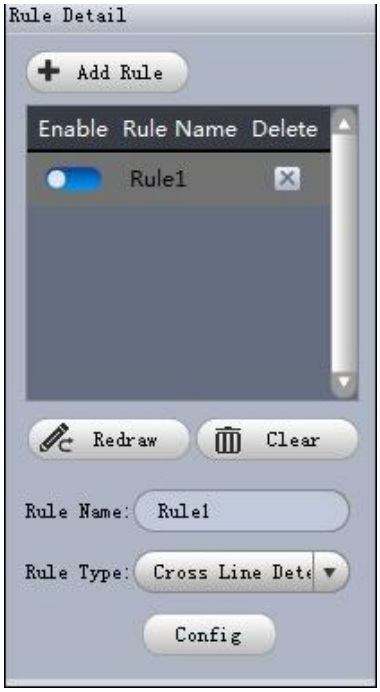

Figure 4-6

Step 4. Configure rule name, and select rule type.

Step 5. In video window, draw detection region, and right click to complete drawing.

- Click Redraw to draw detection region again.
- Click Clear to clear drawn detection region.

See Figure 4-7.

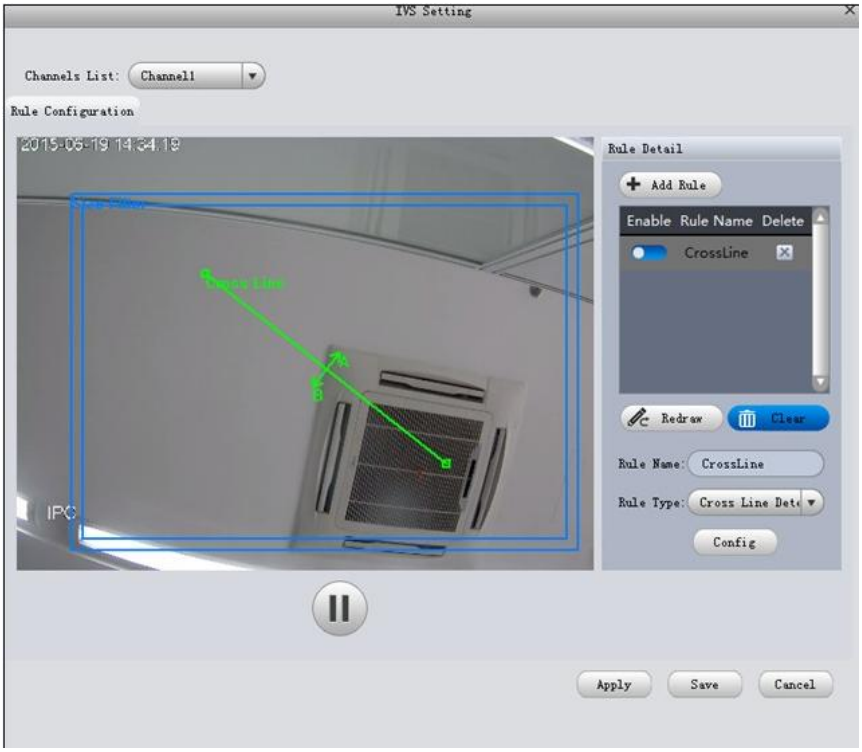

Figure 4-7

Step 6. Click Config.

Step 7. Set parameters, select “A<- ->B”, “A-->B” or “A<--B”, see Figure 4-8.

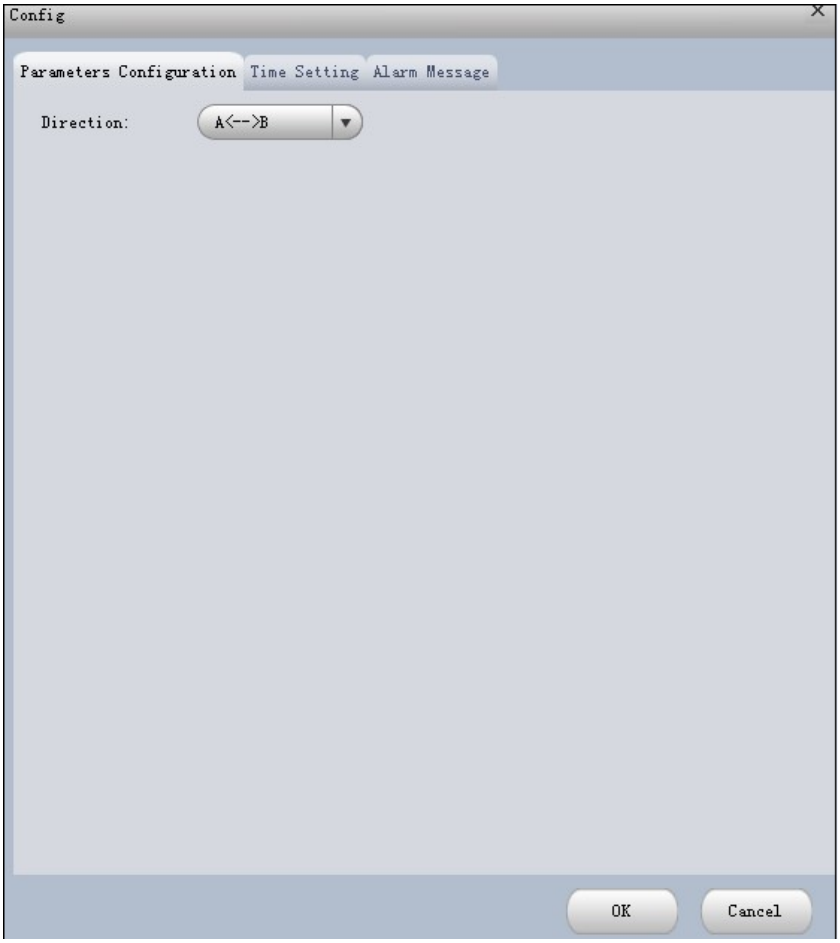

Figure 4-8

Step 8. Click Time Setting, set time, see Figure 4-9.

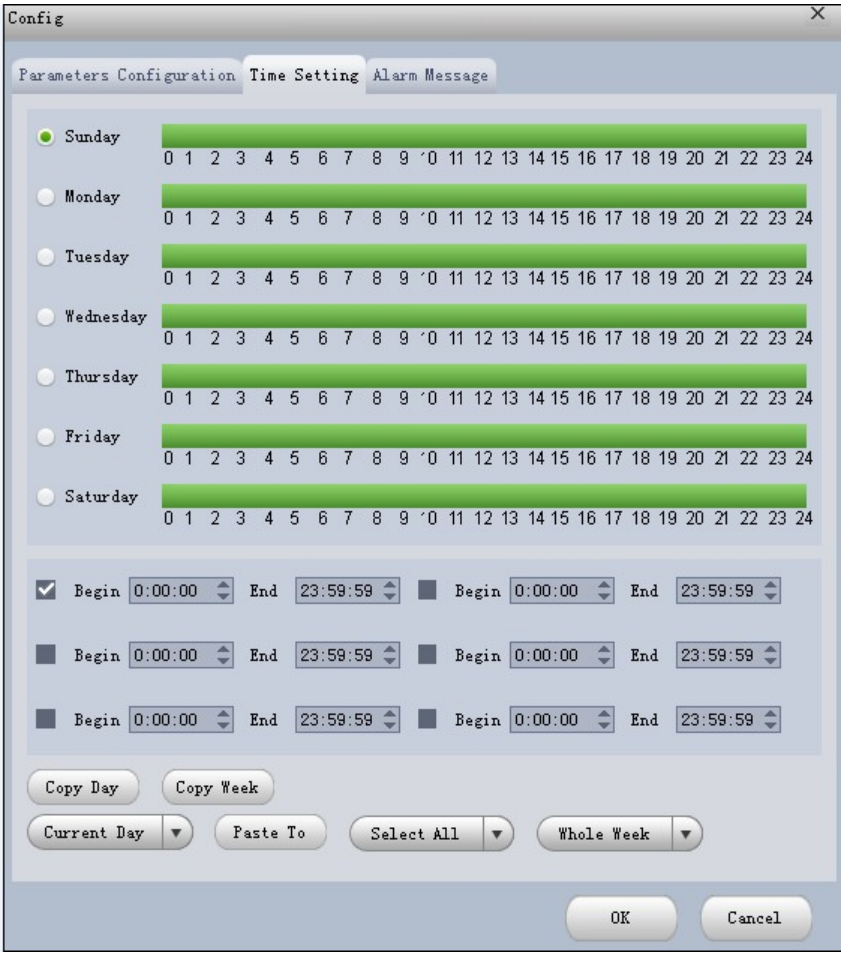

Figure 4-9

Step 9. Click Alarm Message.

Step 10. Check alarm output, record, snapshot and click OK.

Step 11. Click Apply.

When alarm occurs, in LOG interface, you can select alarm log for type, and IVS device for device name to search alarm info. See Figure 4-10.

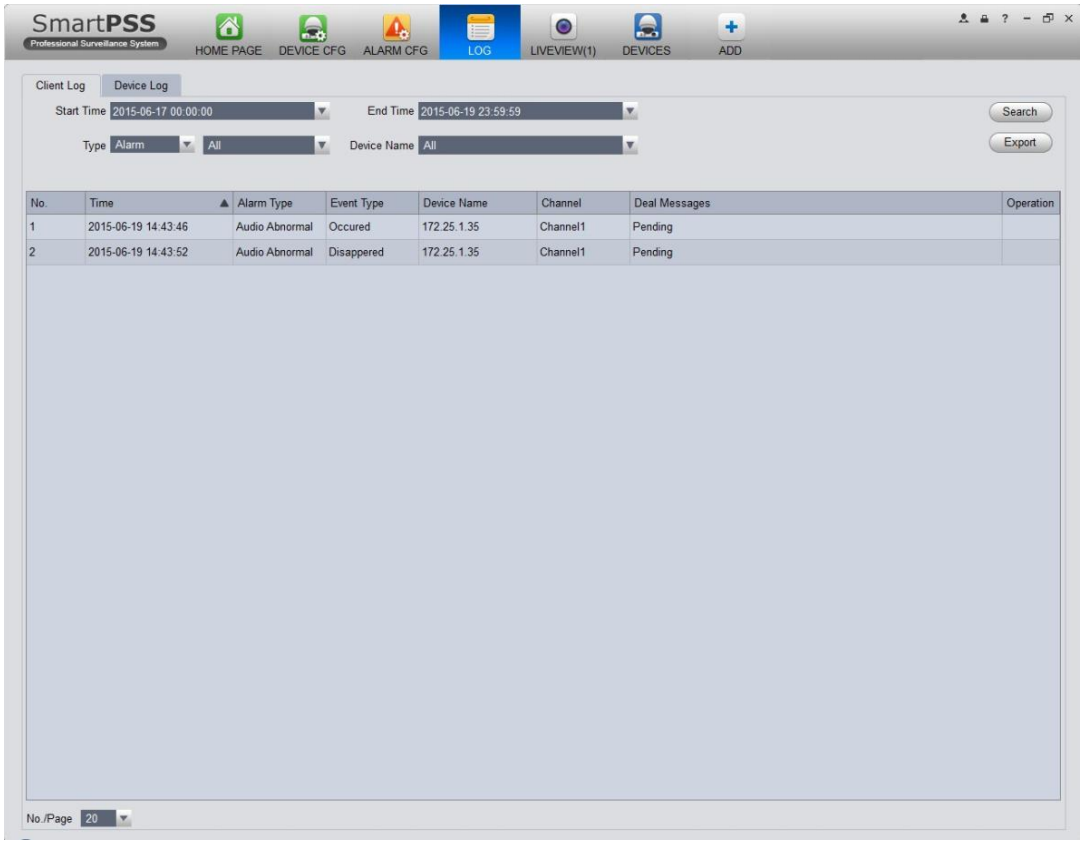

Figure 4-10

4.1.5 PTZ

If the device type is PTZ dome camera or fisheye camera, you can click the PTZ button to set. See Figure 4-11.

Figure 4-11

Please refer to the following sheet for detailed information.

Item	Function
PTZ menu	Click to go to the PTZ menu. See Figure 4-12. Figure 4-12
Mouse simulator	Click , you can use your mouse to set camera movement direction.
Direction buttons	It is to set camera movement direction. There are total 8 directions. Top/bottom/left/right/top left/top right/bottom left/bottom right.
Zoom	It is to control speed dome to realize zoom function.
Focus	It is to adjust video definition.
Iris	It is to adjust brightness.

Item	Function
Step	It is to control PTZ movement speed. It supports value 1 to value 8.
Preset	There are 128 presets by default. You can set camera to a specified preset. Use direction keys to move the camera to your desired location and then input preset value. Click Set button, you have set one preset.
Tour	This function allows the camera to move between several presets.
Horizontal rotate	It is to enable horizontal rotate function.
Scan	It is to set two limits so that the camera can move back and forth.
Pattern	The camera can memorize dome operation such as pan, tilt, and zoom to repeat.
Aux	It is to set aux positioning.

4.1.5.1 Preset

This function allows you to set camera to a specified position.

Preset setup

Please note system supports 128 presets by default.

1) In Figure 4-11, use direction keys to move the camera to your desired location.
2) Click ▼ dropdown list, select preset; click ⚙ and click ▼ dropdown list. Select number within 1~128.
3) Click ✔ to set corresponding preset. .

4.1.5.2 Tour

This function allows camera to go between several presets.

Important

Before you use this function, please set at least two presets.

Tour setup

1) In Figure 4-11, select Tour from the dropdown list and then click ⚙ button. See Figure 4-13.

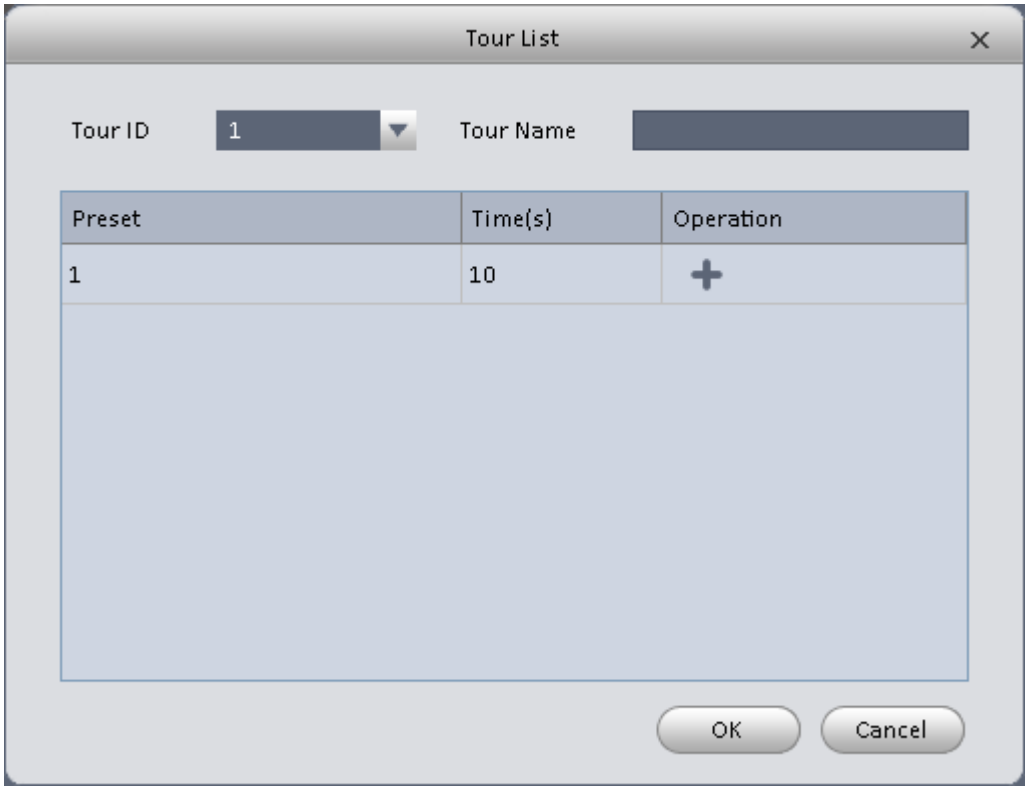

Figure 4-13

2) Input tour number/tour name.
3) Select preset number from the dropdown list and input stay time.
4) Click button to add one preset to the tour. Select another preset number from the dropdown list and then click Add button again to add more preset to the tour.
5) Click OK button to complete the tour setup.
6) Click button to tour.

4.1.5.3 Pan

1) Click Pan dropdown list, select Pan.
2) Click to enable Pan.

4.1.5.4 Scan

1) Click Scan dropdown list, select Scan.
2) Click PTZ button, to rotate left, click , set left border.
3) Rotate PTZ to right, click m set right border.
4) Click to enable Scan. PTZ will rotates within the range of two borders.

4.1.5.5 Pattern

Pattern is the process of recording.

1) Click Pattern dropdown list click Pattern.

2) In

dropdown list select number of pattern, you can set up to 5 patterns.

3) Click , after button is red, operate on 8 buttons of PTZ to start setup of pattern.

4) Click , complete pattern setup.

5) Click , deivce will rotate accoridng to set pattern.

4.1.5.6 Aux

1) Click

dropdown list, select Aux.

2) In Aux order box, input any number between 1~255. Each number has a corresponding function.

3) Click , display function of Aux order.

4.2 Playback

After you recorded a file, you can go to this interface to playback.

On the main interface, click in the Basic pane, you can go to the playback interface. See Figure 4-14.

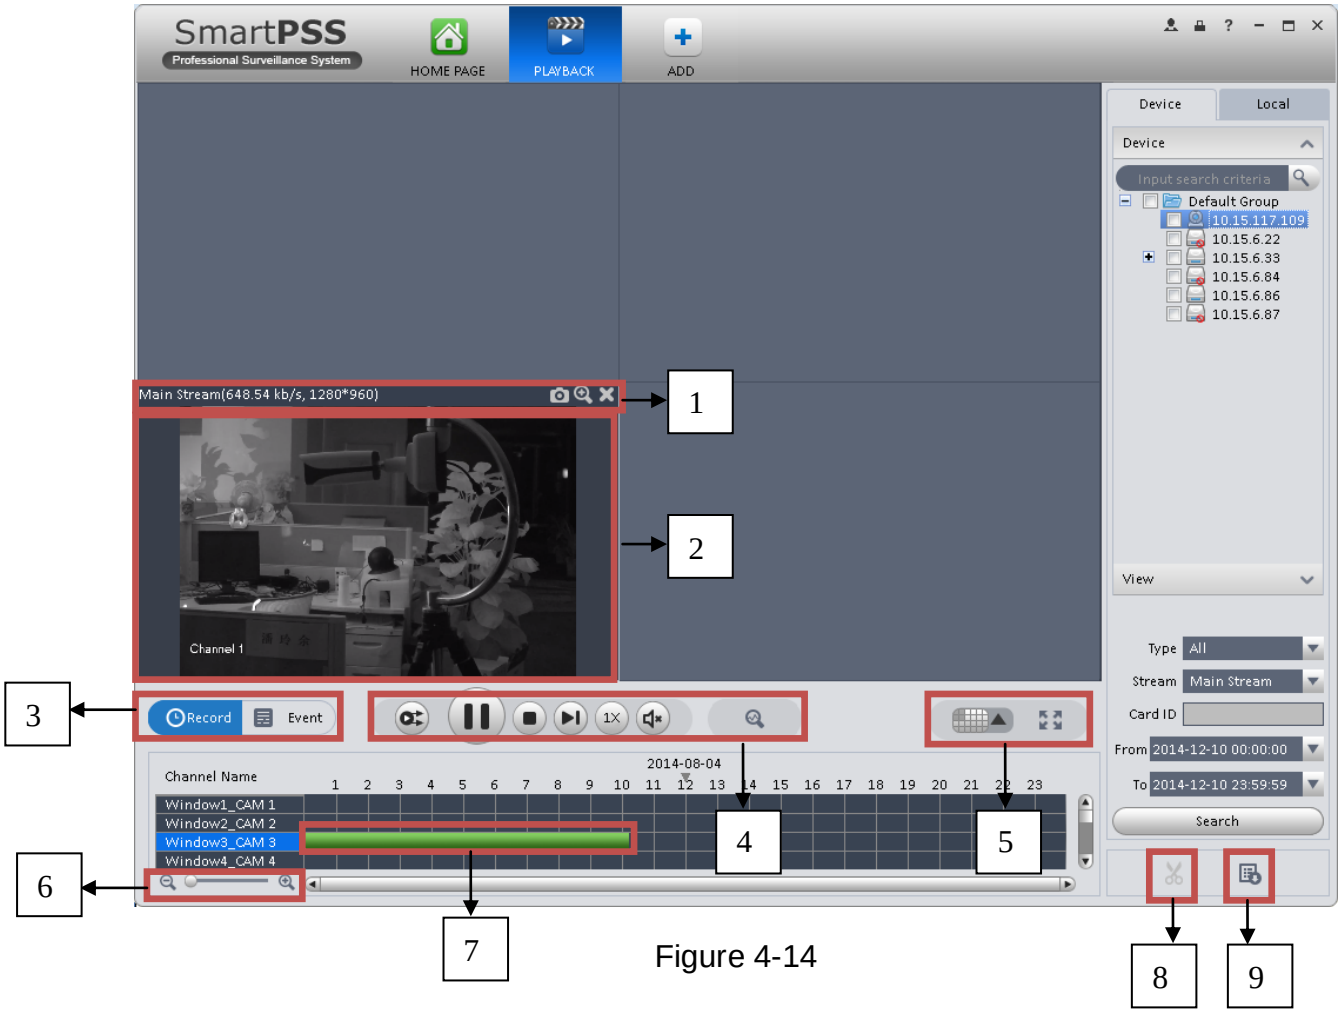

Figure 4-14

SN	Item	Function
1	Shortcut operation column	There are shortcut operations to download record file and snapshot. ● : Snapshot. ● : Zoom in window ● : Close current window.
2	Playback window	Playback record
3	Mode	There are two playback mode: by time/by event.
4	Playback tool bar	It is to control the playback process, audio and etc： ● ：Window sync operation button. When this function is enabled, the operation of the playback bar is for all windows. When it is in status, it is for current selected window only. ● ：It is to switch playback and pause. ● ：Stop playback. ● ：Forward. ● ：It is to control the playback speed. ● ：It is to adjust volume. ● : Motion detect the zone.
5	Window display mode setup	It is to set window split mode. The value ranges from 1-window to 36-window. ● : Select a window and then click this button to realize customized setup. ● : Full screen.
6	Time bar control	It is to zoom in /zoom out time line.
7	Time bar	Playback time process.
8	Time clip	It is to edit the time line to download the specified records.
9	Export process	It is to export the records of the specified period.

4.2.1 Playback Device Record

Please follow the steps listed below to search the record you want and then playback.

1) In Figure 4-14, click Device button on the upper right intergface.
2) Check a channel (or some channels) on the device list on the top right pane.

3) Select record type, stream type and record start time and end time.

4) Click Search. See Figure 4-8. By default, system search record by “time”.

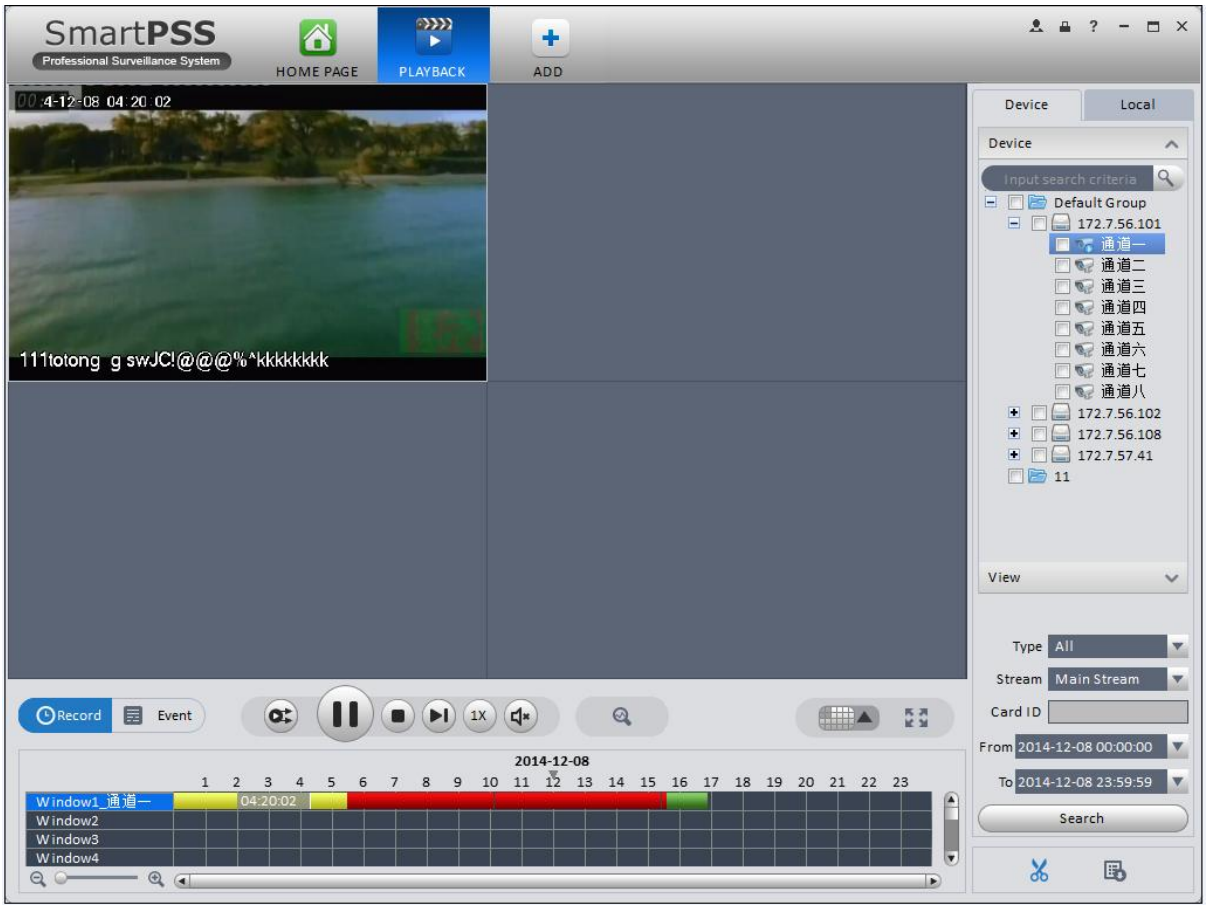

Figure 4-15

- Green color stands for the general record.
- Yellow color stands for the motion detect record.
- Red color stands for the alarm record.
- Blue color stands for card no. record.

5) Click to play record.

6) Click to intelligently search motion detection. System shows motion detection window.

7) Left click to select motion detection area with the box.

8) Click to search motion detection. The purple time bar represents found motion detection in Figure 4-9.

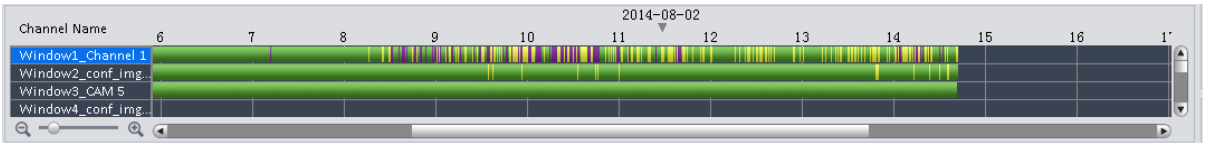

Figure 4-16

9) Click to play motion detection in video window.

: Re-select motion detection area.

: Exit intelligent search.

10) Click event below video window. System search record file by event.

11) Click , to playback record. See Figure 4-17.

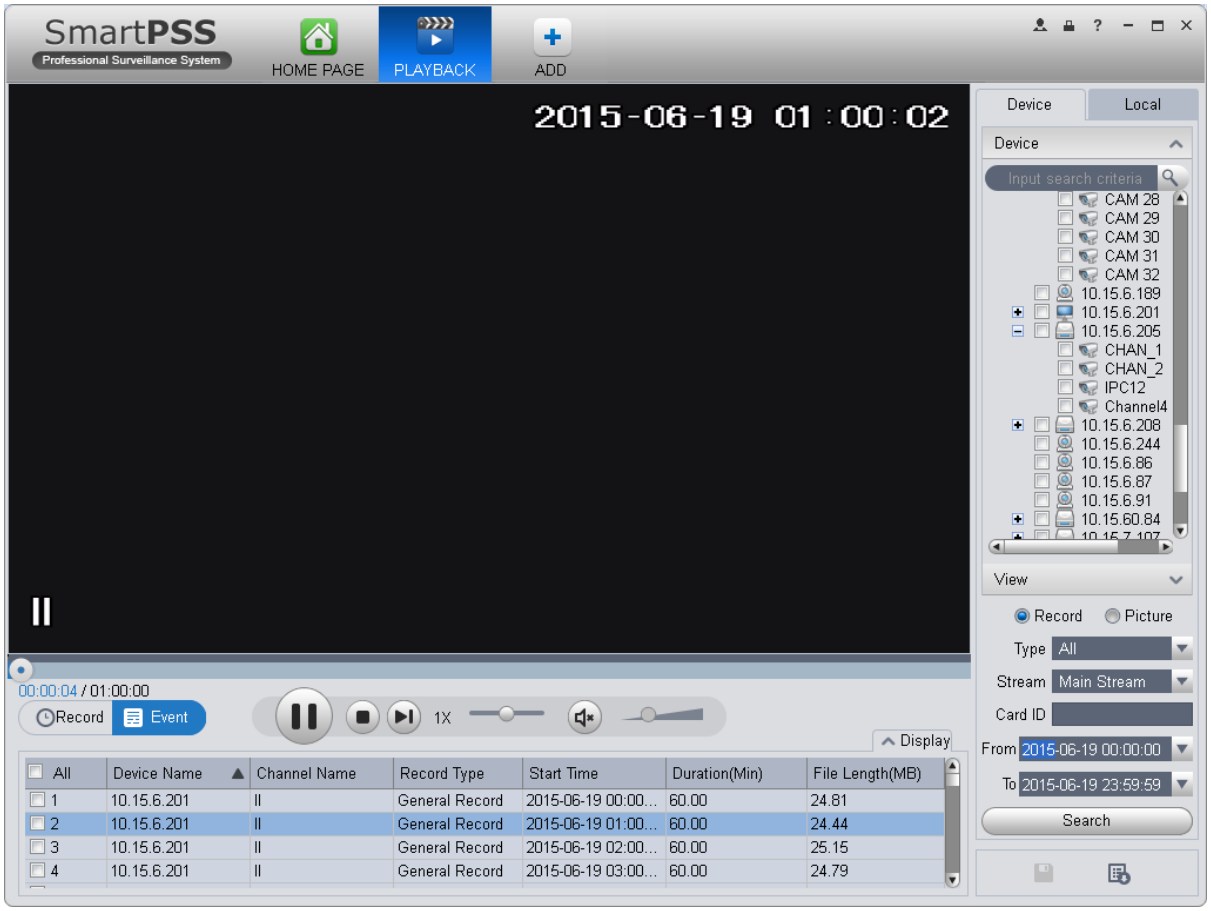

Figure 4-17

12) Select Picture on the right.

13) Configure search time, click Search. System shows snapshot, see Figure 4-18.

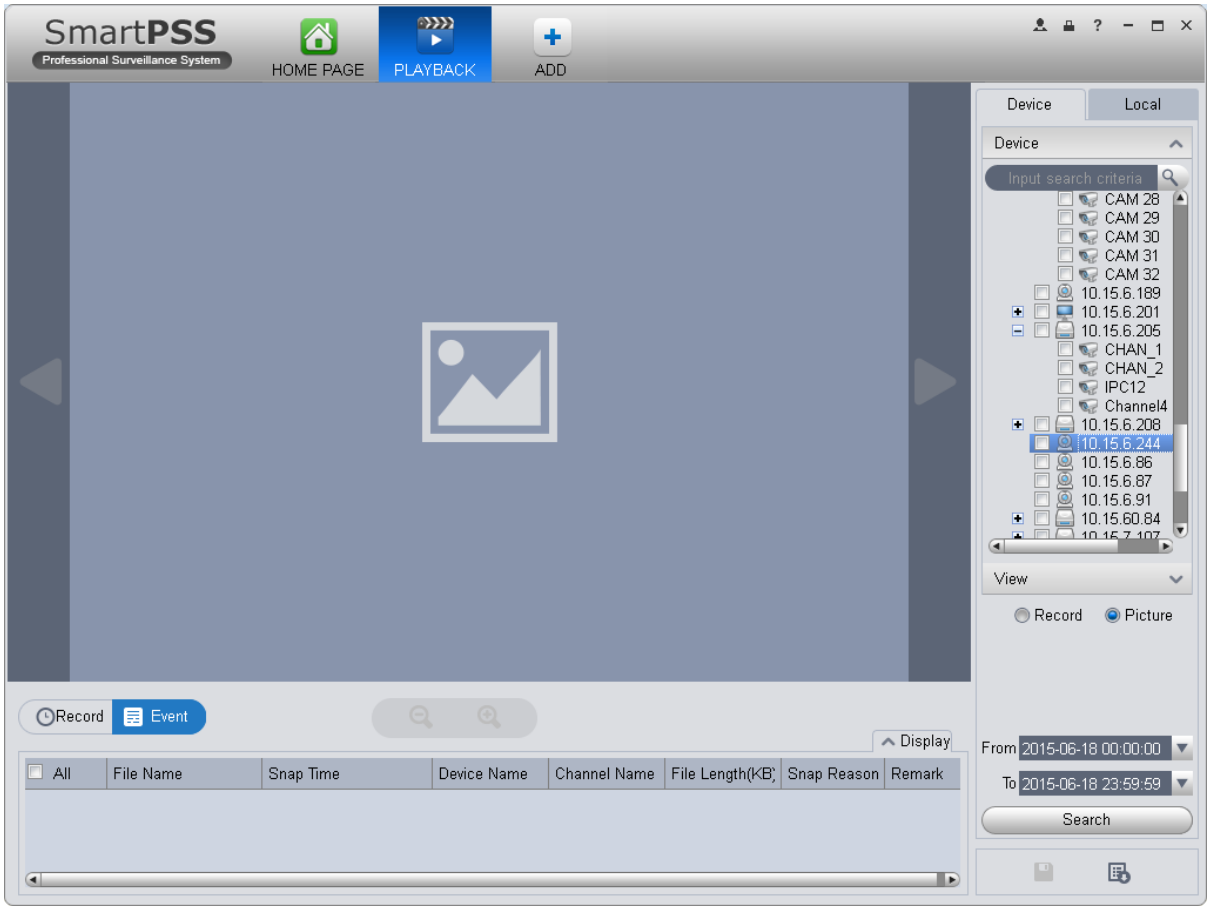

Figure 4-18

You can click to view snapshot.

14) (optional) You also can playback record under View.

a) In Liveview interface, click at bottom.

System pops up Figure 4-19.

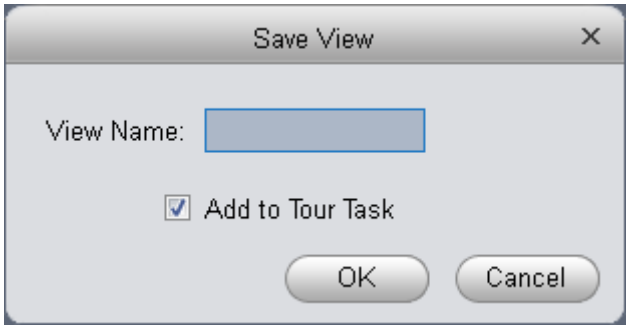

Figure 4-19

b) Input video name, click OK.

c) On the right, click View tab, right click newly added view, select Playback.

d) System auto jumps to playback window, and shows process bar at the bottom.

e) Click to play record, see Figure 4-20.

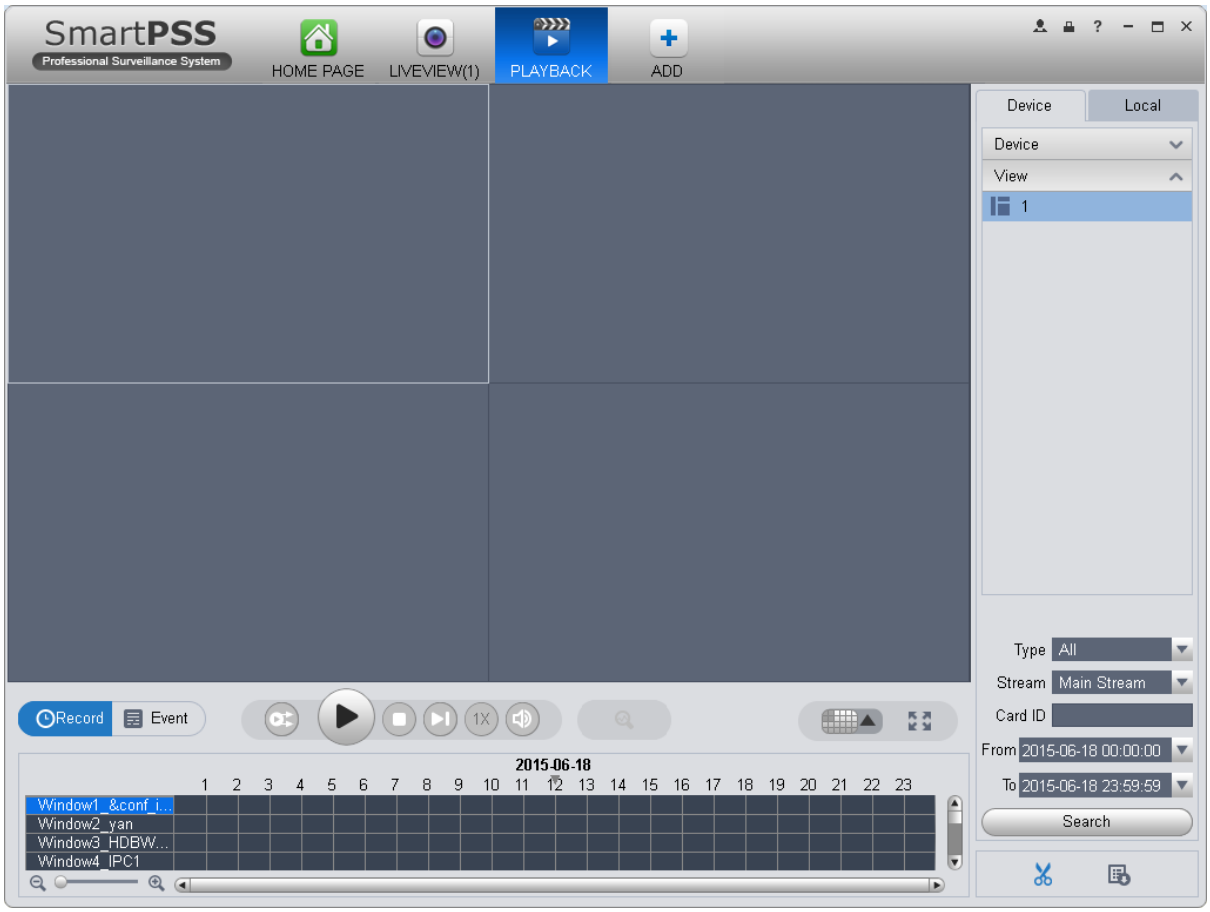

Figure 4-20

4.2.2 Playback Local Record

Please follow the steps listed below to search the record you want and then playback.

1) In Figure 4-14, click Local button on the right pane.
2) Check a channel (or some channels) on the device list on the top right pane.
3) Set search for record or picture, and select local record or picture time to search.
4) Click

to search record or snapshot of the device at Liveview (see Ch 4.1.2 or 4.1.3).
5) Now you click to playback window. And click to rewind. Click to view picture.

4.2.3 Export

There are three ways for you to select export records.

- In Device record interface, select periods on the time line and then click to export records.

- In Record event interface, select record type and then click to export records.
- In Local record interface, check the records first and then click to expoer records.

You can see the export interface is shown as in Figure 4-21. Select the corresponding export path and then click OK button to export.

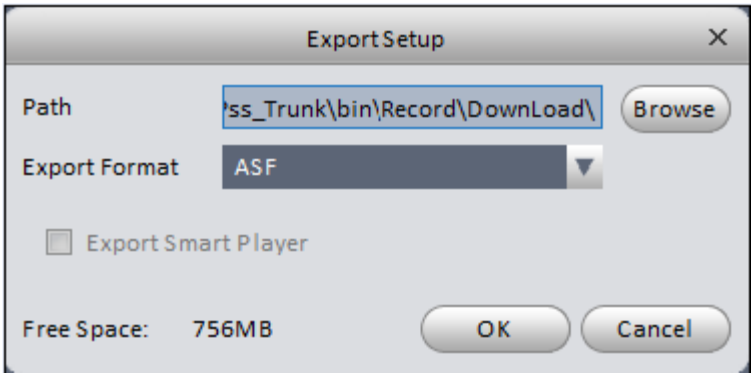

Figure 4-21

You can click to view exporting and exported conditoions.

4.3 Alarm Manager

If you have set an alarm scheme, you can see the corresponding alarm in the Alarm manager interface. You can refer to chapter 3.7.1 to set an alarm scheme first.

Click icon in the basic pane, you can go to Alarm manager interface. See Figure 4-22.

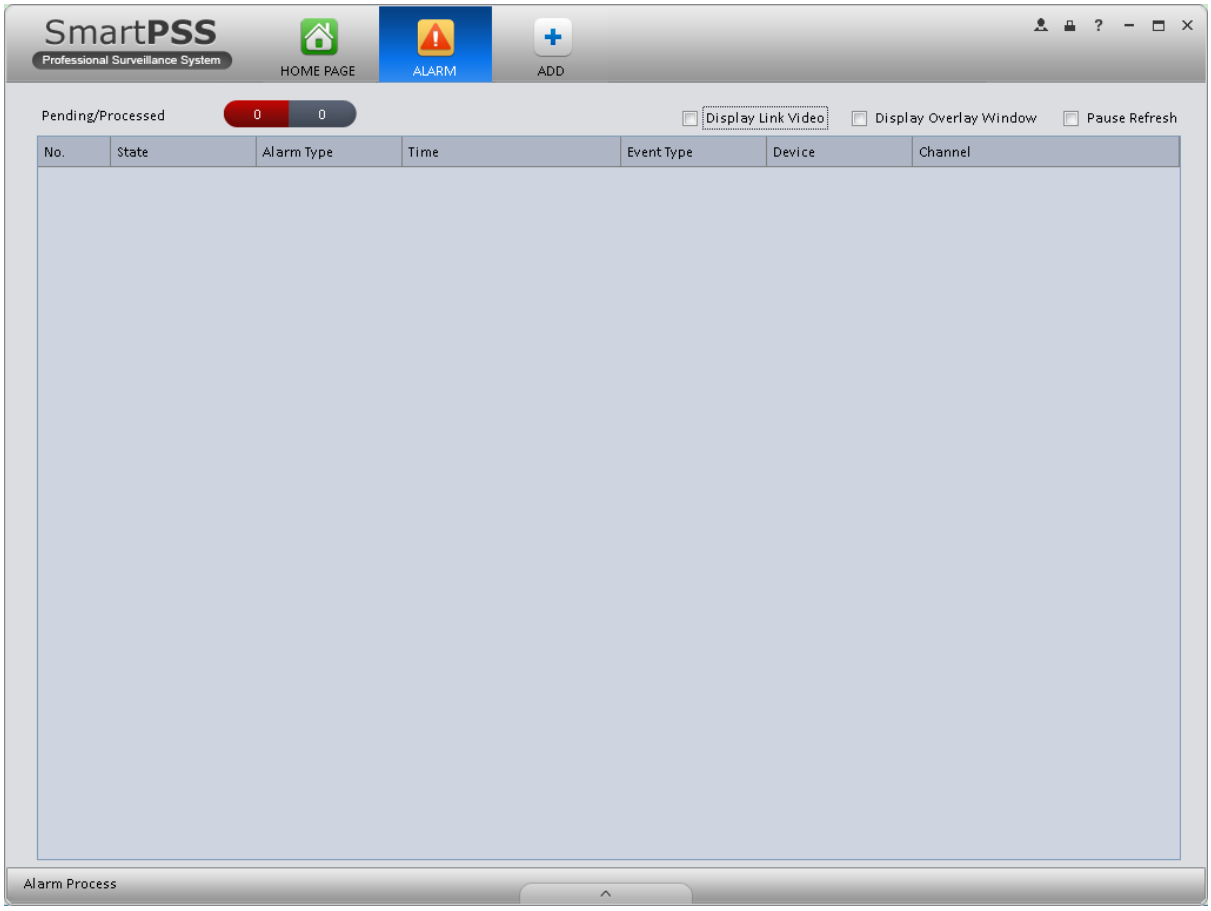

Figure 4-22

If you have set alarm activation video function in your alarm scheme setup (chapter 3.7), you can see system instantly shows video window. See Figure 4-23.

If you check the box at the bottom of the interface to pause refresh, the new alarm info will not be shown in alarm list instantly. Click Alarm Manager at the right bottom of the interface, system goes to the alarm manager interface for you to view the corresponding alarm record.

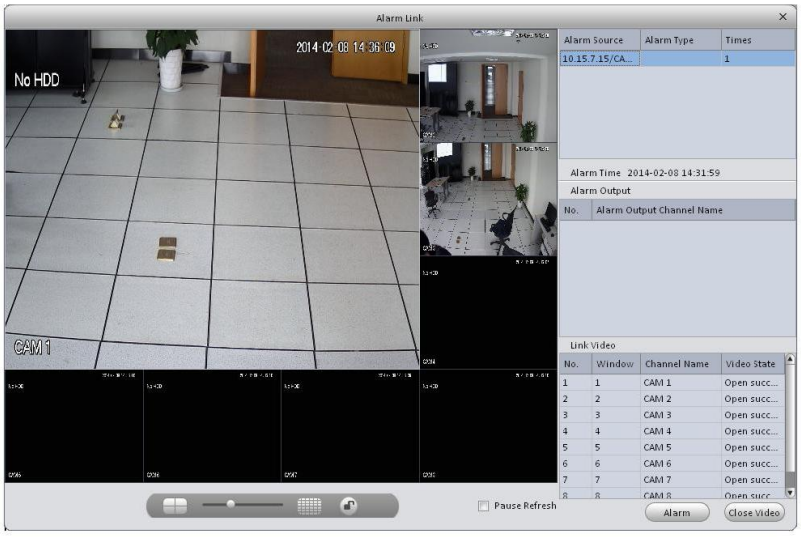

Figure 4-23

4.4 Log

Log interface is shown as in Figure 4-24.

1) In homepage, click in BASIC area.

2) Select Client log and select start time/end time, and select type from the dropdown list. Click Search button, you can see the log information.

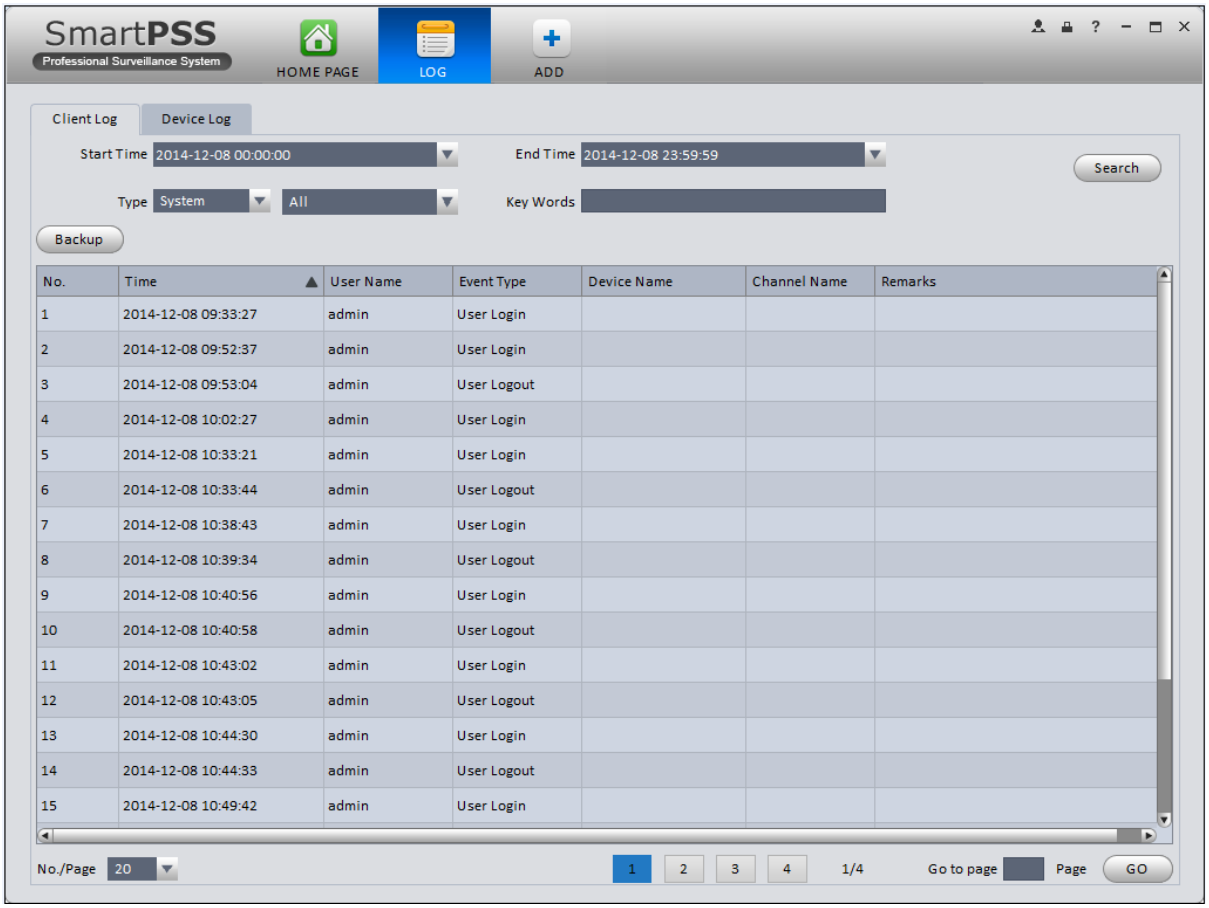
SmartPSS
Professional Surveillance System
HOME PAGE
LOG
ADD
Client Log
Device Log
Start Time 2014-12-08 00:00:00
End Time 2014-12-08 23:59:59
Search
Type System All
Key Words
Backup
No. Time User Name Event Type Device Name Channel Name Remarks
1 2014-12-08 09:33:27 admin User Login
2 2014-12-08 09:52:37 admin User Login
3 2014-12-08 09:53:04 admin User Logout
4 2014-12-08 10:02:27 admin User Login
5 2014-12-08 10:33:21 admin User Login
6 2014-12-08 10:33:44 admin User Logout
7 2014-12-08 10:38:43 admin User Login
8 2014-12-08 10:39:34 admin User Logout
9 2014-12-08 10:40:56 admin User Login
10 2014-12-08 10:40:58 admin User Logout
11 2014-12-08 10:43:02 admin User Login
12 2014-12-08 10:43:05 admin User Logout
13 2014-12-08 10:44:30 admin User Login
14 2014-12-08 10:44:33 admin User Logout
15 2014-12-08 10:49:42 admin User Login
No./Page 20
1 2 3 4 1/4 Go to page Page GO

Figure 4-24

3) Click Search. See Figure 4-25.

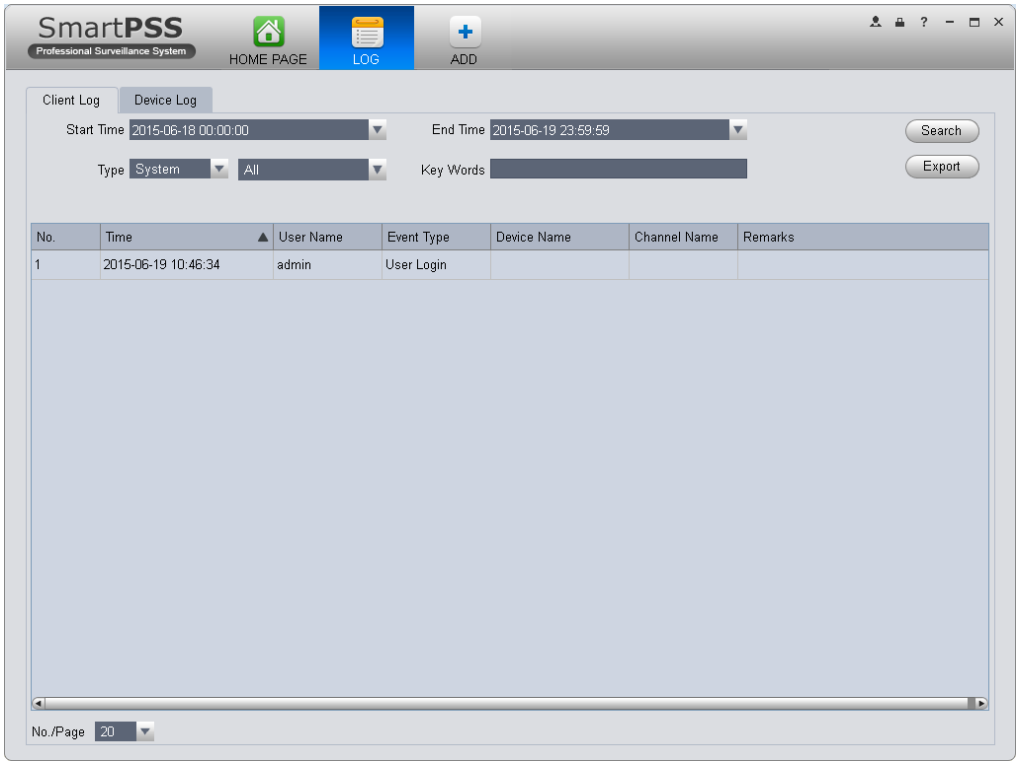

Figure 4-25

4) Click Device log tab.
5) Select start time/end time, type and device name from the dropdown list.
6) Click Search button. See Figure 4-26.

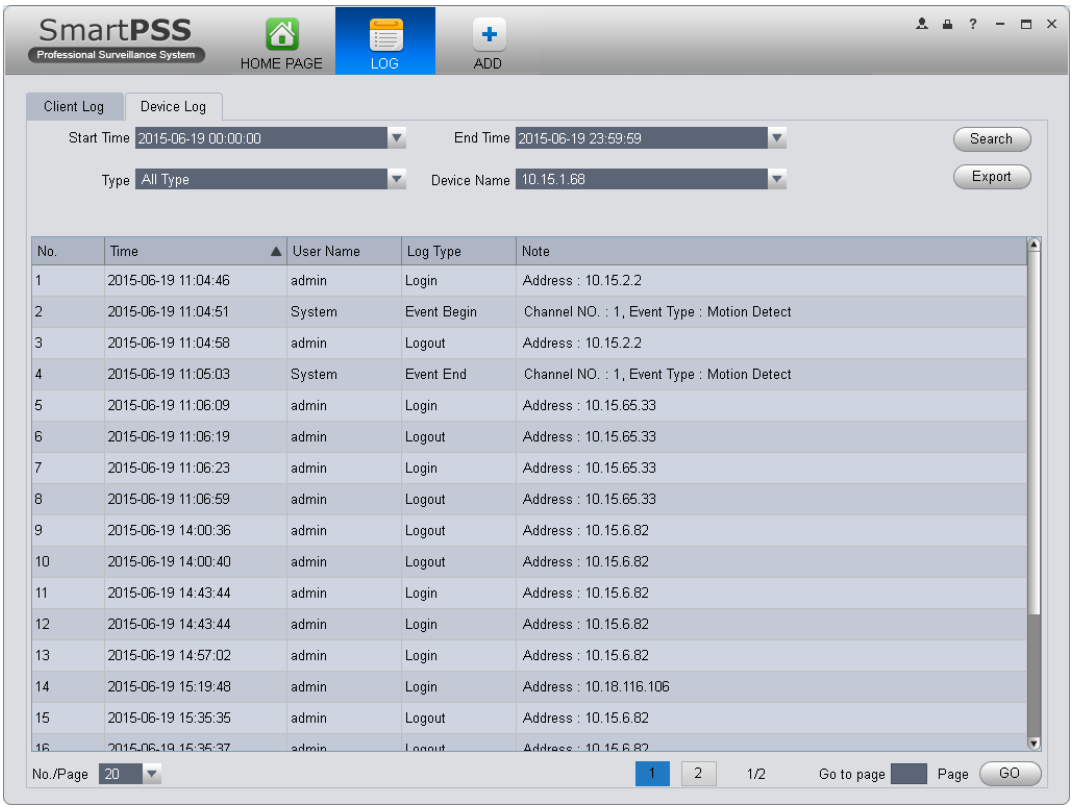
SmartPSS
Professional Surveillance System
HOME PAGE
LOG
ADD
Client Log
Device Log
Start Time 2015-06-19 00:00:00
End Time 2015-06-19 23:59:59
Search
Type All Type
Device Name 10.15.1.68
Export
No. Time User Name Log Type Note
1 2015-06-19 11:04:46 admin Login Address : 10.15.2.2
2 2015-06-19 11:04:51 System Event Begin Channel NO. : 1, Event Type : Motion Detect
3 2015-06-19 11:04:58 admin Logout Address : 10.15.2.2
4 2015-06-19 11:05:03 System Event End Channel NO. : 1, Event Type : Motion Detect
5 2015-06-19 11:06:09 admin Login Address : 10.15.65.33
6 2015-06-19 11:06:19 admin Logout Address : 10.15.65.33
7 2015-06-19 11:06:23 admin Login Address : 10.15.65.33
8 2015-06-19 11:06:59 admin Logout Address : 10.15.65.33
9 2015-06-19 14:00:36 admin Logout Address : 10.15.6.82
10 2015-06-19 14:00:40 admin Logout Address : 10.15.6.82
11 2015-06-19 14:43:44 admin Login Address : 10.15.6.82
12 2015-06-19 14:43:44 admin Login Address : 10.15.6.82
13 2015-06-19 14:57:02 admin Login Address : 10.15.6.82
14 2015-06-19 15:19:48 admin Login Address : 10.18.116.106
15 2015-06-19 15:35:35 admin Logout Address : 10.15.6.82
No./Page 20
1
2
1/2
Go to page
Page
GO

Figure 4-26

5. Extension

5.1 Video Wall

After you set video wall setup (chapter 3.8), you can output video to the video wall. You can follow the steps listed below to set.

1) Click icon on the main interface, you can go to the following interface. See Figure 5-1.

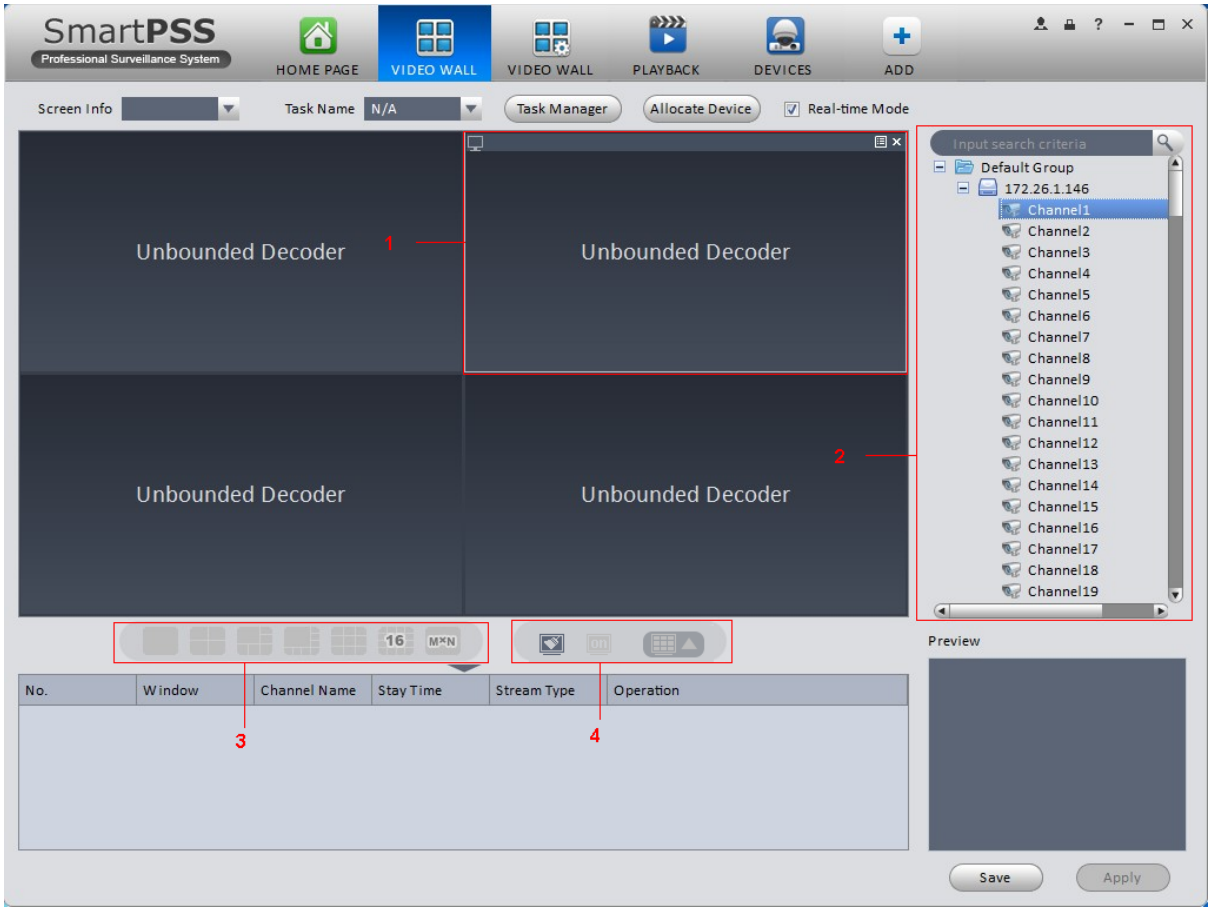

Figure 5-1

SN	Item	Function
1	Video window	Connect to NVD：Video window is fixed, cannot be dragged. Connect to M30 ： Video window can be moved, max is 16.
2	Video channel	-

SN	Item	Function
3	Video open window	Connect to NVD: Select one video window, click to open 1*1, 2*2, 3*3, 4*4 layouts of windows. Connect to M30：Click to open 1*1, 2*2, 3*3, 4*4 or M*N layouts of windows.
4	Clear screen, open/close window	：Clear all video channels or layouts on screen. ：Screen on/off setup，to open/close TV wall displsy. ：Clear screen and open window.

2) Select corresponding video wall from the screen information dropdown list. You can check to select real-time mode if necessary. Once you enable real-time mode, system automatically output the video to the video wall after you complete the setup. Otherwise, it does not output the video to the video wall.
3) Drag the channel on the right pane to the corresponding screen and then binding.
   You can view details of binding video in Internet Explorer.
   1. In IE, enterM30 or NVD device's IP address.
   2. Download web service pack.
   3. After download is complete, system pops up login interface.
   4. Enter username and password, click Login to view details of bound video source.
      Default username and password is admin/admin.

4) Click save as task button, you can see system pops up a dialogue box for you to input task name.
5) Please input task name and click Save button.
6) Click Output video.

Please note:

- You can select video wall task from the task name dropdown list and then click the Output video button to view the video.
- Click task manager, you can view current task status. Or you can select one task and click or to modify or delete current task.

5.2 E-map

Click icon on the main interface, you can go to the e-map interface. You can view the device status on the e-map. On the view map interface, you can zoom e-map or open video, but you can not edit it. On the Edit e-map interface, you can edit e-map, add camera and etc.

Note:

If there is no map, you need to click Add Map, and enter map name to add map.

5.2.1 Add E-map

If it is your first time to use e-map, you can see an interface shown as below. See Figure 5-2.

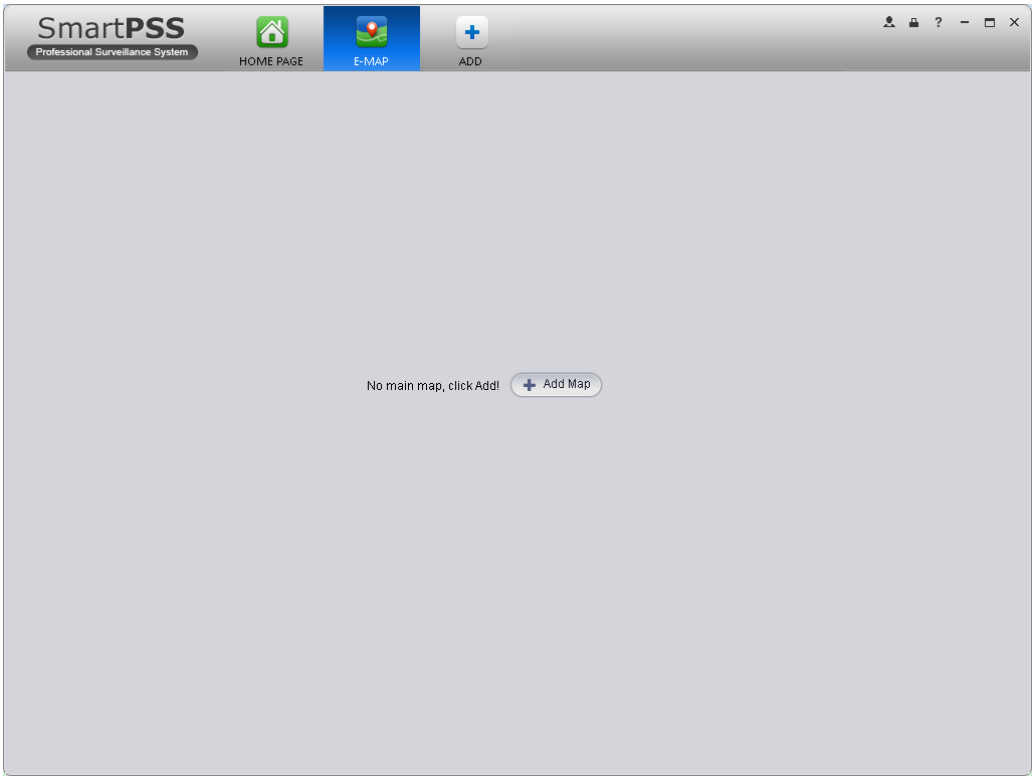

Figure 5-2

Click Add map button, the interface is shown as in Figure 5-3.

Please input e-map name and then select e-map picture. You can input some reference information if necessary.

Figure 5-3

After you added an e-map, the interface is shown as below. See Figure 5-4.

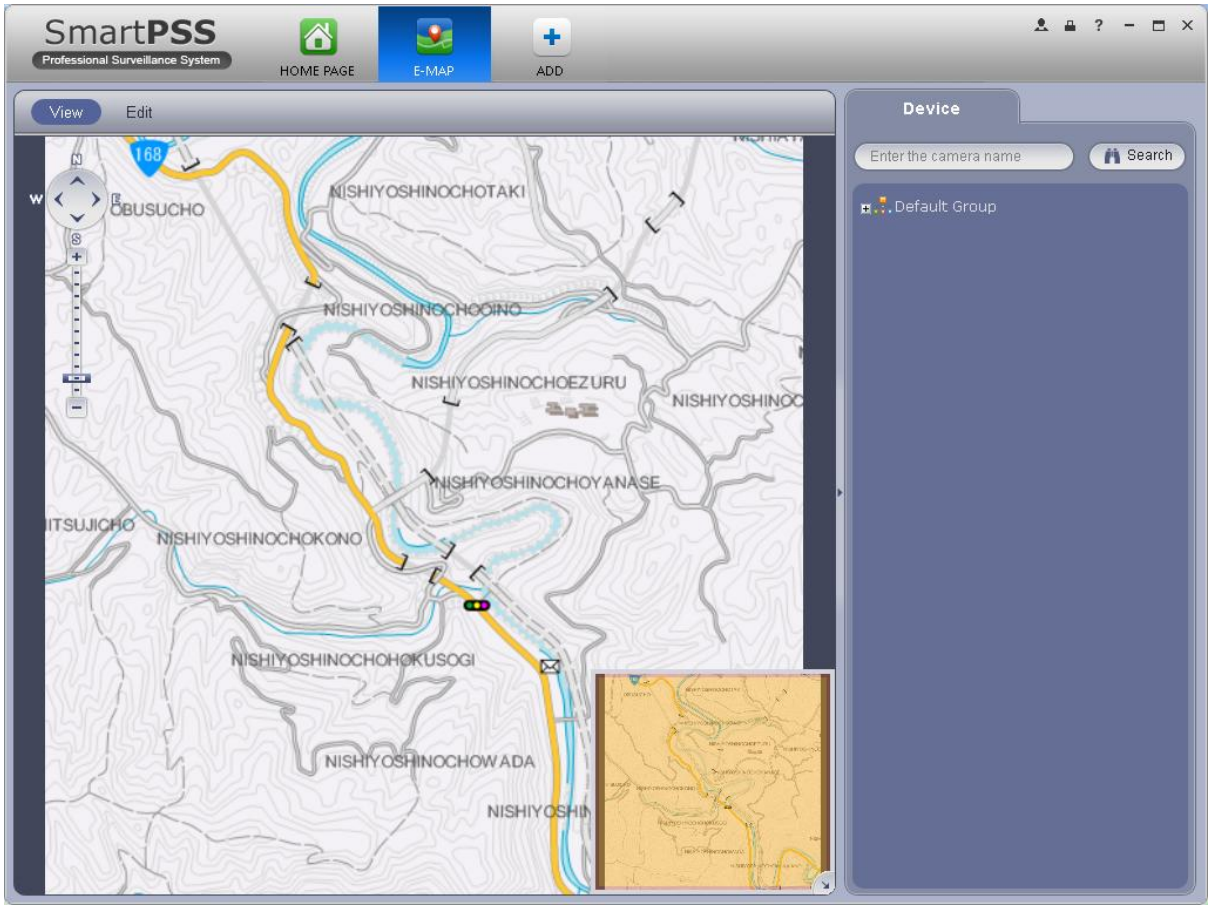

Figure 5-4

5.2.2 Edit E-map

Click Edit, you can go to the following interface. See Figure 5-5.Click Tools, you can edit e-map, delete e-map, delete device, add area, modify area, delete area and etc.
Drag a channel on the right pane to the e-map; you can add it to the e-map.

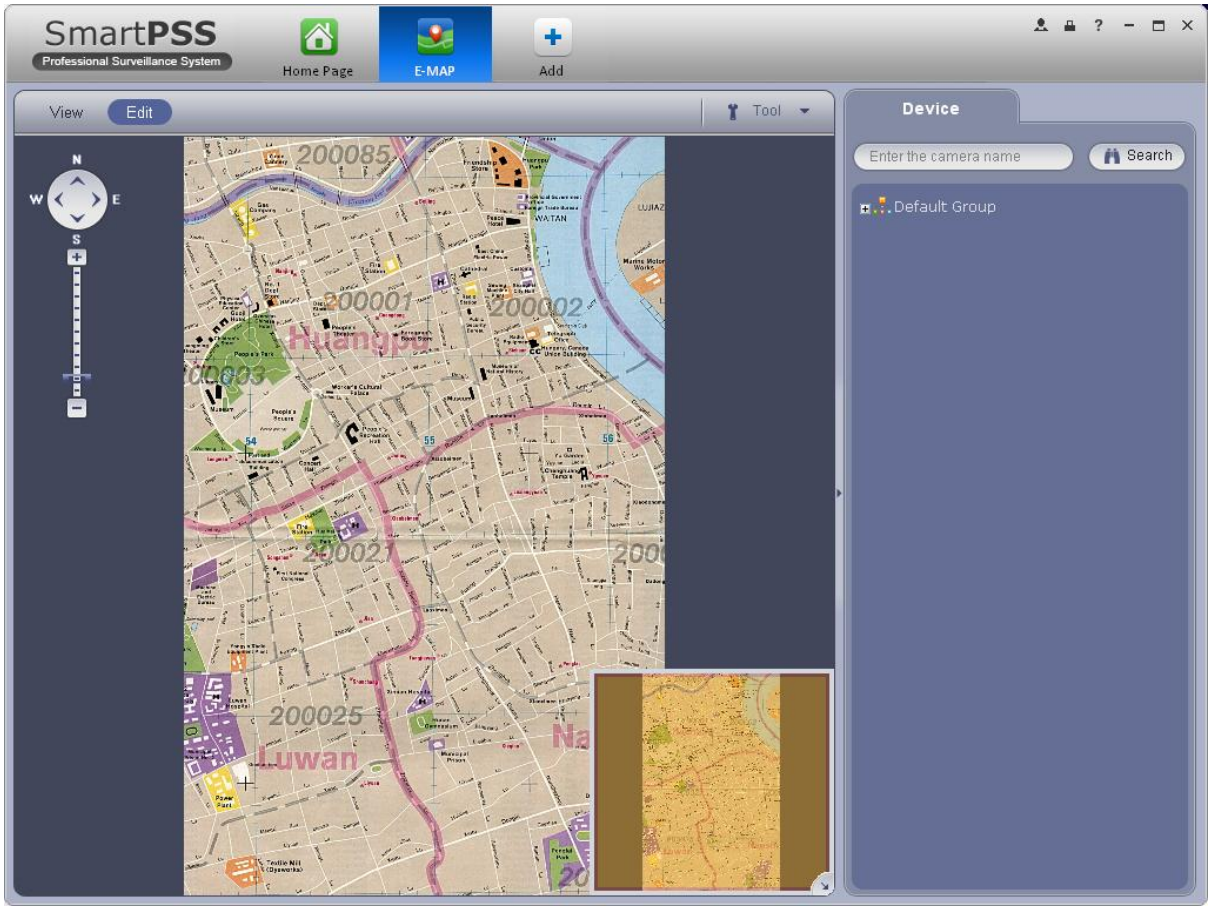

Figure 5-5

Click Tool button, you can see a function bar shown as below. See Figure 5-6.

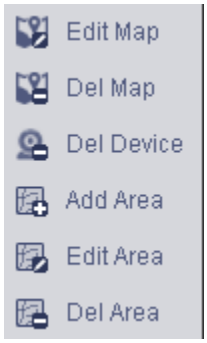

Figure 5-6

Please refer to the following sheet for detailed information.

Item	Function
Modify e-map	It is for you to change e-map name, picture, description
Delete e-map	Delete current e-map.
Delete device	Delete a device from the e-map.
Add area	Add hot zone on the e-map.

Item	Function
Modify area	Change hot zone map name, picture and description.
Delete area	Delete corresponding hot zone.

5.2.3 Liveview E-map

After you edited the e-map, you can click View button to liveview. Buttons at the left top of the interface can zoom in, zoom out or move e-map. Double click a camera on the e-map, you can view video. See Figure 5-7.

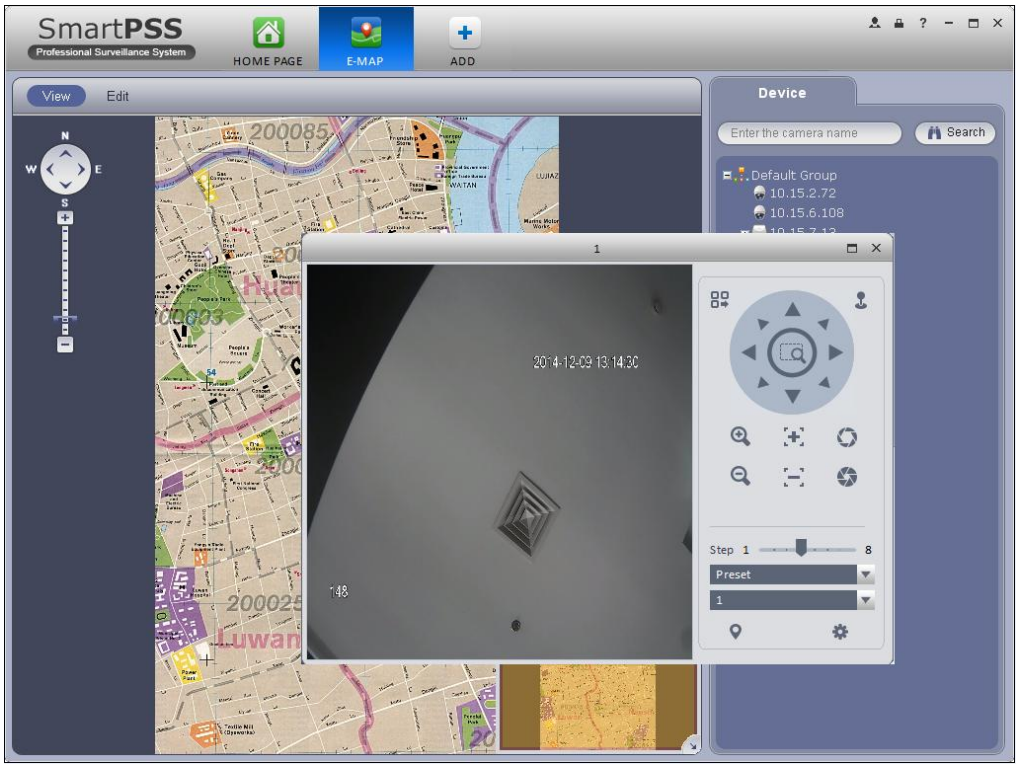

Figure 5-7

5.3 Device Display&Control

The device type supports NVR6000 series product only. Here is for you to set split mode and display channel.

Click icon , you can go to the following interface. Drag a channel on the right pane to the window to bind.

Click the window display mode setup button at the bottom of the interface; you can see the 128-channel of the NVR6000. In Figure 5-8, you can view the 1-split mode. You can click channel range to select corresponding channel.

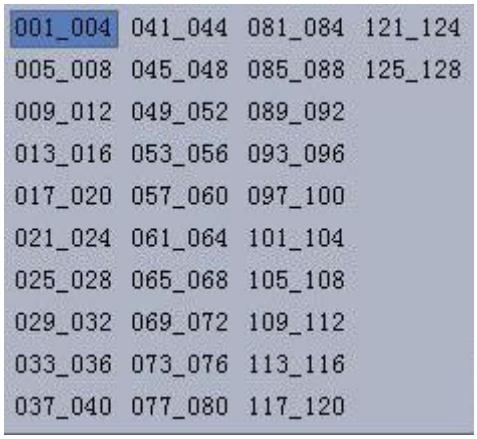

Figure 5-8

Move the mouse to a window, click M, you can switch between main stream/extra stream/auto. Click to cancel binding. Or you can right click mouse to cancel binding or change bit stream type.

Note:

- **This manual is for reference only. Slight difference may be found in the user interface.**
- **All the designs and software here are subject to change without prior written notice.**
- **All trademarks and registered trademarks are the properties of their respective owners.**
- **If there is any uncertainty or controversy, please refer to the final explanation of us.**
- **Please visit our website or contact your local service engineer for more information.**